TOSHIBA

FILE NO. 043-200018

SERVICE MANUAL

COLOUR TELEVISION

S0SS Chassis

61D9UXH, 61D9UXM

– SUMMARY –

61D9UXH, 61D9UXM are the same as 50D9UXE except for the parts tabled on back of this sheet.
Use this service manual together with the original service manual 50D9UXE, 50D9UXH, 50D9UXA (File No. 040-200009).

PRINTED IN JAPAN, Nov., 2000 Ⓣ

REPLACEMENT PARTS LIST DIFFERENCES

Location No.	Part No.	Description
A101	23411428	Wood Cabinet
A109	23564757	Label (61D9UXH)
A109	23564831	Label (61D9UXM)
A151	23064345	Case
A152	23946109	Packing, Bottom
A202	23540018	Front Panel
A203	23527112	Speaker Grille R
A204	23527113	Speaker Grille L
A701	23064409	Case (61D9UXH)
A701	23064464	Case (61D9UXM)
A702	23946108	Packing, Top
C601	24591822	PF, 8200pF
C602	24591822	PF, 8200pF
C665	24797229	EL, 2.2μF, ±20%, 50V
C666	24797229	EL, 2.2μF, ±20%, 50V
CV53	24794100	EL, 10μF, ±20%, 16V (61D9UXM)
CV54	24794100	EL, 10μF, ±20%, 16V (61D9UXM)
CV56	24794470	EL, 47μF, ±20%, 16V (61D9UXM)
CV57	24794100	EL, 10μF, ±20%, 16V (61D9UXM)
K101	23430860	T-100H
K102	23430860	T-100H
K103	23430860	T-100H
K501	23430796	Lenti Sheet, SCREEN61KKHL
K502	23837539	Fresnel Sheet, SCREEN61KH-F
K511	23430872	SCREEN61KKM
K601	23430528	Mirror, MIRROR61H
K902	23306245	Remote Hand Unit, CT-9932 (61D9UXH)
P801	23372010	Power Cord (61D9UXM)
QV52	23114528	Transistor, 2SC1740S, Q (61D9UXM)
QV53	23114530	Transistor, 2SA933S-Q (61D9UXM)
QV55	23114530	Transistor, 2SA933S-Q (61D9UXM)
QV57	23114528	Transistor, 2SC1740S, Q (61D9UXM)

Location No.	Part No.	Description
R612	24366822	CF, 8200 ohm
R613	24366822	CF, 8200 ohm
RA27	24366102	CF, 1k ohm (61D9UXH)
RV19	24366333	CF, 33k ohm (61D9UXM)
RV20	24366223	CF, 22k ohm (61D9UXM)
RV27	24366101	CF, 100 ohm (61D9UXM)
RV28	24366102	CF, 1k ohm (61D9UXM)
RV36	24366333	CF, 33k ohm (61D9UXM)
RV37	24366223	CF, 22k ohm (61D9UXM)
RV50	24366272	CF, 2700 ohm (61D9UXM)
RV51	24366101	CF, 100 ohm (61D9UXM)
RV53	24366272	CF, 2700 ohm (61D9UXM)
RV54	24366272	CF, 2700 ohm (61D9UXM)
RV55	24366223	CF, 22k ohm (61D9UXM)
RV56	24366473	CF, 47k ohm (61D9UXM)
RV57	24366392	CF, 3900 ohm (61D9UXM)
RV59	24366102	CF, 1k ohm (61D9UXM)
* M031Z		CRT-D/R Board, PB9753-1
* M032Z		CRT-D/G Board, PB9753-2
* M033Z		CRT-D/B Board, PB9753-3
* M034Z		SVM-G Board, PB9753-4
* M035Z		SVM-R Board, PB9753-5
* M036Z		SVM-B Board, PB9753-6
* U401		DEF Board, PB9733
* U701		CONV. OUT Board, PB9797
* U901		Signal Board, PB9743 (61D9UXH)
* U901		Signal Board, PB9906 (61D9UXM)
* UV01		BACK AV Board, PB9904 (61D9UXM)
V901R	23005849	Protector Coupling 61R
V902G	23005850	Protector Coupling 61G
V903B	23005851	Protector Coupling 61B
Y101A	23565063	Owner's Manual, Arabic, 61D9UXM
Y101C	23565062	Owner's Manual, Hong Kong, 61D9UXH
Y108	23122780	AC Adaptor, 2P (61D9DXM)
ZC01	23148759	Module, CM61DP32H
ZY01	23148350	Module, MKMM31 (61D9UXM)

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN

TOSHIBA

FILE NO. 040-200009

SERVICE MANUAL

COLOUR TELEVISION

S0SS Chassis

50D9UXE, 50D9UXH, 50D9UXA

PRINTED IN JAPAN Sep., 2000 (T)

TABLE OF CONTENTS

CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS 3
CRT ASSEMBLY REPLACEMENT AND MOUNTING 4
PICTURE TUBE COMPONENTS ADJUSTMENT 6
SERVICE POSITION 9
SERVICE MODE 10
DESIGN MODE 13
ELECTRICAL ADJUSTMENT 14
CONVERGENCE ADJUSTMENT 17
SCREEN AND MIRROR ALIGNMENTS 22
CIRCUIT CHECKS 23

CHAPTER 2 SPECIFIC INFORMATIONS

SETTING & ADJUSTING DATA 24
LOCATION OF CONTROLS 25
PROGRAMMING CHANNEL MEMORY 27
CIRCUIT BLOCK DIAGRAM 29
MECHANICAL DISASSEMBLY 31
CHASSIS AND CABINET REPLACEMENT PARTS LIST 35
PC BOARDS BOTTOM VIEW 53
TERMINAL VIEW OF TRANSISTORS 65
SPECIFICATIONS 69
APPENDIX:
CIRCUIT DIAGRAM

CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" INSTRUCTIONS BELOW.

X-RAY RADIATION PRECAUTION

1. Excessive high voltage can produce potentially hazardous X-RAY RADIATION. To avoid such hazards, the high voltage must not be above the specified limit. The nominal value of the high voltage of this receiver is (A) kV at zero beam current (minimum brightness) under a (C) V AC power source. The high voltage must not, under any circumstances, exceed (B) kV.

   Refer to table-1 for high voltage (A), (B) & AC voltage (C). (See SETTING & ADJUSTING DATA on page 24)

   Each time a receiver requires servicing, the high voltage should be checked following the HIGH VOLTAGE CHECK procedure in this manual. It is recommended that the reading of the high voltage be recorded as a part of the service record. It is important to use an accurate and reliable high voltage meter.
2. The only source of X-RAY RADIATION in this TV receiver is the picture tube. For continued X-RAY RADIATION protection, the replacement tube must be exactly the same type tube as specified in the parts list.
3. Some part in this receiver have special safety-related characteristics for X-RAY RADIATION protection. For continued safety, parts replacement should be undertaken only after referring to the PRODUCT SAFETY NOTICE below.

SAFETY PRECAUTION

WARNING : Service should not be attempted by anyone unfamiliar with the necessary precautions on this receiver. The following are the necessary precautions to be observed before servicing this chassis.

1. An isolation transformer should be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
2. Always discharge the picture tube anode to the CRT conductive coating before handling the picture tube. The picture tube is highly evacuated and if broken, glass fragments will be violently expelled. Use shatter proof goggles and keep picture tube away from the unprotected body while handling.
3. When replacing a chassis in the cabinet, always be certain that all the protective devices are put back in place, such as; nonmetallic control knobs, insulating covers, shields, isolation resistor-capacitor network etc.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the international hazard symbols on the schematic diagram and the parts list.
Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire, X-ray radiation or other hazards.

CRT ASSEMBLY REPLACEMENT AND MOUNTING

CAUTION : DO NOT LOOSEN THE HEX HEAD BOLTS WITH SPRINGS (12 PCS), BECAUSE THOSE ARE FOR SEALING OF CRT COOLANT.

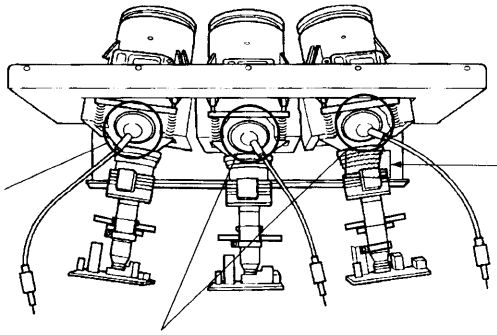

Attention Serviceman

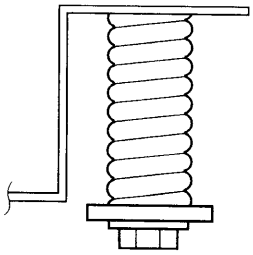

The Hex Head Bolts with Springs. (see sketch) used on CRT assembly, are "NOT" Adjustment Screws DO NOT LOOSEN-FLUID LEAKAGE WILL OCCUR.

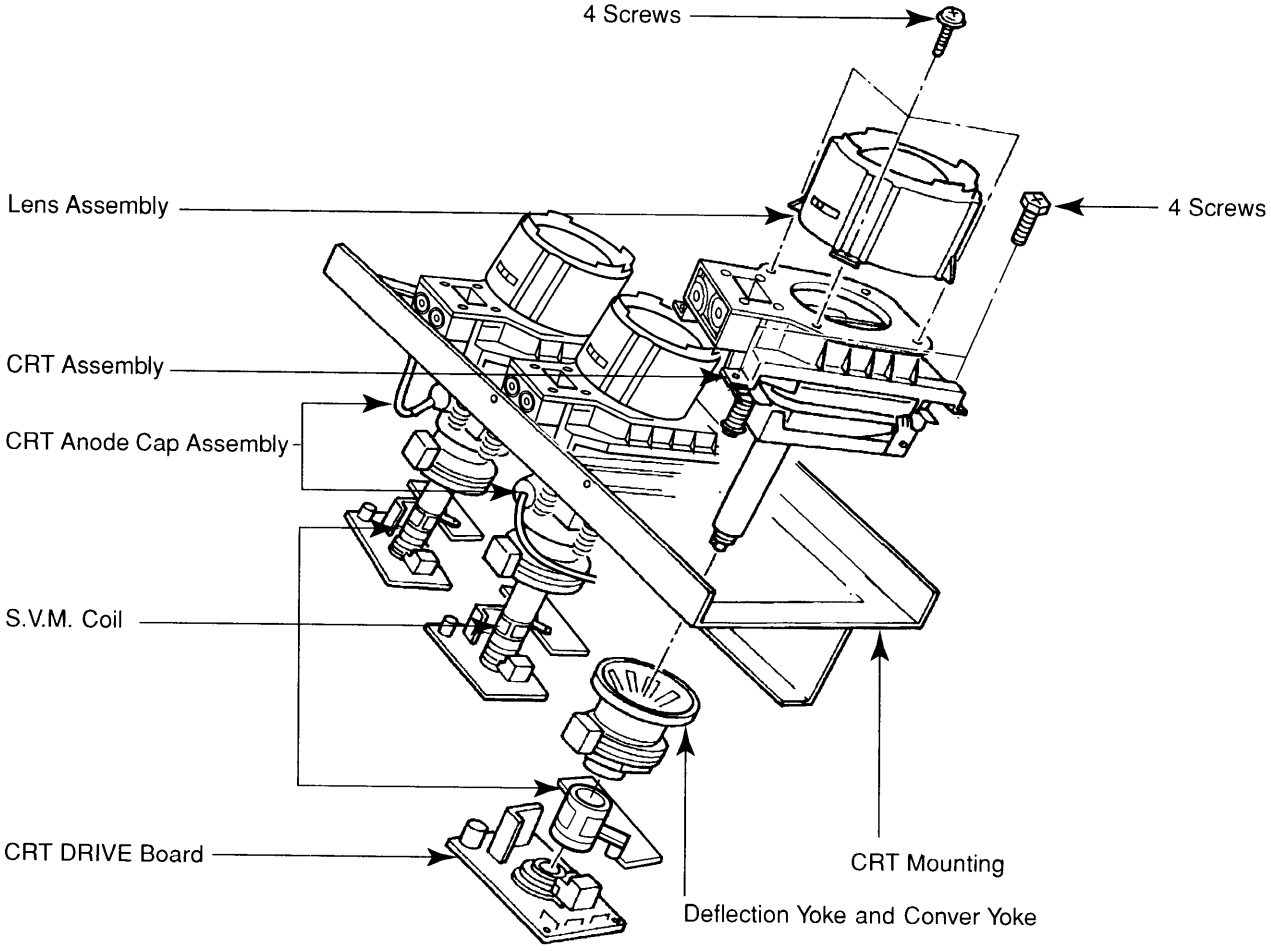

Lens and Neck Components View

TO REMOVE CRT (Same procedure for R, G, B)

1. Remove CRT DRIVE Board, S. V. M. COIL and DEF. YOKE from CRT.
2. Remove Lens Assembly.
3. Detach CRT Anode Cap from CRT.
4. Remove CRT Assembly from CRT Mounting.

CRT REPLACEMENT (Same procedure for R, G, B)
Reverse the removal procedures except the followings.

1. Anode Cable should be replaced with new one. See "SERVICING PRECAUTIONS" shown below.
2. Install silicon (T461B) to the CRT, replace the Anode cable and put enough silicon again on around the Anode Cap as illustrated.

CAUTION: Align the Anode cable as illustrated on page 4.

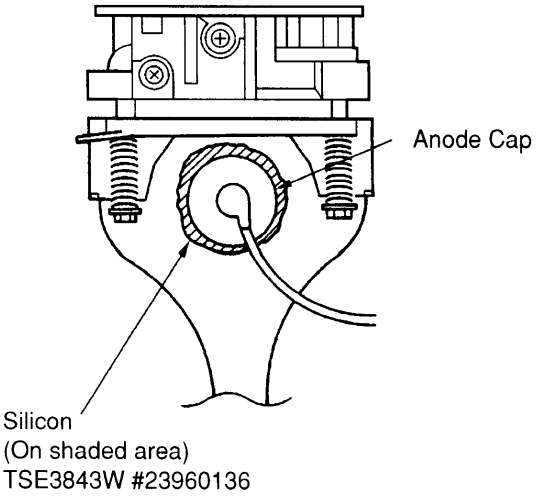

ADJUSTING PROCEDURE IN REPLACING CRT

1. R.G.B. CUTOFF (SCREEN VR) ADJUSTMENT (page 6.)
2. R.G.B. FOCUS ADJUSTMENT (page 6.)
3. PICTURE TILT ADJUSTMENT (page 7.)
4. USER CONVERGENCE CENTER CHECK (Refer to owner's manual.)
5. CENTERING ADJUSTMENT (page 7.)
6. CONVERGENCE ADJUSTMENT (page 17.)
7. WHITE BALANCE ADJUSTMENT (page 14.)

Adjustments are complete.

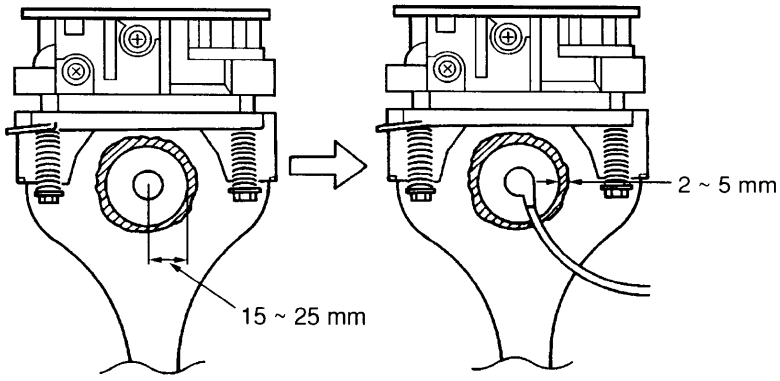

SERVICING PRECAUTIONS

■ Do not use a magnetized screw driver for screws of Deflection Yoke and Velocity Modulation Coil to avoid magnetization of electron gun. Magnetization of electron gun will degrade basic function and result in unbalance of right and left shift of user static convergence, and result in no variable quantity.

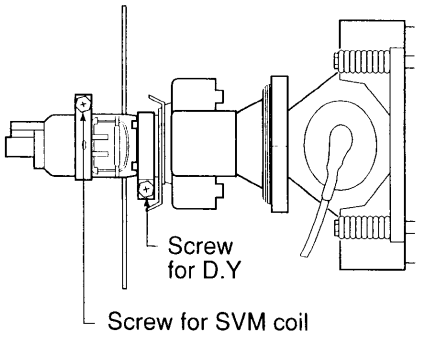

■ When replacing the anode cap assembly (CRT) or anode lead assembly (F.B.T.), remove the anode lead holder from old one and attach the holder again to new anode lead.

■ Check the point of anode lead in a straight line, if it is winding, please revise it.

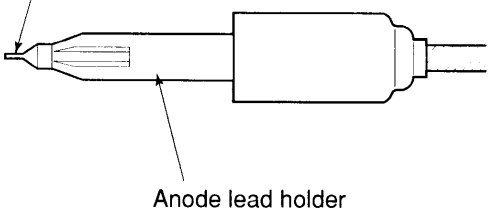

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

PICTURE TUBE COMPONENTS ADJUSTMENT

ADJUSTING PROCEDURE IN REPLACING CRT

Cutoff → Lens focus → Electrical focus → Yoke horizontal → User convergence center check → Centering (PAL) → Convergence adjustment (PAL/NTSC) → White balance → Sub bright adjustment → End

DESCRIPTION OF NECK COMPONENTS

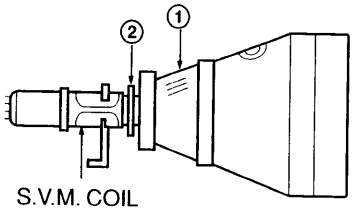

① Deflection yoke and convergence yoke.
The position on the neck is required most front (CRT funnel side) and the screw is fastened after rotating yoke adjusting picture tilt.

② Centering magnet
After adjusting picture tilt, picture position is finally fixed by this magnet.
In order to get maximum margin of user convergence control for center of screen, this magnet have to be used for center convergence adjustment.

PREPARATION
Operate the receiver for at least 5 minutes.

R, G, B CUTOFF (SCREEN VR) ADJUSTMENT

1. Adjust before replace the screen assembly.
2. Set user control to reset position.
   (CONTRAST → Max
   BRIGHTNESS, COLOR, TINT → Center.)
3. Call up the adjustment mode display, then select the item RCUT.
4. Adjust the data of items **RCUT**, **GCUT**, and **BCUT** to "40H".
5. Press the -/-- ("Info") button on Remote. (Y-MUTE : ON)
6. Gradually rotate R, G and B screen volume of FOCUS PAC clockwise or counterclockwise until the raster appears slightly on the CRT through the each lens, and leave them.
   (Lookin to the lens in order to check the raster.)
7. Press the -/-- ("Info") button on Remote. (Return to Normal) Picture)

RGB FOCUS ADJUSTMENT

1. Call-up the adjustment mode (see page 10)
2. Press ⊖ button on the remote controller in order to display the internally-generated black cross-hatch (See TEST SIGNAL SELECTION on page 11.)

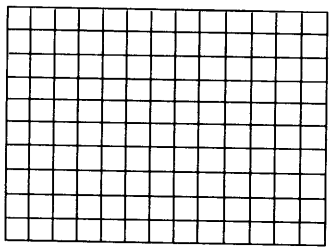

3. Expose only RED by covering the GREEN and BLUE lenses with caps.
4. Loosen the RED lens fixing screws (refer to Fig. a), and adjust the RED lens focus to obtain the sharpest point while observing the middle and peripheral sections of the screen.

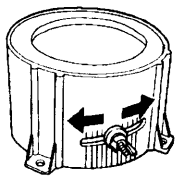

Fig. a

5. Use the focus VR of "R" of the focus pack in order to adjust the electric focus in the middle and peripheral sections of the screen to its sharpest level.
6. Check the RED focus of the whole screen and if necessary repeat steps 4 and 5.
7. Fix the RED lens by tightening its fixing screws.
8. Expose only GREEN by covering the RED and BLUE lenses with caps.
9. Display the internally-generated black cross-hatch signal.
10. Adjust the GREEN lens focus on the left border of the screen to its sharpest level, then check the focus on the right border, and if it is at its sharpest level, fix it in that position by tightening the lens screws.

    (1) If the horizontal line toward the right border is red-flared, turn the lens screw slightly right in order to balance it with the left border. (After adjustment, the left border tends to be slightly green-flared, and the right border tends to be slightly red-flared.)
    (2) If the horizontal line toward the right border is green-flared, turn the lens screw slightly left in order to balance it with the left border. (After adjustment, the left border tends to be slightly red-flared, and the right border tends to be slightly green-flared.)

Note: The aim of the above-described adjustment procedure for the Green lens focus is to obtain the best lens focus after 2 - 3 hours of warming up taking into account the focus drift; it applies if the warming up time before the adjustment is less than 30 minutes. (The horizontal line in the screen middle section tends to be slightly red-flared.)

In case of warming up of more than 2 hours under a condition that the large anode current is running through the projection tube so that for example the all-white pattern appears, adjust to obtain the sharpest focus while observing the whole screen like in the RED case.

11. Use the focus VR of "G" of the focus pack in order to adjust the electric focus in the middle section of the screen to its sharpest level.

Note: Normally the most clearly visible point of the scanning line is the sharpest point of the Green focus, however as the characteristics vary depending on the projection tube, the sharpest focus points of the vertical and horizontal lines may not match each other, thus when you turn the focus VR, if the picture tends to be tremendously unstable (rolls horizontally or vertically), adjust the balance of the vertical and horizontal lines to its best position.

12. Check the GREEN focus of the whole screen and if necessary repeat steps 10 and 11.
13. Fix the GREEN lens by tightening up its fixing screws.
14. Expose only BLUE by covering the RED and GREEN lenses with caps.
15. Display the internally-generated black cross-hatch.
16. Loosen the BLUE lens fixing screws (refer to Fig. a), and adjust the BLUE lens focus while observing the middle and peripheral screen sections.
17. Use the focus VR of "B" of the focus pack in order to adjust the focus in the middle section of the screen to its sharpest level.
    (The point of the Blue focus becomes sharpest when the brightness level of BLUE is lowest, the cross-hatch is clearly visible.)

Note: Keep in mind that only the BLUE electric focus is adjusted with the black cross-hatch.

18. Check the BLUE focus of the whole screen and if necessary repeat steps 17 and 19.
19. Fix the BLUE lens by tightening its fixing screws.

TILT ADJUSTMENT

Rotate R, G, B deflection yoke so that picture becomes horizon, then fasten screw.

CENTERING ADJUSTMENT

1. Stretch a thread between two center of screen edge (top and bottom, left and right).

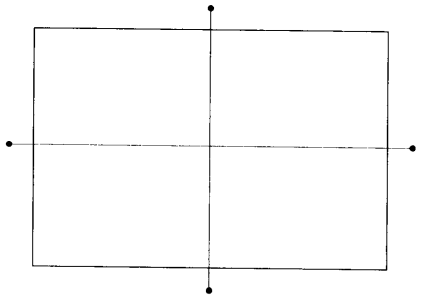

2. Select the adjustment mode. (See page 10.)
3. Press TV/VIDEO button on the Remote Control to display the black cross-hatch.

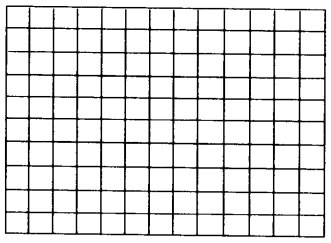

4. Adjust G centering magnet so that the cross-hatch pattern center comes to screen center.
5. Perform HEIGHT adjustment . (See page 14.)
6. Perform WIDTH adjustment. (See page 14.)
7. Check whole quality of green line.
8. Adjust R, B centering magnet so that the cross-hatch pattern center comes to screen center.

LOCATION OF SCREEN AND FOCUS VR'S

To remove the Speaker grille and Front panel.

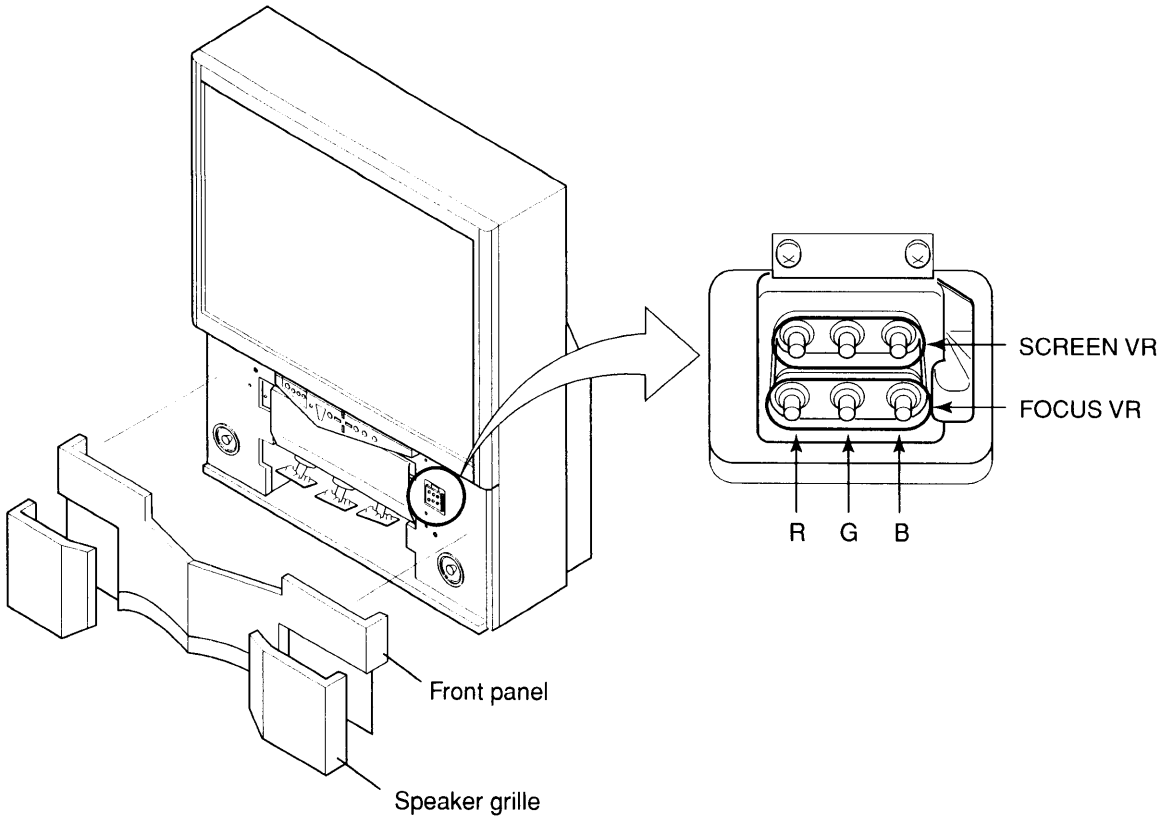

REPLACEMENT OF HIGH VOLTAGE CABLE

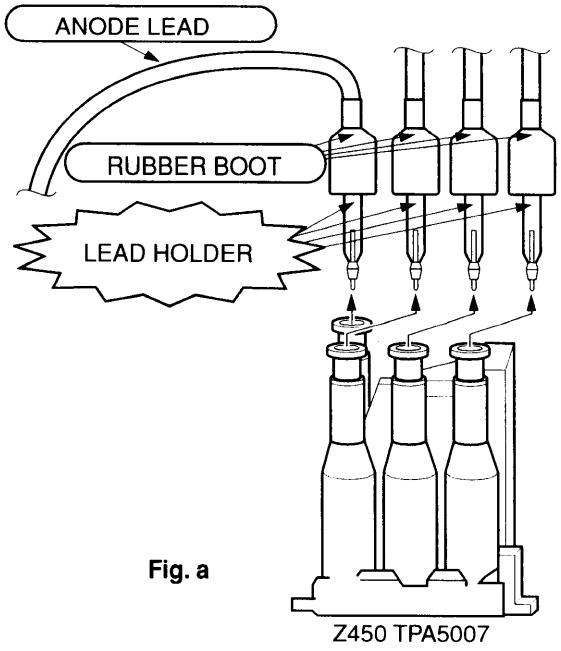

Fig. a

1. When replacing Anode Lead or Anode Cap with new one, remove Lead Holder from old lead as shown in figure below, and put it on new lead. Do not throw away Lead Holder.

NOTE : THE LEAD HOLDER IS ATTACHED TO TPA5007 (Z450), BUT IS NOT ATTACHED TO ANODE LEAD AND ANODE CAP. RUBBER BOOT IS ATTACHED TO ANODE LEAD AND ANODE CAP.

2. Detaching Lead Holder

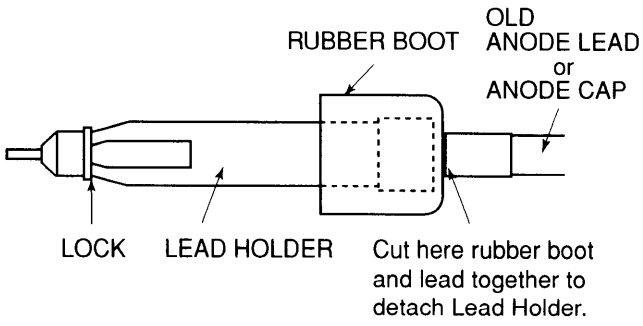

Fig. b

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

SERVICE POSITION

In order to assure the performance, processed wires shall be replaced after the repair work.
Work procedures are as follows:

1. Remove the back board.
2. Remove lead wires.
3. Draw out the chassis.
4. Insert the front edge of the chassis into the groove where the back board has been inserted and make the chassis stand.
5. Put one screw on cabinet by depth of their length for fixing back board, and then, temporarily use them to hold the CONV/ POWER chassis with wires tied to screws or insert the PVC band into the opening of main board frame to fix the main board chassis.

After repair work finished, replace it in the opposite procedure.

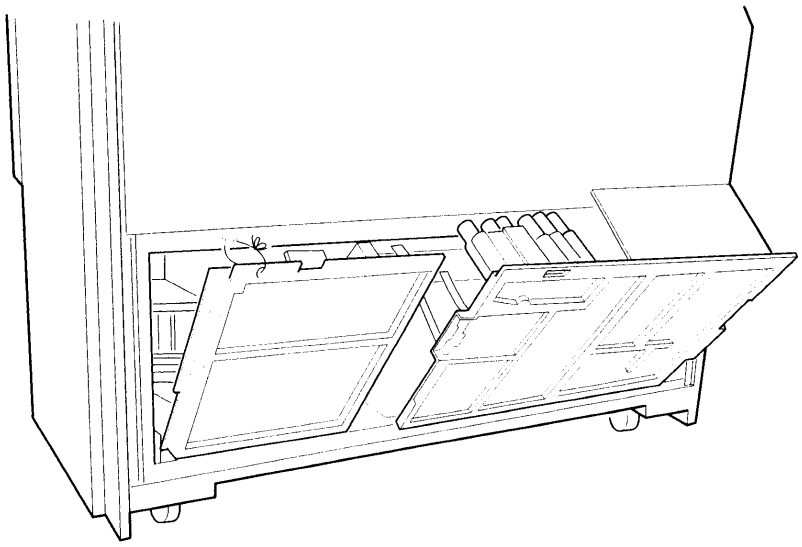

SERVICE MODE

1. ENTERING TO SERVICE MODE

1) Press 🔇 button once on Remote Control.

2) Press 🔇 button again to keep pressing.

3) While pressing the 🔇 button, press MENU button on TV set

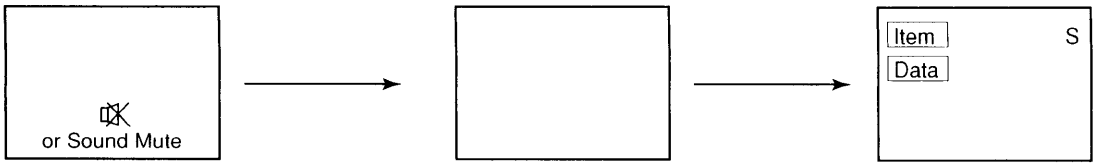

(Service mode display)

2. DISPLAYING THE ADJUSTMENT MENU

1) Press MENU button on TV.

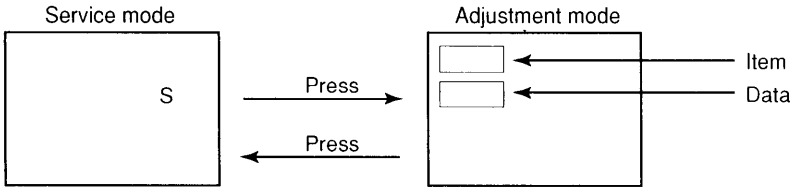

3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

Screen adjustment mode ON/OFF:	-/-- ("Info") button (on Remote)
Test signal selection :	⊖ button (on Remote)
Selection of the adjustment items :	Channel ▲/▼ (on TV or Remote)
Change of the data value :	Volume ◿ +/– (on TV or Remote)
Adjustment menu mode ON/OFF :	MENU button (on TV)
Initialization of the memory (QA02) :	CALL + Channel button on TV (▲)
Reset the count of operating protect circuit to "00":	CALL + Channel button on TV (▼)
"RCUT" selection :	1 button
"GCUT" selection :	2 button
"BCUT" selection :	3 button
"SCNT" selection :	4 button
"COLC" selection :	5 button– – – – – Color thickness correction
"TNTC" selection :	6 button
Convergence adj :	YELLOW button
Self diagnostic display ON/OFF :	9 button

note: Displayed differently as shown below, depending on the setting of the receiving color system.
COLP (PAL)
COLC (NTSC)
COLS (SECAM)

CAUTION : Never try to perform initialization unless you have changed the memory IC.

4. SELECTING THE ADJUSTING ITEMS

1) Every pressing of CHANNEL ▲ button in the service mode changes the adjustment items in the order of table-2. (▼ button for reverse order)

Refer to table-2 for preset data of adjustment mode. (See SETTING & ADJUSTING DATA on page 24)

5. ADJUSTING THE DATA

1) Pressing of VOLUME ◿ +/– button will change the value of data in the range from 00H to FFH. The variable range depends on the adjusting item.

6. EXIT FROM SERVICE MODE

1) Pressing POWER button to turn off the TV once.

■ INITIALIZATION OF MEMORY DATA OF QA02

After replacing QA02, the following initialization is required.

1. Enter the service mode, then select any register item.
2. Press and hold the CALL button on the Remote, then press the CHANNEL ▲ button on the TV. The initialization of QA02 has been complated.
3. Check the picture carefully. If necessary, adjust any adjustment item above. Perform "Auto search Memory" on the owner's manual.

CAUTION: Never attempt to initialize the data unless QA02 has been replaced.

7. TEST SIGNAL SELECTION

1) Every pressing of ⊕ button on the Remote Control changes the built-in test patterns on screen as described below in SERVICE MODE.

Signal off → PAL signals (5 patterns) → NTSC signals (5 patterns) → (back to Signal off)

Signals	Picture
• Red raster • Green raster • Blue raster • All White	
• Black cross-hatch	

* The signals marked with ▒ are not usable to display in the Test signal for some model.

8. SELF DIAGNOSTIC FUNCTION

1) Press "9" button on Remote Control during display of adjustment menu in the service mode.
   The diagnosis will begin to check if interface among IC's are executed properly.
2) During diagnosis, the following displays are shown.

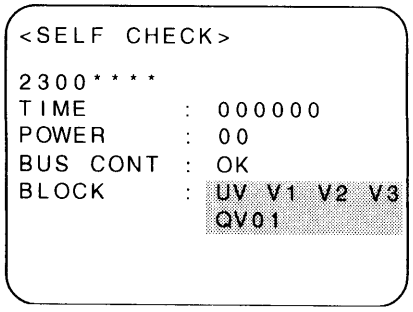

① Part number of microcomputer (QA01)
② Total hour of turn the Power on. (unit: hour)
③ Operation number of protecting circuit ----"00" is normal.
When indication is other than "00", overcurrent apts to flow, and circuit parts may possibly be damaged.
④ BUS CONT ----"OK" is normal.
When indication shows "Q ○○○ (Green: OK, Red: NG)", the device with the number may possibly be damaged.
⑤ BLOCK
UV : TV reception mode
V1 : VIDEO 1 input mode (←①1)
V2 : VIDEO 2 input mode (←②2)
V3 : VIDEO 3 input mode (←③3)

Indicated color of mode now selected : Green and Red
Indicated color of other modes : White

Green : Normal
Red : The microcomputer operates to provide judgement of no video signal. The red color is still indicated though the signal is input, failure may exist in input signal line including QV01.
QV01 : In case of indication green ---Normal
In case of indication red with input signal----
Failure may exist in output line including QV01.

* The items marked with ▒ are not usable to display in the SELF DIAGNOSTIC FUCTION for some model.

DESIGN MODE

1. ENTERING TO DESIGN MODE

1) Select the Service mode. 2) While pressing CALL button on Remote and press MENU button on TV. 3) Press MENU button on TV.

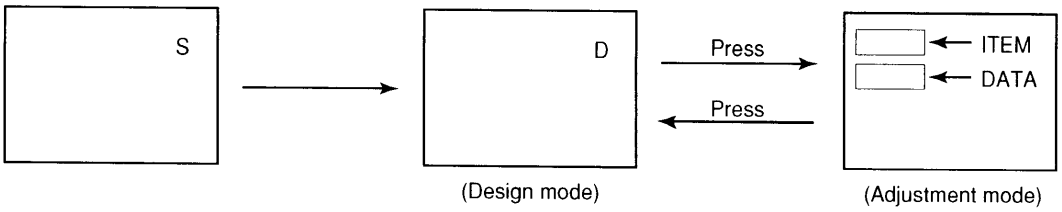

When QA02 is initialized, items "OPT0" and "OPT1" of DESIGN MODE are set to the data of the representative model of this chassis family.
Therefore, because ON-SCREEN specification remains in the state of the representative of model. This model is required to reset the data of items "OPT0" and "OPT1".

2. SELECTING THE ADJUSTING ITEMS

Every pressing of CHANNEL ▼ button in the design mode changes the adjustment items in the order of table-3. (▲ button for reverse order)

Refer to table-3 for data of design mode.
(See SETTING & ADJUSTING DATA on page 24)

3. ADJUSTING THE DATA

Pressing of VOLUME ▲ or ▼ button will change the value of data.

ELECTRICAL ADJUSTMENT

ITEM	ADJUSTMENT PROCEDURE
WIDTH (WID)	1. Call up the adjustment mode display, then select the item **WID**. 2. Press the VOLUME ▼ button to get the picture so the left or right edges of raster begins to lack. 3. Press the VOLUME ▲ button to advance the data by 15 steps. Note : Check the horizontal picture position is correct.
VERTICAL LINEARITY (VLIN)	1. Call up the adjustment mode display, then select the item **VLIN**. 2. Press the TV/VIDEO button on Remote until the cross-hatch pattern appears on the screen. 3. Press the VOLUME ▲ or ▼ button to obtain the picture of the best linearity 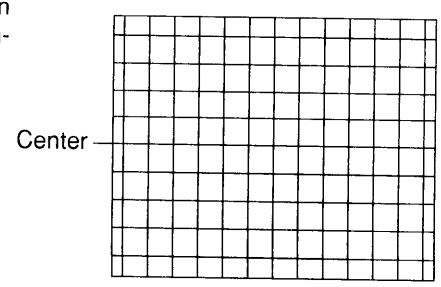
HEIGHT (HIT)	1. Call up the adjustment mode display, then select the item **HIT**. 2. Press the VOLUME ▼ button to get the picture so the top or bottom of raster begins to lack. 3. Press the VOLUME ▲ button to advance the data by 9 steps. Note : Check the vertical picture position is correct.
WHITE BALANCE (RCUT) (GCUT) (BCUT) (RDRV) (BDRV)	Black and White pattern 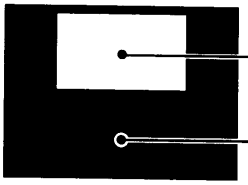 High light area Adjust "RDRV" or "BDRV" to be white. Low light area Fine adjust "RCUT", "GCUT" or "BCUT" to be black. 1. Set user control to reset position. (CONTRAST → Max BRIGHTNESS, COLOR, TINT → Center.) 2. Call up the adjustment mode display, then select the item RCUT. 3. Adjust the data of items **RCUT**, **GCUT**, and **BCUT** to "40H". 4. Press the -/-- button on Remote. (Y-MUTE : ON) 5. Gradually rotate R, G and B screen volume of FOCUS PAC clockwise or counter-clockwise until the raster appears slightly on the CRT through the each lens, and leave them. (Lookin to the lens in order to check the raster.) 6. Press the -/-- button on Remote. (Return to Normal Picture) 7. Press the ⏻ button on Remote, and select the Black and White pattern. 8. Adjust the data of items **RCUT**, **GCUT** and **BCUT** for proper white-balanced picture in low light area. 9. Adjust the data of items **RDRV** and **BDRV** for proper white-balanced picture in high light area. 10. Check the white balance in both low and high light areas. If necessary, perform again steps from 8 to 9.

Item	Name	Setting (User control)	Input signal	Measurement point	Adjustment procedure	Adjustment standard
[SCNT]	Sub-contrast	Reset 1 mode	Sub-bright signal (PAL-I signal)	Q501 (TP46B)	Adjust the amplitude from the pedestal level to the white peak.	2.4 ± 0.1 V p-p
[BRTC]	Sub-bright center	Reset 1 mode	Sub-bright signal	Screen adjustment	1) Adjust the number of collapsed black lines of sub-bright signal. 2) This adjustment shall be done after W/B [SCNT] adjustment.	4 ± 1.5 lines
[COLP]	Sub-color center PAL	Reset 1 mode	Sub-bright signal (PAL)	Q501 (TP46B)	1) Adjustment the colour bar amplitude. 2) Adjust the P-P value of the upper half.	1.25 ± 0.1 V p-p
[BELL]	BELL filter		SECAM colour bar	QQ01 (TMP01)	1) Adjust [BELL] so that the wavetorm on the synchroscope becomes flat. 2) Perform this adjustment at the white part.	100 ± 10 %
[SRY]	SECAM R-Y black level		SECAM colour bar	Q501 (TP02)	1) Adjust [SRY] so that the level of B/W signal becomes the same as the H.BLK level. 2) This adjustment shall be done after [BELL] adjustments.	0 ± 10 mV
[SBY]	SECAM R-Y black level		SECAM colour bar	Q501 (TP01)	1) Adjust [SBY] so that the level of B/W signal becomes the same as the H.BLK level. 2) The adjustment shall be done after [BELL] adjustments.	0 ± 10 mV
[COLS]	Sub-colour center SECAM	Reset 1 mode	SECAM colour bar	Q501 (TP46B)	1) Adjust the amplitude of colour bar. (Apply picture mute for this adjustment.) 2) Adjust the P-P value of the upper half.	1.8 ± 0.2 Vop
Screen adjustment	Screen	Factory screen adjsutment mode		CRT tube surface	1) Make the surrounding as dark as possible. 2) Set to the factory screen adjustment mode (Y mute, DRV. CUT= 40H) 3) Observing the CRT tube surface directly, adjust the screen VR to the point where the tube starts to be bright. 4) Perform this adjustment for each R, G and B tube.	Point where the tube starts to glow.
Focus adjustment	Focus	Reset 1 mode	RETMA (PAL-1)	Screen Adjustment	1) Repeat the electric focus and optical focus adjustments for the best position. 2) As to CRTs other than the one for the adjustment, shield them with a jig. 3) Perform this adjustment for each R, G and B tube.	
[RDRV] [BDRV]	White balance at bright part			Screen Adjustment	Adjust the colour temperature at the bright part (103cd/m^2).	11500K-0.002uv
[RCUT] [BCUT]	White balance at dark part			Screen Adjustment	Adjust the colour temperature at the dark part (17cd/m^2).	10500K-0.002uv

Item	Name	Setting (User control)	Input signal	Measurement point	Adjustment procedure	Adjustment standard
V-Balance voltage adj.	V-Balance voltage	DYANAMIC	Phillips pattern	TP-V–TP-G	Hook it up with a digital voltmeter, and adjust the DC voltage according to VPOS data.	10 ± 10 mV
Vertical position adjustment		DYNAMIC	Phillips pattern (PAL-I)	Screen adjustment	1) Adjust the centering magnet so that the vertical position comes to the center of the dummy screen (cross pattern). 2) Do not change [VPOS] data.	
Horizontal position adjustment		DYNAMIC	Phillips pattern (PAL-I)	Screen adjustment	1) Adjust the centering magnet so that the horizontal position comes to the center of the dummy screen (cross pattern). 2) Do not change [HPOS] data.	
[HIT] [VLIN]	Vertical amplitude adjustment	DYNAMIC	Phillips pattern (PAL-I)	Screen adjustment	Adjust the vertical amplitude so that top and bottom flags disappear. (Align the vertical center of the pattern with the center mark of the mask.)	
[WID]	Horizontal amplitude adjustme	Reset 1 mode	Phillips pattern (PAL-I)	Screen adjustment	Adjust the horizontal amplitude so that the left and right flags disappear.	

Unit adjustment : DIGITAL-CONVER

Item	Name	Setting (User control)	Input signal	Measurement point	Adjustment procedure	Adjustment standard
PLL frequency adjustment				Q709 emitter	1) Apply the following voltages to the respective terminals of P701. +5V to the terminals #15 and #16 +9V to the terminals #13 -9V to the terminals #14 2) By L719, adjust the frequency of the emitter Q709.	32 ± 0.1 kV

CONVERGENCE ADJUSTMENT

1. PICTURE ADJUSTMENT

The adjustment are done on two screens; 50 Hz mode (PAL) and 60 Hz mode (NTSC). To synchronize correction wave to each frequency, receive the suitable signal.

1-1. Change of Memory (E^2PROM)

Memory of QH173 E^2PROM is nonvolatile, and adjusted data is stored. Since data in RAM of QH001 is eliminated with power OFF, the RAM is set by soft command of microcomputer QA01 at every power ON. The adjusted data which is obtained from screen-watching is once stored in RAM inside QA01. The whole data in RAM which is corrected on each adjusting point and is changed, is saved into E^2PROM (QH173) as a fixed data. The data capacity per one screen requires 8k for 50 Hz mode (PAL), and 4k for 60 Hz mode (NTSC).

1-2. Service Mode

1-2-1. Outline

Service mode is controlled by software of microcomputer QA01, and is one of function of set.

This mode is designed so that ordinary user cannot use this, and special operation is required to use this.

Data change is done by direct shift (cursor display) of adjusting points; 50 Hz mode (PAL) 8 x 8/1 color and 60 Hz mode (NTSC) 8 x 8/1 color.

1-2-2. To Enter and to Exit

Press MUTE key on remote hand unit twice and keep pressing the key, press MENU key of set console.

Then service data will be displayed on top left of screen. Under the condition, press " ⇥|♪|⇤ " key on remote hand unit, and the screen shows crosshatch picture (Later, the first picture). Press again " ⇥|♪|⇤ " key, and the screen changes to crosshatch + data display (Later, second picture). This time changed data are automatically saved

Further, press " ⇥|♪|⇤ " key on remote, the screen returns to original picture.

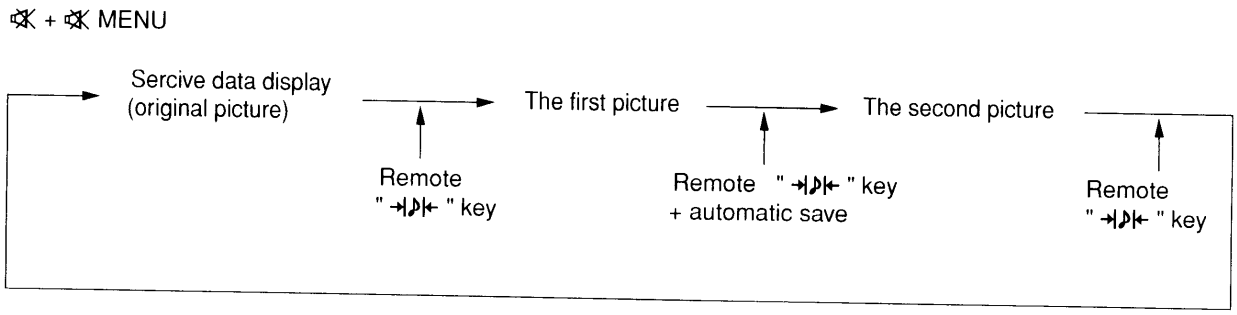

Fig. 10 -1

Adjusting Procedure In Replacing Convergence Unit/Main Def

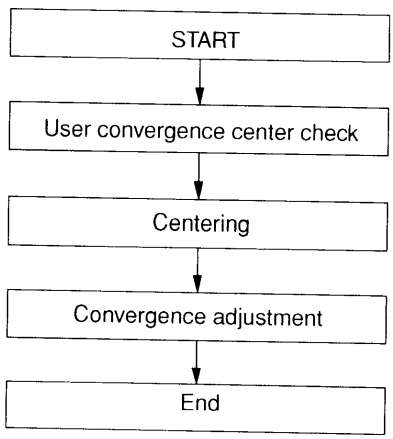

2. KEY FUNCTION OF REMOTE CONTROL UNIT

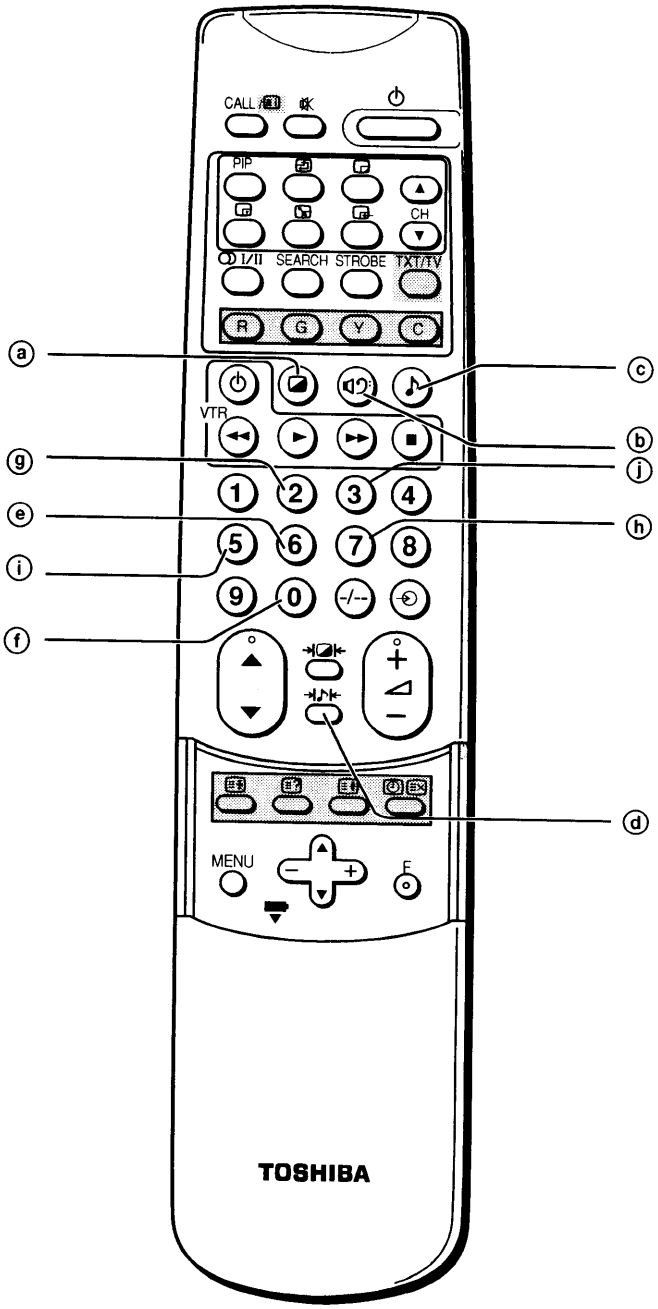

ⓐ ◪ key ..... Red test pattern ON/OFF

ⓑ 🔊 key ..... Green test pattern ON/OFF

ⓒ ♪ key ..... Blue test pattern ON/OFF

ⓓ →♪← key ..... Mode picture change-over

ⓔ 6 key ..... Cursor shift / data change mode change-over

ⓕ 0 key ..... Cursor down / adjusting point dow

ⓖ 2 key ..... Cursor up / adjusting point up

ⓗ 7 key ..... Cursor right / adjusting point right

ⓘ 5 key ..... Cursor left / adjusting point left

ⓙ 3 key ..... Cursor color change

Fig. 2

3. Picture

a) 50 Hz mode (PAL) . . . . Correcting point: Horizontal 8 × Vertical 8 (Arrow marks denote correcting point)

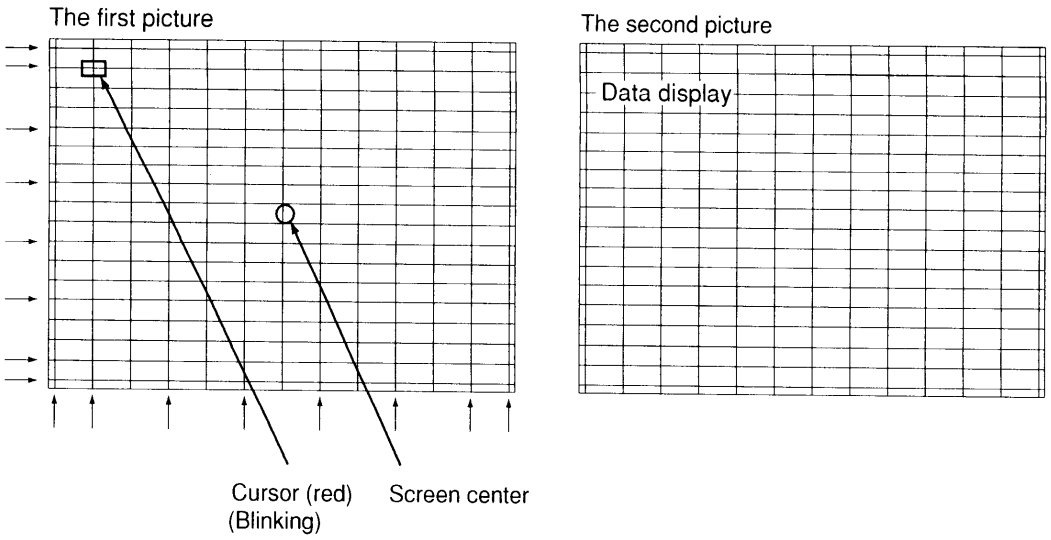

The first picture

Crosshatch pattern. Pattern colors are three color display. Cursor is blinking in red. When changed, condition is last memory state.

Cursor is ..... Data change mode in lighting,
Cursor shifting mode in blinking.

Display color shows the color that data change is possible.

The second picture

When entering from the first picture to the second picture, correcting wave of convergence is muted for one second. During this period, the changed data is transferred from RAM Q701 to E2PROM QH173, and saved.

The second picture is indicated with data on top left of the first picture, therefore, convergence cannot be adjusted by this picture.

Caution:

- Receive suitable signal for adjustment. Centering of green picture can be done in 50 Hz mode (PAL).
- Centering of 60 Hz mode (NTSC) can be adjusted by convergence adjustment. Besides, decide the center by cross pattern of static convergence in menu, and adjust convergence from center to circumference.

b) 60 Hz mode (NTSC) .... Correcting point: Horizontal 8 x Vertical 7 (Arrow marks denote correcting point)

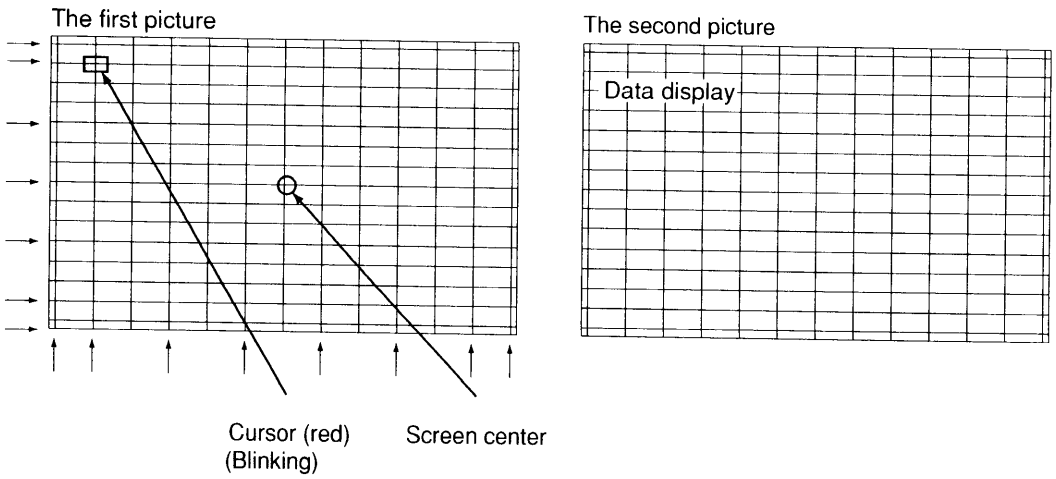

The first picture

Crosshatch pattern. Pattern colors are three color display. Cursor is blinking in red. When changed, condition is last memory state.

Cursor is ..... Data change mode in lighting,
Cursor shifting mode in blinking.

Display color shows the color that data change is possible.

The second picture

When entering from the first picture to the second picture, correcting wave of convergence is muted for one second.

During this period, the changed data is transferred from RAM Q701 to E^2PROM QH173, and saved.
The second picture is indicated with data on top left of the first picture, therefore, convergence cannot be adjusted by this picture.

Caution:

- Receive suitable signal for adjustment. Decide the center by cross pattern of static convergence in menu, and adjust convergence from center to circumference.

4. ADJUSTING PICTURE DIMENSION (GREEN PICTURE)

1.50 Hz mode (PAL)

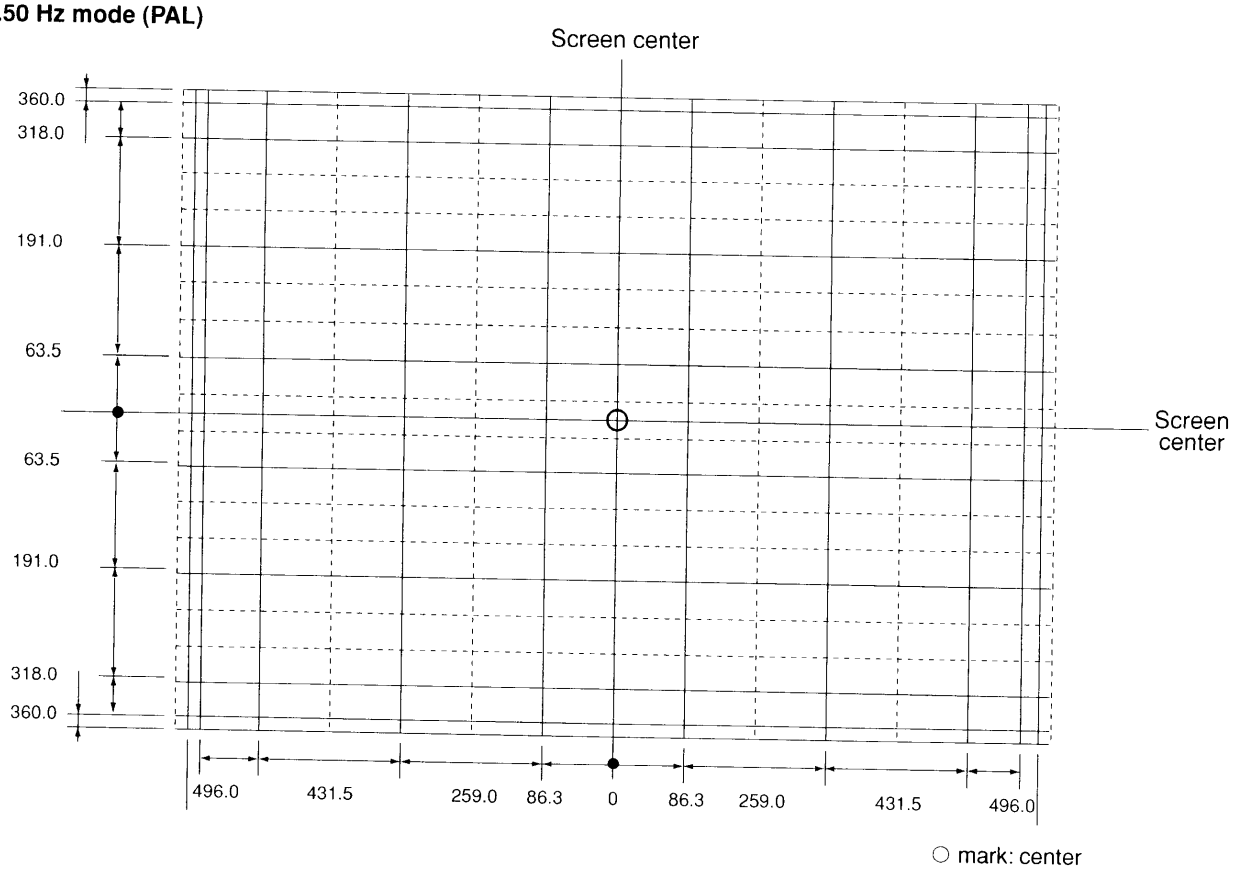

50 inches 4:3 Screen size: Horizontal 1014mm, Vertical 760mm

2. 60Hz mode (NTSC)

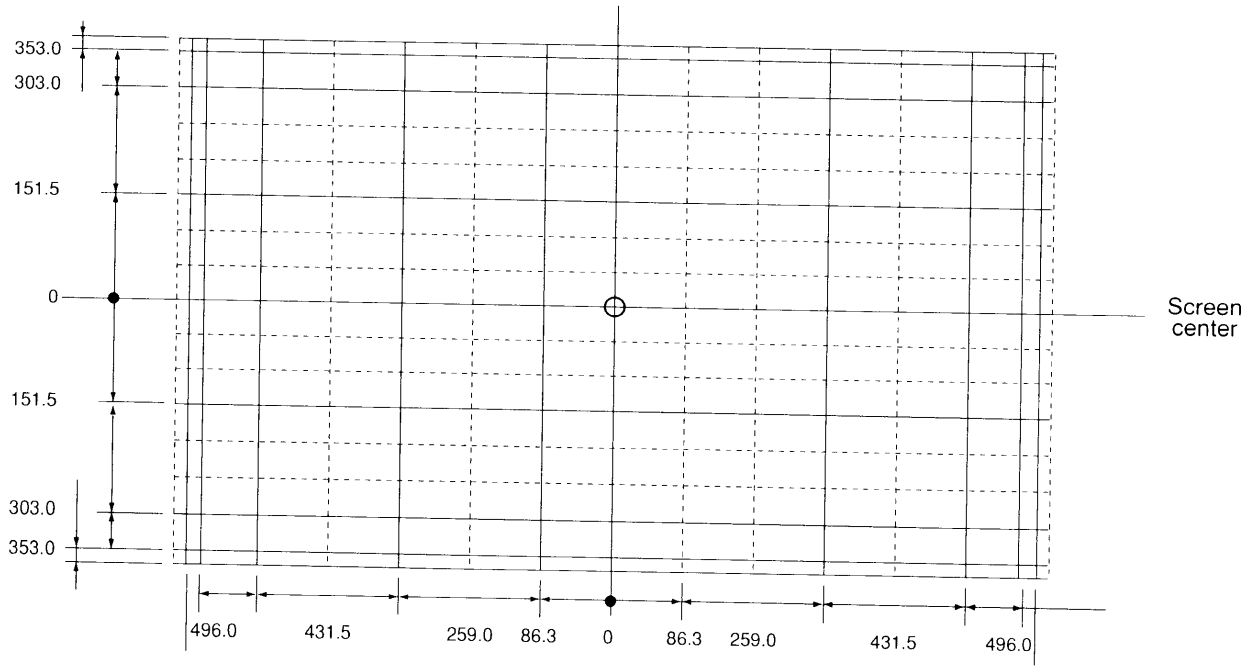

50 inches 4:3 Screen size: Horizontal 1014mm, Vertical 760mm

SCREEN AND MIRROR ALIGNMENTS

ASSEMBLING AND MOUNTING OF FRONT SCREEN

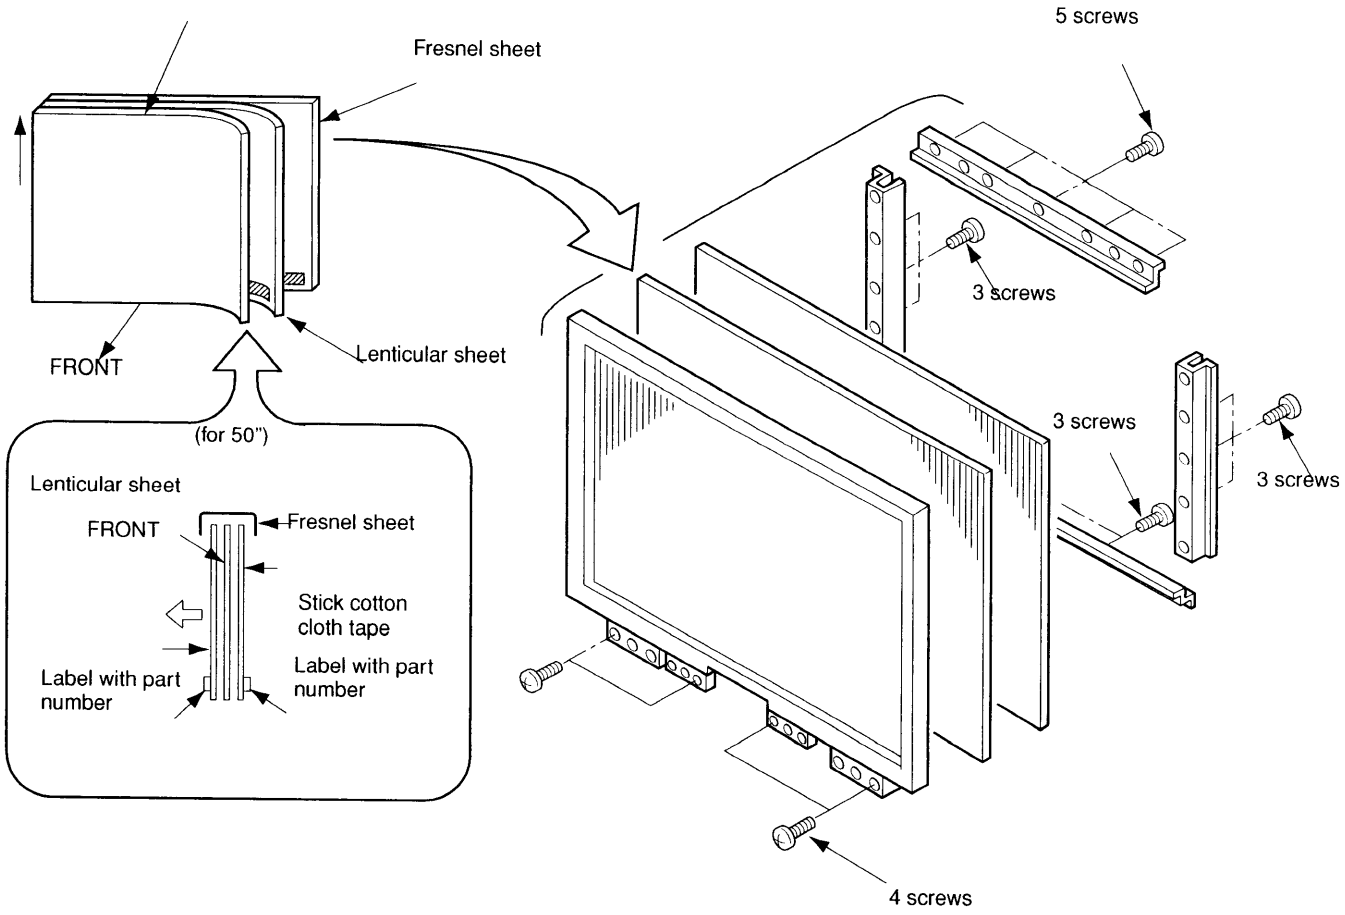

CLEANING OF LENS AND MIRROR

CAUTION : Do not hold the optical system parts (lens and mirror) with bare hand to avoid finger-prints on the surface of those parts.

HOW TO CLEAN LENS AND MIRROR

1. Be sure to remove sand dust with an air brush, etc.
2. When it is stained slightly, breathe upon it and wipe away with the specified cleaning cloth.
   For other stains than the above, wipe the stains away with the specified cloth into which a cleaning liquid has been soaked.

Cleaning liquid ..... **LENS LUSTER** (Manufactured by Edmund Scientific Co.), etc.

HOW TO CLEAN SCREEN

When cleaning the screen, use a soft cloth so as not to damage the screen.

1. Wipe the stain away with a diluted neutral detergent soaked cloth.
2. Wipe the detergent away with a water soaked cloth.
3. Wipe the screen with a dry cloth to remove moisture on the screen.

Note : Absolutely do not use alcohol, benzine, thinner, etc. for cleaning in order not to wipe away the black print on the surface.

CIRCUIT CHECKS

HIGH VOLTAGE CHECK

CAUTION: There is no HIGH VOLTAGE ADJUSTMENT on this chassis. Checking should be done following the steps below.

1. Connect an accurate high voltage meter to the anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST to minimum (zero beam current).
3. High voltage must be measured below (B) kV.

   Refer to table-1 for high voltage (B).
   (See SETTING & ADJUSTING DATA on page 24)
4. Vary the BRIGHTNESS to both extremes to be sure the high voltage does not exceed the limit under any conditions.

CAUTION:

When the following parts fail, check the High Voltage after replacing.

Location No.	Name	Name
T461	Flyback Trans.	TFB3087AD
C440	Capacitor	2000pF, ±3%
C443	Capacitor	4700pF, ±3%
C444	Capacitor	8200pF, ±3%
C467	Capacitor	12000pF, ±3%
C468	Capacitor	12000pF, ±3%

ANODE VOLTAGE MEASURING METHOD

CAUTION: Take extra precaution when measuring this high voltage. High voltages are also present in surrounding circuit boards (CRT DRIVE assembly, DEFLECTION assembly, and POWER SUPPLY assembly).

1. Disconnect the FBT anode cable as outlined below. Measure high voltage at the point where the cable enters the FBT.
2. Holding the rubber cover firmly, turn it counterclockwise and check that the lock has been disengaged. (See Fig. b on page 8.)
3. Determine the extent of the rubber cover before disconnecting the cable.
4. Pull straight up the anode cable to disconnect.
5. When reconnecting the cable, proceed in the reverse order.
   After reconnecting, tug on the cable to check that it is secure.

CHAPTER 2 SPECIFIC INFORMATIONS

SETTING & ADJUSTING DATA

SAFETY INSTRUCTIONS

		50"
HIGH VOLTAGE AT ZERO BEAM:	(A)	32.8 kV
MAX HIGH VOLTAGE:	(B)	34.4 kV
AC VOLTAGE	(C)	110~240 V

Table-1

SERVICE MODE

ADJUSTING ITEMS AND DATAS IN THE SERVICE MODE:

Item	Adjustment	Reference data
RCUT	R CUTOFF (B/W)	40H
GCUT	G CUTOFF (B/W)	40H
BCUT	B CUTOFF (B/W)	40H
RDRV	R DRIVE	40H
BDRV	B DRIVE	40H
CNTX	SUB CONTRAST MAX	7FH
BRTC	SUB BRIGHT CEN	80H
COLC	SUB COLOR CEN NTSC	50H
TNTC	SUB TINT CEN	20H
COLP	SUB COLOR CEN PAL	01H
COLS	SUB COLOR CEN SECAM	45H
COLD	SUB COLOR CEN DVD	50H
SCNT	SUB CONTRAST	0EH
SRY	SECAM R-Y	07H

Item	Adjustment	Reference data
SBY	SECAM B-Y	04H
HPOS	50Hz H-POSITION	3AH
VPOS	V-POSITION	60H
HIT	HEIGHT	4CH
VLIN	V-LINEARITY	11H
VSC	V-S CORRECTION	04H
VPS	V-SHIFT	1CH
VCP	V-COMPENSATION	0AH
WID	PICTURE WIDTH	22H
PARA	E-W PARABOLA	1CH
CNR	E-W CORNER	03H
TRAP	TRAPEZIUM	20H
HCP	H-COMPENSATION	00H
VFC	V-F CORRECTION	0FH

Table-2

DESIGN MODE

ADJUSTING ITEMS AND DATAS IN THE DESIGN MODE:

Item	Name of adjustment	Preset Data	50"	Remarks
RCUT				
OPT1	OPTION 1	48H	48H	
OPT0	OPTION 0	81H	81H	
OSD				
.				
.				
.				
.				
RCUT				

Table-3

LOCATION OF CONTROLS (Representative: 50D9UXE)

Front

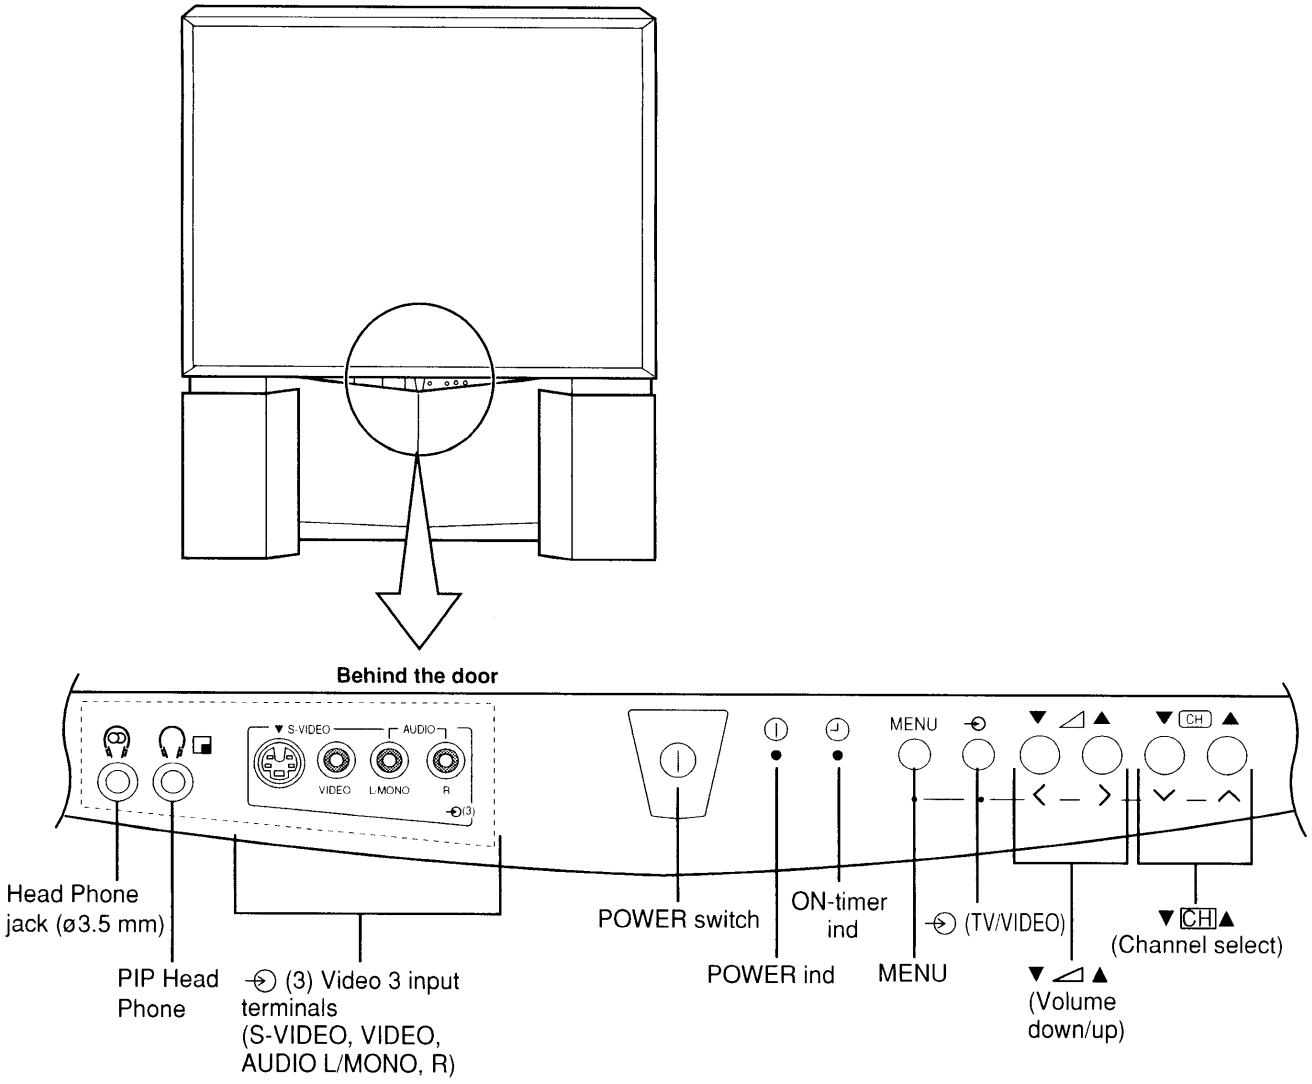

Back

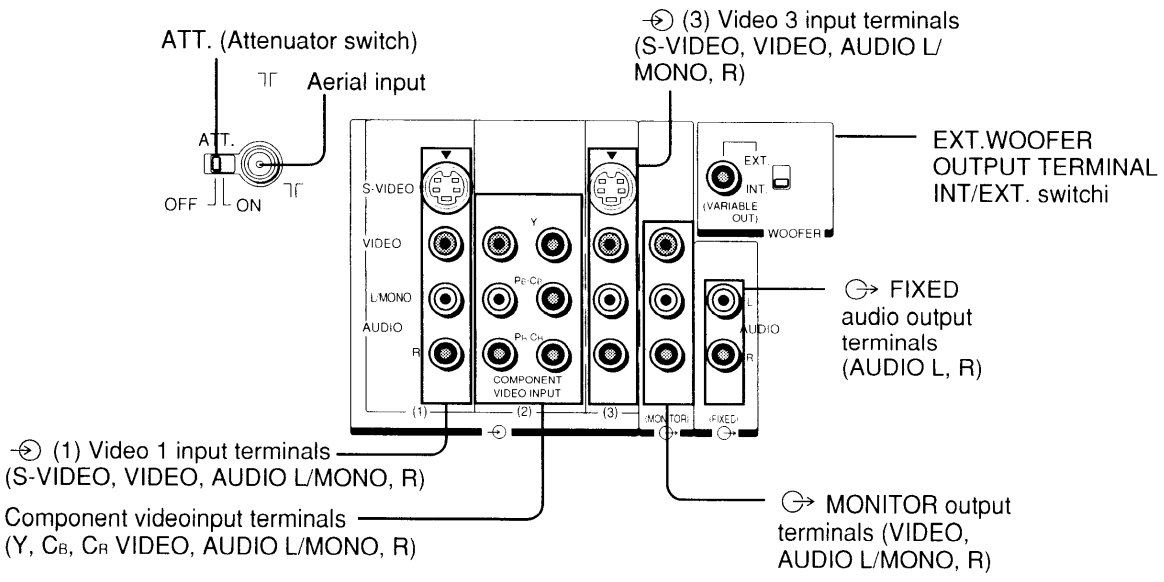

Remote Controller

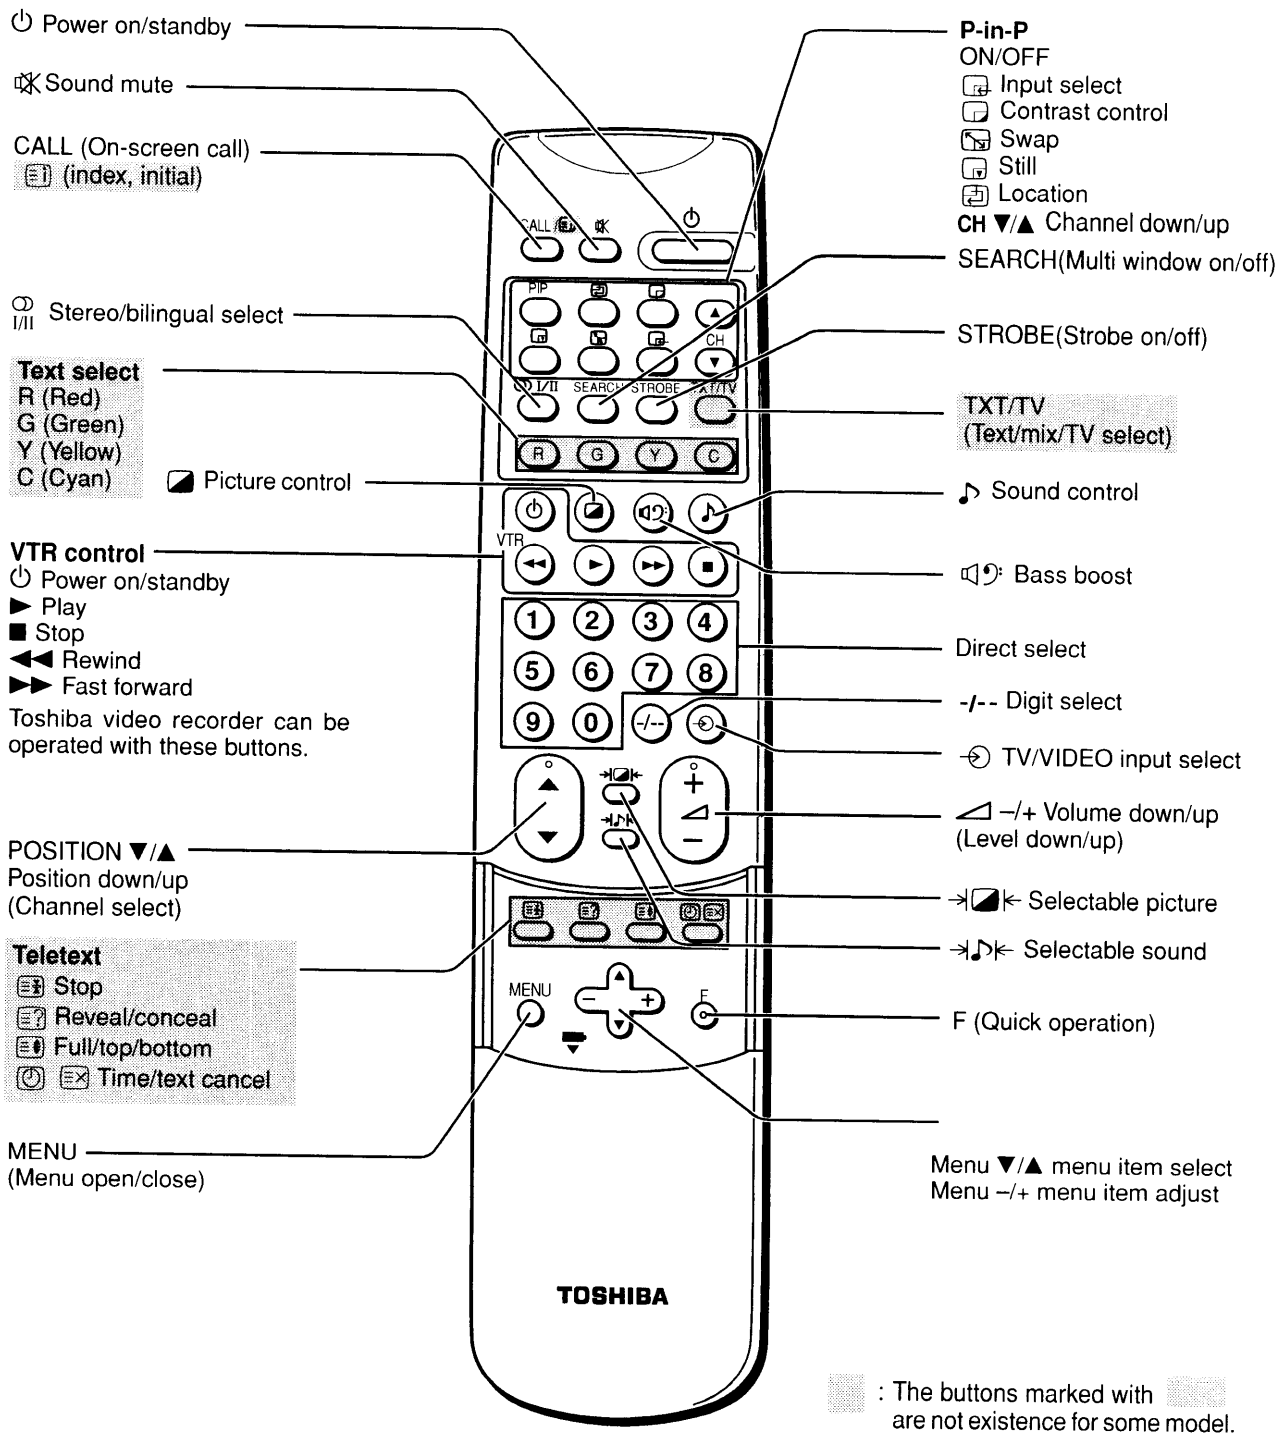

: The buttons marked with are not existence for some model.

PROGRAMMING CHANNEL MEMORY

- First, use the ASM (Automatic Search Memory) function to preset all the active channels in your area automatically.
  Then, arrange the preset channels with the MANUAL SEARCH (SEARCH or >>>), MFT (Manual Fine Tuning) and SKIP functions so that you can tune into only desired channels.
- This section shows how to tune in channels using mainly the Remote Controller. You can also perform the system select, ASM, MANUAL SEARCH (SEARCH or >>>), MFT and SKIP operations using the buttons on the TV set.

To preset channels (ASM)

ASM (Automatic Search Memory)

1 Select the first position number you want the ASM to start presetting from with the **POSITION** ▼/▲ buttons or the direct select buttons.

2 Press the **MENU** button repeatedly to call up the SET UP menu on the screen.

3 Confirm that "COLOR" is set to "AUTO" and "SOUND" is set to proper system.
If not, press the **MENU** ▼/▲ (or position ▼/▲) buttons to move the cursor (▶) to "COLOR" or "SOUND" then press the **MENU** –/+ (or◿ –/+) buttons to select the proper systems.

4 Press the **MENU** ▼/▲ (or position ▼/▲) buttons to move the cursor (▶) to "ASM".

5 Press the **MENU** + (or◿ +) button to start the ASM.
All active channels will be preset automatically.
When presetting is complete, the initial position number will reappear.

After presetting
Check the preset channels by pressing the **POSITION** ▼/▲ buttons.

- If the picture or sound of a certain channel is not good, re-tune the channel using the ASM, MANUAL SEARCH (SEARCH or >>>) or MFT function.
- If the colour of a certain channel is abnormal, the automatic colour system selection (AUTO) may have malfunctioned, or sound system selection is wrong. In such a case, select another colour and/or sound system.

MFT (Manual Fine Tuning)

The adjustments below are not necessary under normal conditions. However, in areas of inferior broadcast conditions where adjustment is necessary for a better picutre, adjust the tuning with the MFT (Manual Fine Tuning).

1 Select the channel you want to fine-tune with the **POSITION** ▼/▲ buttons or direct select buttons.

2 Press the **MENU** button repeatedly to call up the SET UP menu on the screen.

3 Press the **MENU** ▼/▲ (or position ▼/▲) buttons to move the cursor (▶) to "MFT".

4 Press the **MENU** –/+ (or◿ –/+) buttons until the best possible picture and sound are obtained.
[–]DOWN or [+]UP is highlighted while tuning in.

- Use the MANUAL SEARCH (SEARCH or >>>) function if desired channels cannot be preset with the ASM or if you would like to preset channels to specific position numbers one by one.
- It is convenient to set the channel numbers to the same position numbers using MANUAL SEARCH (SEARCH or >>>) and SKIP functions.

To preset channels (Manual search) and skip unnecessary position numbers

Manual search (SEARCH or >>>)

1 Select a desired position number with the **POSITION** ▼/▲ or direct select buttons.

2 Press the **MENU** button repeatedly to call up the SET UP menu on the screen.

3 Press the **MENU** ▼/▲ (or position ▼/▲) buttons to move the cursor (▶) to " SEARCH or >>> ".

4 Press the **MENU** –/+ (or◿ –/+)buttons to start searching. The **MENU** – (or◿ –) button searches for lower-numbered channels; the **MENU** + (or◿ +) button for higher-numbered channels.
Repeat this process until you can get the desired channel.

5 When the desired channel is shown, press the **MENU** ▼/▲ buttons (or position ▼/▲) to move the cursor (▶) to " ⏎ ".

6 Press the **MENU** + (or◿ +) button to store the channel at the current position.

7 When you desire to store another channel at another position, move the cursor (▶) to "POSITION" with the **MENU** ▼/▲ (or position ▼/▲)buttons and select a desired position number with the **MENU** –/+ (or◿ –/+)buttons. Then, press the **MENU** ▼/▲ (or position ▼/▲) buttons to move the cursor (▶) to " SEARCH or >>> " and repeat the steps 4 to 7. Or, repeat the steps 1 to 7 after the display disappears.

To skip a position number

After presetting the channels, you may skip unnecessary position numbers so that only the channels you want to watch are selected.

1 Select the position number to be skipped with the **POSITION** ▼/▲ buttons or direct select buttons.

2 Press the **MENU** button repeatedly to call up the SET UP menu on the screen.

3 Press the **MENU** ▼/▲ (or position ▼/▲) buttons to move the cursor (▶) to "SKIP".

4 Press the **MENU** –/+ (or◿ –/+) buttons to select "SKIP ON".

5 Press the **CALL** button to turn off the SET UP menu display.
Select the position number to be skipped with the direct select buttons. The * mark appears to the left of the position number.
The position number will then be skipped when you select channels with the **POSITION** ▼/▲ buttons.

To restore a skipped position number

1 Select the position number you want to restore with the direct select buttons.

2 Press the **MENU** button to call up the SET UP menu display and press the **MENU** ▼/▲ (or position ▼/▲) buttons to move the cursor (▶) to "SKIP".

3 Press the **MENU** –/+ (or◿ –/+) buttons to select "SKIP OFF".

*Please refer to owner's manual in detail.

CIRCUIT BLOCK DIAGRAM

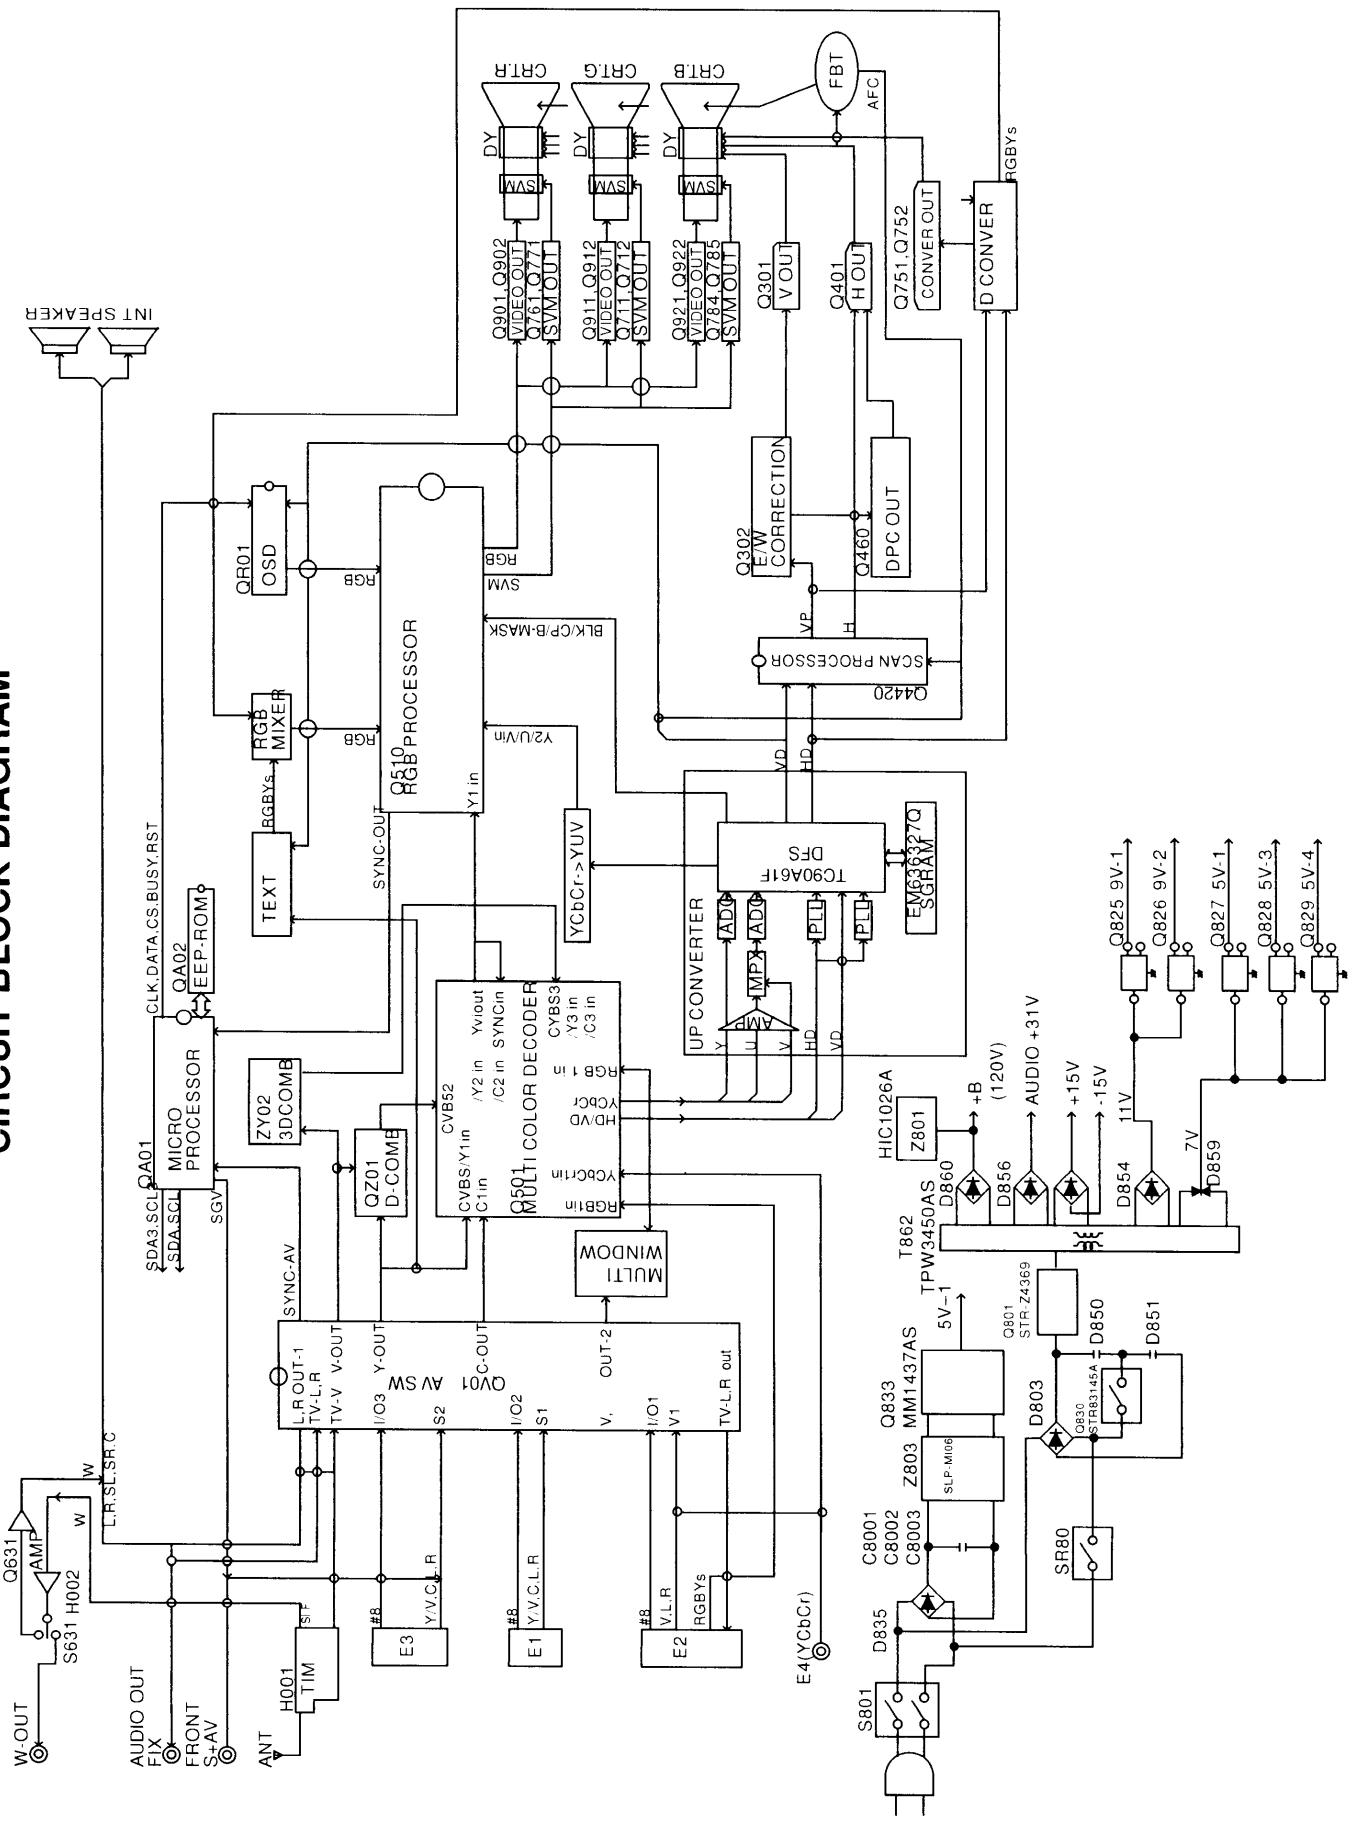

SPECIFIC INFORMATIONS

THIS PAGE IS
INTENTIONALLY LEFT
BLANK.

MECHANICAL DISASSEMBLY

1 Speaker Grille Removal

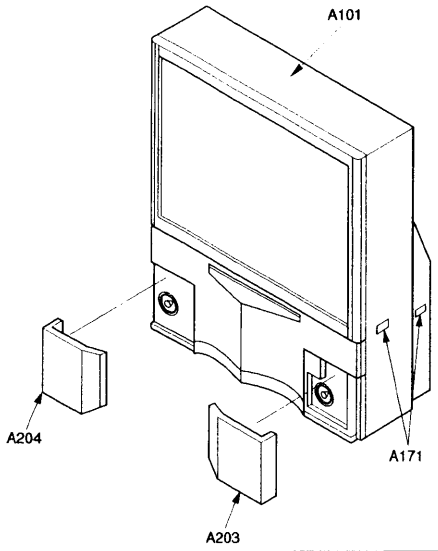

2 Control Panel Removal

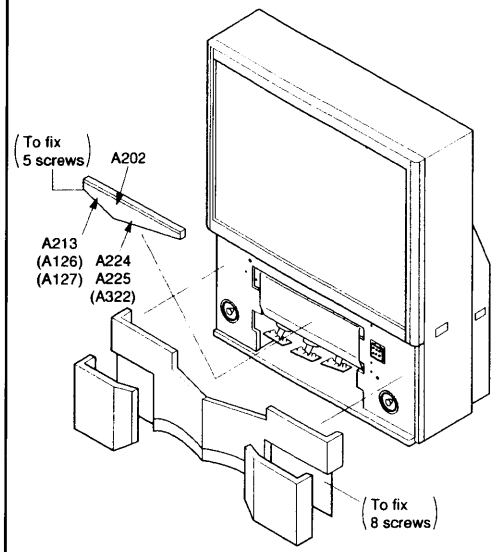

3 Front Mask Removal

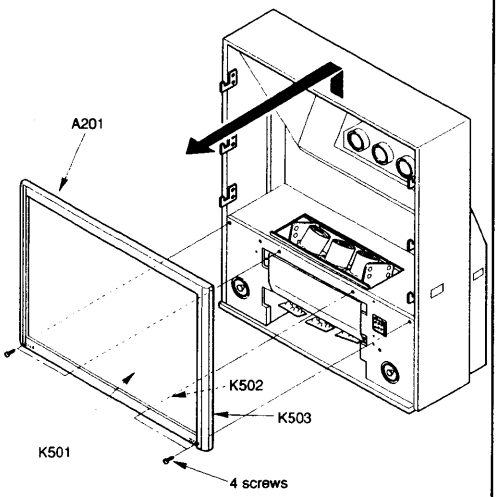

4 Mask Removal

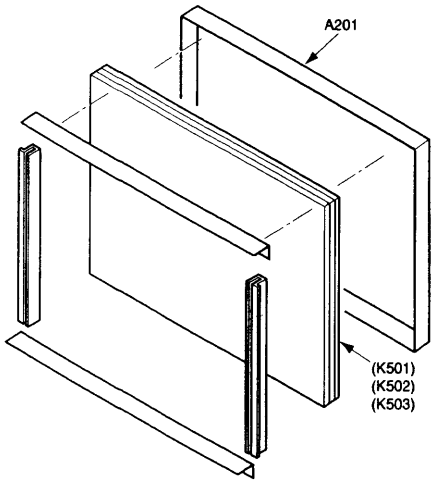

5 Shield Plate, Lens Removal

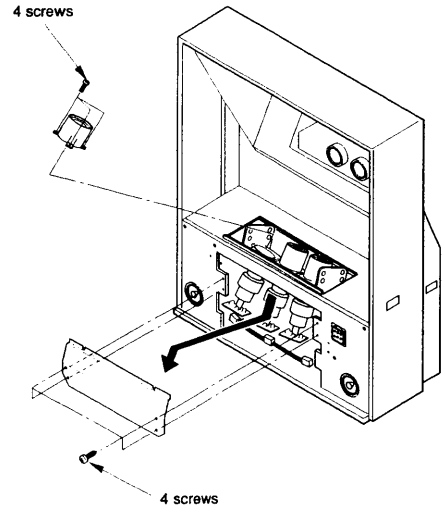

6 Mirror Removal

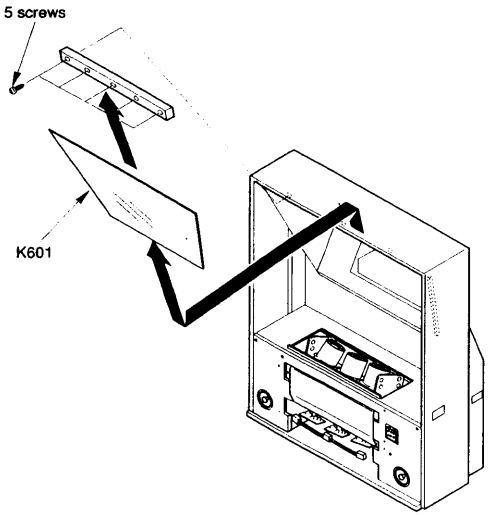

7 Back Board Removal

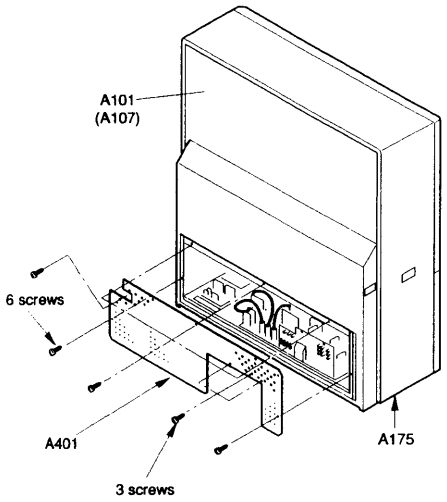

8 Light Box Removal

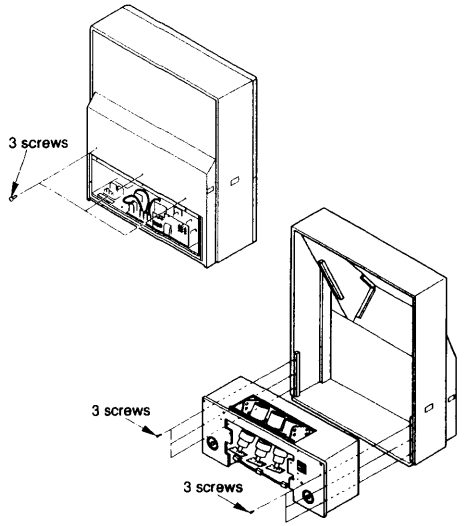

1 Speaker Grille Removal

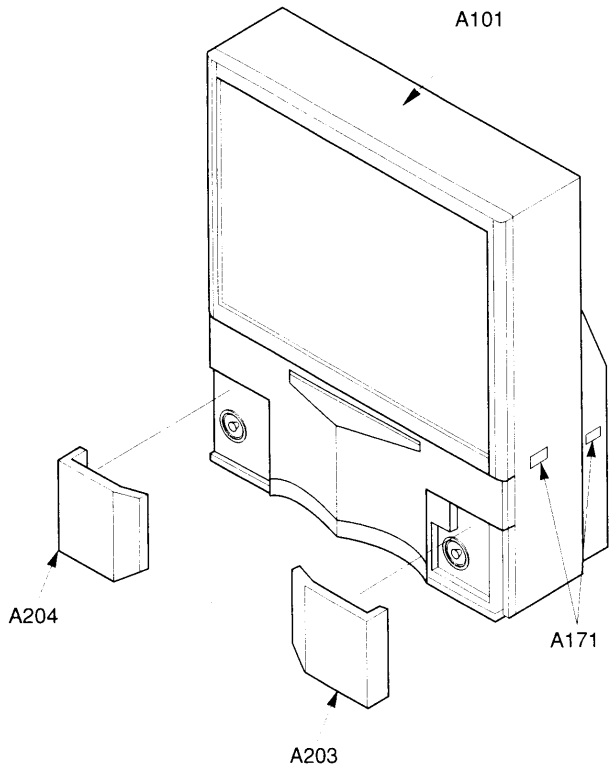

2 Control Panel Removal

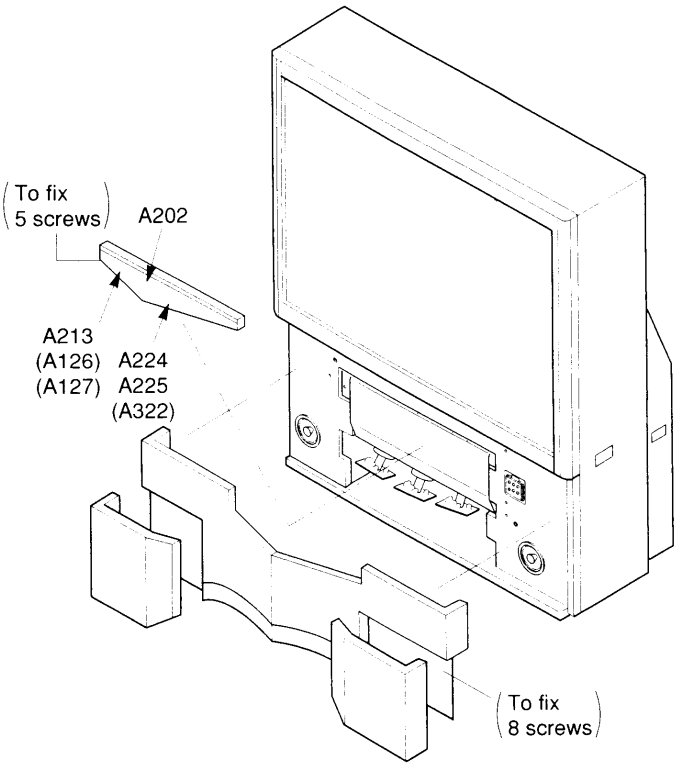

3

5 Shield Plate, Lens Removal

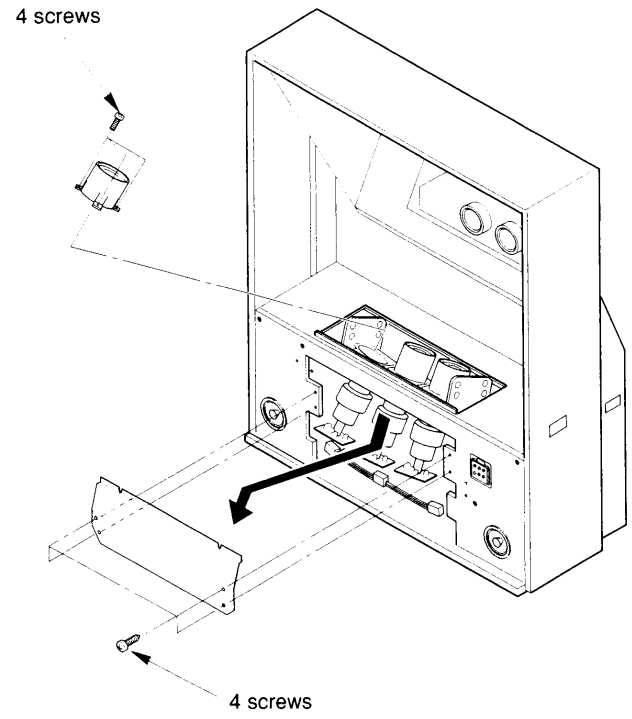

6 Mirror Removal

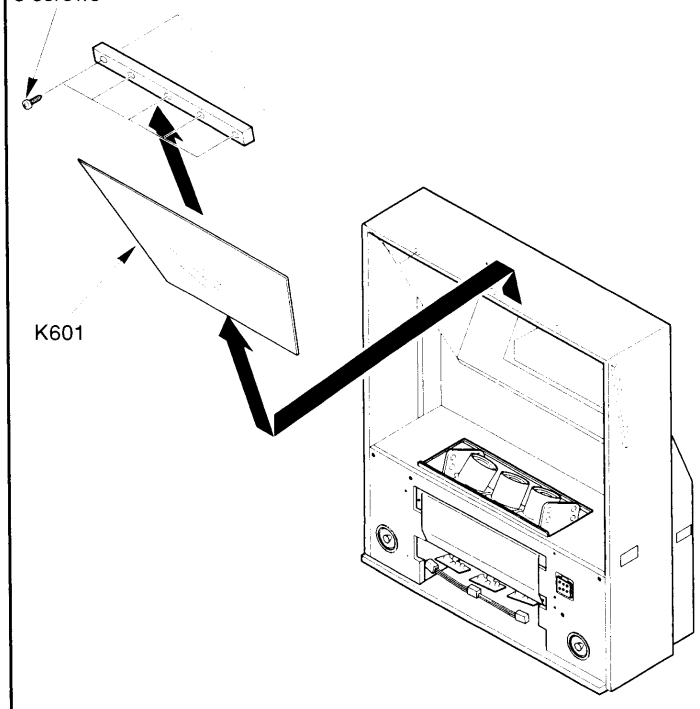

7

CHANICAL DISASSEMBLY

3 Front Mask Removal

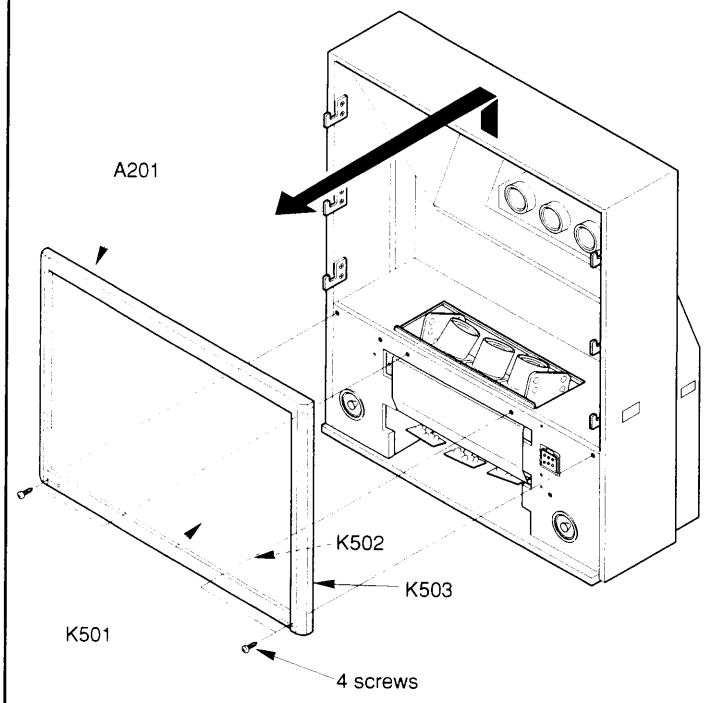

4 Mask Removal

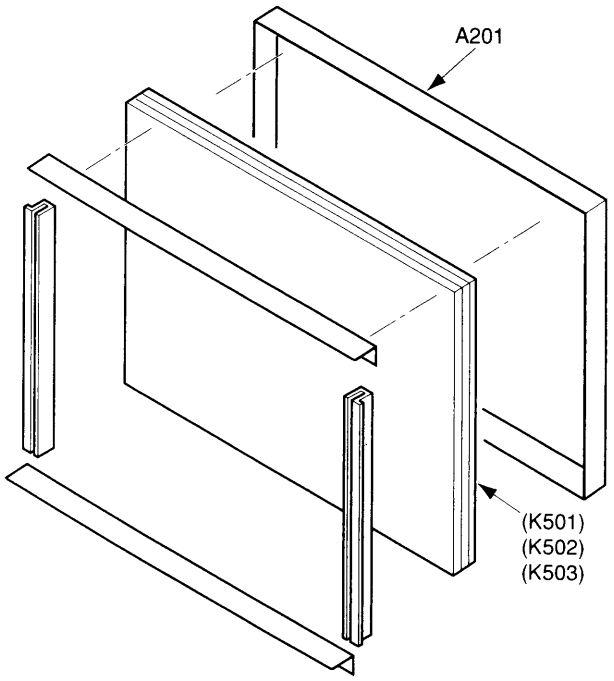

7 Back Board Removal

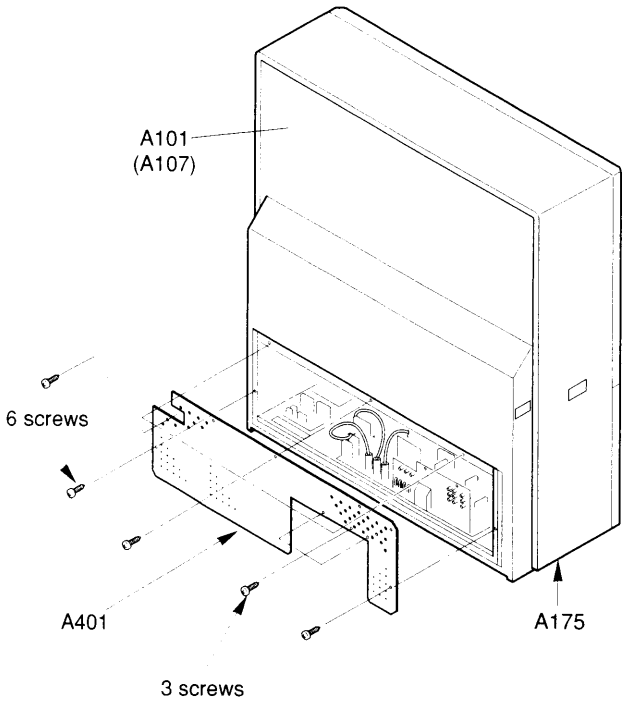

8 Light Box Removal

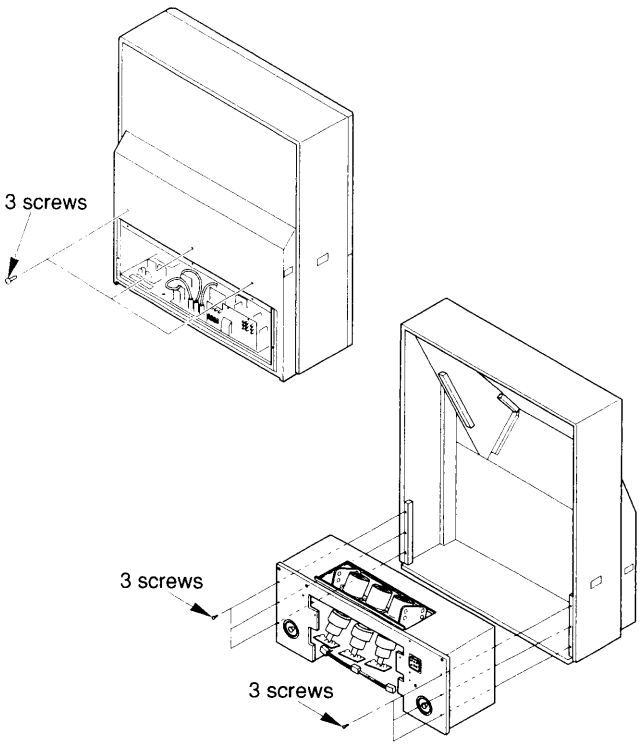

THIS PAGE IS
INTENTIONALLY LEFT
BLANK.

THIS PAGE IS INTENTIONALLY LEFT BLANK.

GE IS
LLY LEFT
NK.

CHASSIS AND CABINET REPLACEMENT PARTS LIST

WARNING: BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE. Do not degrade the safety of the receiver through improper servicing.

NOTICE:

- *The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.*
- *The PC board assembly with * mark is no longer available after the end of the production.*

ABBREVIATIONS:

Capacitors ..... CD : Ceramic Disk PF : Plastic Film EL : Electrolytic
Resistors ..... CF : Carbon Film CC : Carbon Composition MF : Metal Film
OMF : Oxide Metal Film VR : Variable Resistor FR : Fusible Resistor

(All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

Models :50D9UXE, 50D9UXH, 50D9UXA

Location No.	Part No.	Description
CAPACITORS		
C105	24212102	CD, 1000pF, ±10%
C106	24797100	EL, 10μF, ±20%, 50V
C107	24763221	EL, 220μF, ±20%, 16V
C110	24232103	CD, 0.01μF, +80%, -20%
C111	24794101	EL, 100μF, ±20%, 16V
C115	24232103	CD, 0.01μF, +80%, -20%
C117	24232103	CD, 0.01μF, +80%, -20%
C119	24474102	CD, 1000pF, ±10%
C190	24232103	CD, 0.01μF, +80%, -20%
C199	24666221	EL, 220μF, ±20%, 16V
C201	24206228	EL, 0.22μF, ±20%, 50V
C202	24232103	CD, 0.01μF, +80%, -20%
C203	24591104	PF, 0.1μF
C204	24797010	EL, 1μF, ±20%, 50V
C205	24797229	EL, 2.2μF, ±20%, 50V
C206	24797220	EL, 22μF, ±20%, 50V
C212	24794100	EL, 10μF, ±20%, 16V
C214	24538334	PF, 0.33μF
C215	24474101	CD, 100pF, ±10%
C219	24473100	CD, 10pF
C220	24794101	EL, 100μF, ±20%, 16V
C221	24473100	CD, 10pF
C222	24473100	CD, 10pF
C263	24794470	EL, 47μF, ±20%, 16V
C264	24794100	EL, 10μF, ±20%, 16V
C265	24794470	EL, 47μF, ±20%, 16V
C266	24794100	EL, 10μF, ±20%, 16V
C301	24567683	PF, 0.068μF
C302	24567224	PF, 0.22μF
C303	24567103	PF, 0.01μF
C304	24567104	PF, 0.1μF
C305	24567103	PF, 0.01μF
C306	24591102	PF, 1000pF
C307	24567105	PF, 1μF
C308	24591203	PF, 0.02μF
C309	24591102	PF, 1000pF
C310	24667101	EL, 100μF, ±20%, 25V
C311	24567103	PF, 0.01μF
C312	24591102	PF, 1000pF
C313	24666101	EL, 100μF, ±20%, 16V

Location No.	Part No.	Description
C314	24567104	PF, 0.1μF
C315	24666102	EL, 1000μF, ±20%, 16V
C315	24797229	EL, 2.2μF, ±20%, 50V
C316	24666101	EL, 100μF, ±20%, 16V
C317	24591222	PF, 2200pF
C318	24591182	PF, 1800pF
C319	24667101	EL, 100μF, ±20%, 25V
C320	24669101	EL, 100μF, ±20%, 50V
C321	24669101	EL, 100μF, ±20%, 50V
C322	24567393	PF, 0.039μF
C323	24567563	PF, 0.056μF
C324	24669101	EL, 100μF, ±20%, 50V
C325	24082057	PF, 0.22μF, 100V
C326	24567224	PF, 0.22μF
C327	24666101	EL, 100μF, ±20%, 16V
C328	24082260	PF, 4700pF, 100V
C329	24669100	EL, 10μF, ±20%, 50V
C330	24085946	EL, 10μF, ±20%, 16V, Non-Polar
C332	24669221	EL, 220μF, ±20%, 50V
C333	24693473	PF, 0.047μF, 100V
C334	24212471	CD, 470pF, ±10%
C335	24567104	PF, 0.1μF
C350	24567474	PF, 0.47μF
C351	24567104	PF, 0.1μF
C370	24669229	EL, 2.2μF, ±20%, 50V
C371	24591124	PF, 0.12μF
C372	24212101	CD, 100pF, ±10%
C380	24794330	EL, 33μF, ±20%, 16V
C401	24214332	CD, 3300pF, ±10%, 500V
C402	24214391	CD, 390pF, ±10%, 500V
C403	24232103	CD, 0.01μF, +80%, -20%
C404	24797229	EL, 2.2μF, ±20%, 50V
C405	24567124	PF, 0.12μF
C412	24095800	PF, 0.082μF, 400V
C415	24092478	CD, 470pF, ±10%, 2kV
C416	24676220	EL, 22μF, ±20%, 100V
C417	24095716	PF, 1.5μF, ±10%, 250V
C423	24095786	PF, 0.33μF, 400V
C424	24763101	EL, 100μF, ±20%, 16V
C425	24095787	PF, 0.3μF, 400V

Location No.	Part No.	Description
C426	24082608	PF, 4700pF, ±3%, 1800V
C430	24232103	CD, 0.01μF, +80%, -20%
C431	24763102	EL, 1000μF, ±20%, 16V
C432	24567333	PF, 0.033μF
C440	24082937	PF, 2000pF, ±3%, 1500V
C443	24082946	PF, 4700pF, ±3%, 1500V
C444	24082961	PF, 8200pF, ±3%, 1500V
C445	24828473	PF, 0.047μF, 200V
C446	24679330	EL, 33μF, ±20%, 250V
C448	24640908	EL, 33μF, ±20%, 160V
C449	24214221	CD, 220pF, ±10%, 500V
C460	24679330	EL, 33μF, ±20%, 250V
C464	24095900	PF, 3.3μF, ±10%, 100V
C465	24567103	PF, 0.01μF
C466	24591332	PF, 3300pF
C469	24567474	PF, 0.47μF
C470	24095900	PF, 3.3μF, ±10%, 100V
C471	24669479	EL, 4.7μF, ±20%, 50V
C478	24567474	PF, 0.47μF
C481	24666101	EL, 100μF, ±20%, 16V
C482	24591223	PF, 0.022μF
C483	24591472	PF, 4700pF
C484	24591471	PF, 470pF
C502	24232103	CD, 0.01μF, +80%, -20%
C503	24794221	EL, 220μF, ±20%, 16V
C508	24797010	EL, 1μF, ±20%, 50V
C509	24794101	EL, 100μF, ±20%, 16V
C510	24794101	EL, 100μF, ±20%, 16V
C511	24232103	CD, 0.01μF, +80%, -20%
C513	24232103	CD, 0.01μF, +80%, -20%
C514	24567104	PF, 0.1μF
C515	24567104	PF, 0.1μF
C520	24212102	CD, 1000pF, ±10%
C521	24212102	CD, 1000pF, ±10%
C522	24797010	EL, 1μF, ±20%, 50V
C523	24477104	CD, 0.01μF, +80%, -20%
C524	24477104	CD, 0.01μF, +80%, -20%
C525	24477104	CD, 0.01μF, +80%, -20%
C526	24474101	CD, 100pF, ±10%
C541	24567104	PF, 0.1μF
C542	24567104	PF, 0.1μF
C543	24797470	EL, 47μF, ±20%, 50V
C544	24232103	CD, 0.01μF, +80%, -20%
C545	24797470	EL, 47μF, ±20%, 50V
C546	24232103	CD, 0.01μF, +80%, -20%
C547	24567104	PF, 0.1μF
C548	24567104	PF, 0.1μF
C549	24567104	PF, 0.1μF
C550	24797479	EL, 4.7μF, ±20%, 50V
C551	24567104	PF, 0.1μF
C552	24591104	PF, 0.1μF
C553	24567104	PF, 0.1μF
C554	24797470	EL, 47μF, ±20%, 50V
C555	24232103	CD, 0.01μF, +80%, -20%
C560	24353100	CD, 10pF, ±0.25pF, CH
C561	24232103	CD, 0.01μF, +80%, -20%
C562	24797478	EL, 0.47μF, ±20%, 50V
C563	24567104	PF, 0.1μF
C564	24567104	PF, 0.1μF
C565	24567223	PF, 0.022μF
C566	24797229	EL, 2.2μF, ±20%, 50V
C567	24232103	CD, 0.01μF, +80%, -20%
C568	24232103	CD, 0.01μF, +80%, -20%
C569	24232103	CD, 0.01μF, +80%, -20%

Location No.	Part No.	Description
C580	24567104	PF, 0.1μF
C601	24591682	PF, 6800pF
C602	24591682	PF, 6800pF
C609	24794471	EL, 470μF, ±20%, 16V
C610	24591102	PF, 1000pF
C611	24591102	PF, 1000pF
C612	24797479	EL, 4.7μF, ±20%, 50V
C613	24797479	EL, 4.7μF, ±20%, 50V
C614	24669102	EL, 1000μF, ±20%, 50V
C615	24669102	EL, 1000μF, ±20%, 50V
C616	24591124	PF, 0.12μF
C617	24591124	PF, 0.12μF
C618	24797478	EL, 0.47μF, ±20%, 50V
C619	24793220	EL, 22μF, ±20%, 10V
C620	24795470	EL, 47μF, ±20%, 25V
C621	24795470	EL, 47μF, ±20%, 25V
C622	24795470	EL, 47μF, ±20%, 25V
C623	24797479	EL, 4.7μF, ±20%, 50V
C624	24591103	PF, 0.01μF
C625	24797102	EL, 1000μF, ±20%, 50V
C627	24794100	EL, 10μF, ±20%, 16V
C665	24797010	EL, 1μF, ±20%, 50V
C666	24797010	EL, 1μF, ±20%, 50V
C704	24232103	CD, 0.01μF, +80%, -20%
C705	24206479	EL, 4.7μF, ±20%, 50V
C707	24797470	EL, 47μF, ±20%, 50V
C712	24797470	EL, 47μF, ±20%, 50V
C713	24790470	EL, 47μF, ±20%, 160V
C715	24214472	CD, 4700pF, ±10%, 500V
C717	24214472	CD, 4700pF, ±10%, 500V
C718	24666470	EL, 47μF, ±20%, 16V
C719	24435560	CD, 56pF, 500V
C720	24790220	EL, 22μF, ±20%, 160V
C721	24666470	EL, 47μF, ±20%, 16V
C722	24436820	CD, 82pF
C726	24212102	CD, 1000pF, ±10%
C760	24797470	EL, 47μF, ±20%, 50V
C761	24212102	CD, 1000pF, ±10%
C762	24797470	EL, 47μF, ±20%, 50V
C765	24214472	CD, 4700pF, ±10%, 500V
C766	24214472	CD, 4700pF, ±10%, 500V
C767	24790470	EL, 47μF, ±20%, 160V
C768	24666470	EL, 47μF, ±20%, 16V
C769	24666470	EL, 47μF, ±20%, 16V
C770	24435560	CD, 56pF, 500V
C771	24790220	EL, 22μF, ±20%, 160V
C780	24797470	EL, 47μF, ±20%, 50V
C781	24212102	CD, 1000pF, ±10%
C782	24797470	EL, 47μF, ±20%, 50V
C784	24214472	CD, 4700pF, ±10%, 500V
C786	24214472	CD, 4700pF, ±10%, 500V
C787	24790470	EL, 47μF, ±20%, 160V
C788	24666470	EL, 47μF, ±20%, 16V
C789	24666470	EL, 47μF, ±20%, 16V
C790	24435560	CD, 56pF, 500V
C791	24790220	EL, 22μF, ±20%, 160V
C792	24666100	EL, 10μF, ±20%, 16V
⚠C801	24503002	PF, 0.22μF, ±20%, AC275V
⚠C802	24092557	CD, 220pF, ±20%, AC250V
⚠C803	24092557	CD, 220pF, ±20%, AC250V
⚠C804	24092570	CD, 3300pF, ±20%, AC250V
⚠C805	24503002	PF, 0.22μF, ±20%, AC275V
⚠C806	24503002	PF, 0.22μF, ±20%, AC275V
⚠C807	24092557	CD, 220pF, ±20%, AC250V

Location No.	Part No.	Description
⚠C808	24503002	PF, 0.22μF, ±20%, AC275V
C811	24678478	EL, 0.47μF, ±20%, 200V
C814	24678229	EL, 2.2μF, ±20%, 200V
C815	24567474	PF, 0.47μF
C816	24617817	EL, 22μF, ±20%, 50V
C817	24567224	PF, 0.22μF
C819	24214102	CD, 1000pF, ±10%, 500V
C820	24567224	PF, 0.22μF
C821	24092480	CD, 680pF, ±10%, 2kV
C822	24092481	CD, 820pF, ±10%, 2kV
⚠C823	24092478	CD, 470pF, ±10%, 2kV
C825	24591472	PF, 4700pF
C826	24092474	CD, 220pF, ±10%, 2kV
C828	24820683	PF, 0.068μF, 630V
C829	24617820	EL, 100μF, ±20%, 50V
C830	24567105	PF, 1μF
C831	24669220	EL, 22μF, ±20%, 50V
C832	24503001	PF, 0.1μF
C833	24073101	EL, 47μF, ±20%, 400V
C836	24667101	EL, 100μF, ±20%, 25V
C837	24666331	EL, 330μF, ±20%, 16V
C839	24669220	EL, 22μF, ±20%, 50V
C840	24591104	PF, 0.1μF
C841	24669220	EL, 22μF, ±20%, 50V
C842	24591104	PF, 0.1μF
C843	24669010	EL, 1μF, ±20%, 50V
C844	24092281	CD, 4700pF, ±20%, AC250V
C845	24092281	CD, 4700pF, ±20%, AC250V
C846	24073098	EL, 4.7μF, ±20%, 450V
C847	24669479	EL, 4.7μF, ±20%, 50V
C848	24567473	PF, 0.047μF
C849	24082081	PF, 0.033μF, 630V
C850	24086068	EL, 820μF, ±20%, 200V
C851	24086068	EL, 820μF, ±20%, 200V
C852	24666100	EL, 10μF, ±20%, 16V
C853	24591104	PF, 0.1μF
C858	24214471	CD, 470pF, ±10%, 500V
C859	24214471	CD, 470pF, ±10%, 500V
C860	24668222	EL, 2200μF, ±20%, 35V
C861	24617810	EL, 4700μF, ±20%, 35V
C863	24617810	EL, 4700μF, ±20%, 35V
C864	24677470	EL, 47μF, ±20%, 160V
C865	24667471	EL, 470μF, ±20%, 25V
C866	24667471	EL, 470μF, ±20%, 25V
C869	24669222	EL, 2200μF, ±20%, 50V
C874	24212102	CD, 1000pF, ±10%
C875	24667472	EL, 4700μF, ±20%, 25V
C876	24086916	EL, 330μF, ±20%, 160V
C879	24092475	CD, 270pF, ±10%, 2kV
C880	24092475	CD, 270pF, ±10%, 2kV
C882	24617817	EL, 22μF, ±20%, 50V
C883	24082229	PF, 0.1μF, ±10%, 250V
C884	24617816	EL, 10μF, ±20%, 50V
C885	24617813	EL, 2.2μF, ±20%, 50V
C886	24797100	EL, 10μF, ±20%, 50V
C887	24794470	EL, 47μF, ±20%, 16V
C889	24669010	EL, 1μF, ±20%, 50V
C890	24797100	EL, 10μF, ±20%, 50V
C891	24794470	EL, 47μF, ±20%, 16V
C892	24669229	EL, 2.2μF, ±20%, 50V
C893	24797100	EL, 10μF, ±20%, 50V
C894	24794470	EL, 47μF, ±20%, 16V
C895	24797100	EL, 10μF, ±20%, 50V
C896	24794470	EL, 47μF, ±20%, 16V

Location No.	Part No.	Description
C897	24797100	EL, 10μF, ±20%, 50V
C898	24794470	EL, 47μF, ±20%, 16V
C901	24211102	CD, 1000pF, ±10%, 2kV
C902	24794100	EL, 10μF, ±20%, 16V
C903	24232103	CD, 0.01μF, +80%, -20%
C904	24436391	CD, 390pF
C907	24214101	CD, 100pF, ±10%, 500V
C908	24436390	CD, 39pF
C909	24794470	EL, 47μF, ±20%, 16V
C911	24211102	CD, 1000pF, ±10%, 2kV
C912	24794100	EL, 10μF, ±20%, 16V
C913	24232103	CD, 0.01μF, +80%, -20%
C914	24436471	CD, 470pF
C915	24679330	EL, 33μF, ±20%, 250V
C917	24214101	CD, 100pF, ±10%, 500V
C918	24567104	PF, 0.1μF
C919	24794470	EL, 47μF, ±20%, 16V
C921	24211102	CD, 1000pF, ±10%, 2kV
C922	24794100	EL, 10μF, ±20%, 16V
C923	24436391	CD, 390pF
C924	24232103	CD, 0.01μF, +80%, -20%
C926	24214101	CD, 100pF, ±10%, 500V
C927	24567104	PF, 0.1μF
C928	24794100	EL, 10μF, ±20%, 16V
C961	24794100	EL, 10μF, ±20%, 16V
C962	24794100	EL, 10μF, ±20%, 16V
C963	24567104	PF, 0.1μF
C964	24567104	PF, 0.1μF
C3051	24666330	EL, 33μF, ±20%, 16V
C3150	24666102	EL, 1000μF, ±20%, 16V
C4402	24669010	EL, 1μF, ±20%, 50V
C4405	24591103	PF, 0.01μF
C4408	24591103	PF, 0.01μF
C4418	24591103	PF, 0.01μF
C4425	24669010	EL, 1μF, ±20%, 50V
C4426	24666101	EL, 100μF, ±20%, 16V
C4430	24669479	EL, 4.7μF, ±20%, 50V
C4447	24591103	PF, 0.01μF
C7704	24667101	EL, 100μF, ±20%, 25V
C7705	24567474	PF, 0.47μF
C7706	24567474	PF, 0.47μF
C7707	24667101	EL, 100μF, ±20%, 25V
C7708	24436150	CD, 15pF
C7709	24436150	CD, 15pF
C7710	24436150	CD, 15pF
C7711	24436150	CD, 15pF
C7712	24436150	CD, 15pF
C7713	24436150	CD, 15pF
C7714	24436150	CD, 15pF
C7715	24436150	CD, 15pF
C7716	24436150	CD, 15pF
C7717	24436150	CD, 15pF
C7718	24436150	CD, 15pF
C7719	24436150	CD, 15pF
C7721	24212102	CD, 1000pF, ±10%
C7722	24436331	CD, 330pF
C7724	24667331	EL, 330μF, ±20%, 25V
C7725	24667331	EL, 330μF, ±20%, 25V
C7726	24212102	CD, 1000pF, ±10%
C7727	24436331	CD, 330pF
C7729	24212102	CD, 1000pF, ±10%
C7730	24436331	CD, 330pF
C7732	24436331	CD, 330pF
C7733	24436331	CD, 330pF

Location No.	Part No.	Description
C7735	24667331	EL, 330μF, ±20%, 25V
C7736	24667331	EL, 330μF, ±20%, 25V
C7737	24212102	CD, 1000pF, ±10%
C7738	24436331	CD, 330pF
C7740	24436331	CD, 330pF
C7741	24436331	CD, 330pF
C7751	24667101	EL, 100μF, ±20%, 25V
C7752	24567474	PF, 0.47μF
C7753	24567474	PF, 0.47μF
C7754	24667101	EL, 100μF, ±20%, 25V
C7760	24667470	EL, 47μF, ±20%, 25V
C7761	24667100	EL, 10μF, ±20%, 25V
C7763	24667470	EL, 47μF, ±20%, 25V
C7767	24667101	EL, 100μF, ±20%, 25V
C7768	24667101	EL, 100μF, ±20%, 25V
C7769	24232103	CD, 0.01μF, +80%, -20%
C7770	24667471	EL, 470μF, ±20%, 25V
C7771	24667471	EL, 470μF, ±20%, 25V
C7774	24436101	CD, 100pF
C7776	24667100	EL, 10μF, ±20%, 25V
C7779	24436331	CD, 330pF
C7830	24667100	EL, 10μF, ±20%, 25V
⚠C8130	24503001	PF, 0.1μF
C8610	24669478	EL, 0.47μF, ±20%, 50V
C8611	24669478	EL, 0.47μF, ±20%, 50V
C8612	24669478	EL, 0.47μF, ±20%, 50V
C8613	24669478	EL, 0.47μF, ±20%, 50V
CA13	24474101	CD, 100pF, ±10%
CA30	24474101	CD, 100pF, ±10%
CA33	24232103	CD, 0.01μF, +80%, -20%
CA37	24474101	CD, 100pF, ±10%
CA38	24474101	CD, 100pF, ±10%
CA40	24474101	CD, 100pF, ±10%
CA41	24474101	CD, 100pF, ±10%
CA42	24794100	EL, 10μF, ±20%, 16V
CA43	24232103	CD, 0.01μF, +80%, -20%
CA44	24232103	CD, 0.01μF, +80%, -20%
CA68	24794100	EL, 10μF, ±20%, 16V
CA69	24232103	CD, 0.01μF, +80%, -20%
CA80	24794100	EL, 10μF, ±20%, 16V
CA421	24232103	CD, 0.01μF, +80%, -20%
CB01	24794470	EL, 47μF, ±20%, 16V
CB90	24232103	CD, 0.01μF, +80%, -20%
CC01	24212103	CD, 0.01μF, ±10%
CC23	24436220	CD, 22pF
CC33	24436101	CD, 100pF
CF01	24793471	EL, 470μF, ±20%, 10V (50D9UXE/50D9UXA)
CF03	24567104	PF, 0.1μF (50D9UXE/50D9UXA)
CF04	24766101	EL, 100μF, ±20%, 50V (50D9UXE/50D9UXA)
CF05	24766101	EL, 100μF, ±20%, 50V (50D9UXE/50D9UXA)
CF06	24353220	CD, 22pF, CH (50D9UXE/50D9UXA)
CF07	24353220	CD, 22pF, CH (50D9UXE/50D9UXA)
CF08	24567104	PF, 0.1μF (50D9UXE/50D9UXA)
CF09	24567104	PF, 0.1μF (50D9UXE/50D9UXA)
CF10	24206100	EL, 10μF, ±20%, 50V (50D9UXE/50D9UXA)
CF11	24567104	PF, 0.1μF (50D9UXE/50D9UXA)
CF12	24232103	CD, 0.01μF, +80%, -20% (50D9UXE/50D9UXA)

Location No.	Part No.	Description
CF13	24436101	CD, 100pF (50D9UXE/50D9UXA)
CF14	24232103	CD, 0.01μF, +80%, -20% (50D9UXE/50D9UXA)
CF15	24232103	CD, 0.01μF, +80%, -20% (50D9UXE/50D9UXA)
CF16	24567224	PF, 0.22μF (50D9UXE/50D9UXA)
CG01	24567124	PF, 0.12μF
CG02	24567104	PF, 0.1μF
CG03	24567823	PF, 0.082μF
CG04	24206010	EL, 1μF, ±20%, 50V
CG05	24797220	EL, 22μF, ±20%, 50V
CG07	24206010	EL, 1μF, ±20%, 50V
CG08	24206010	EL, 1μF, ±20%, 50V
CG09	24206010	EL, 1μF, ±20%, 50V
CG12	24591273	PF, 0.027μF
CG13	24232103	CD, 0.01μF, +80%, -20%
CG14	24203101	EL, 100μF, ±20%, 16V
CG15	24591822	PF, 8200pF
CG16	24206010	EL, 1μF, ±20%, 50V
CG17	24591273	PF, 0.027μF
CG18	24591822	PF, 8200pF
CG20	24203100	EL, 10μF, ±20%, 16V
CG24	24474102	CD, 1000pF, ±10%
CG25	24206229	EL, 2.2μF, ±20%, 50V
CG26	24206229	EL, 2.2μF, ±20%, 50V
CG30	24203100	EL, 10μF, ±20%, 16V
CG31	24232103	CD, 0.01μF, +80%, -20%
CG32	24232103	CD, 0.01μF, +80%, -20%
CG33	24232103	CD, 0.01μF, +80%, -20%
CR12	24567104	PF, 0.1μF
CR13	24567104	PF, 0.1μF
CR14	24567104	PF, 0.1μF
CR99	24232103	CD, 0.01μF, +80%, -20%
CS01	24206229	EL, 2.2μF, ±20%, 50V
CS02	24206229	EL, 2.2μF, ±20%, 50V
CS03	24797229	EL, 2.2μF, ±20%, 50V
CS05	24206229	EL, 2.2μF, ±20%, 50V
CS06	24206229	EL, 2.2μF, ±20%, 50V
CS07	24206229	EL, 2.2μF, ±20%, 50V
CS08	24206229	EL, 2.2μF, ±20%, 50V
CS09	24206229	EL, 2.2μF, ±20%, 50V
CS14	24206100	EL, 10μF, ±20%, 50V
CS15	24206100	EL, 10μF, ±20%, 50V
CS16	24206229	EL, 2.2μF, ±20%, 50V
CS19	24206478	EL, 0.47μF, ±20%, 50V
CS20	24206100	EL, 10μF, ±20%, 50V
CS21	24206100	EL, 10μF, ±20%, 50V
CS670	24669100	EL, 10μF, ±20%, 50V
CS671	24669100	EL, 10μF, ±20%, 50V
CS672	24212101	CD, 100pF, ±10%
CS673	24212102	CD, 1000pF, ±10%
CS674	24669100	EL, 10μF, ±20%, 50V
CS675	24669100	EL, 10μF, ±20%, 50V
CS676	24669100	EL, 10μF, ±20%, 50V
CS677	24668221	EL, 220μF, ±20%, 35V
CS678	24206229	EL, 2.2μF, ±20%, 50V
CV02	24073077	EL, 0.1μF, ±20%, 50V
CV03	24073077	EL, 0.1μF, ±20%, 50V
CV04	24073077	EL, 0.1μF, ±20%, 50V
CV05	24232103	CD, 0.01μF, +80%, -20%
CV06	24073077	EL, 0.1μF, ±20%, 50V
CV07	24232103	CD, 0.01μF, +80%, -20%

Location No.	Part No.	Description
CV08	24763221	EL, 220μF, ±20%, 16V
CV09	24073077	EL, 0.1μF, ±20%, 50V
CV12	24567104	PF, 0.1μF
CV23	24794101	EL, 100μF, ±20%, 16V
CV24	24232103	CD, 0.01μF, +80%, -20%
CV25	24794220	EL, 22μF, ±20%, 16V
CV26	24567473	PF, 0.047μF
CV35	24474102	CD, 1000pF, ±10%
CV37	24474102	CD, 1000pF, ±10%
CV46	24232103	CD, 0.01μF, +80%, -20%
CV48	24232103	CD, 0.01μF, +80%, -20%
CV51	24666101	EL, 100μF, ±20%, 16V
CV52	24666100	EL, 10μF, ±20%, 16V
CV55	24232103	CD, 0.01μF, +80%, -20%
CV64	24797010	EL, 1μF, ±20%, 50V
CV71	24794471	EL, 470μF, ±20%, 16V
CV73	24212103	CD, 0.01μF, ±10%
CY102	24666221	EL, 220μF, ±20%, 16V
CY103	24232103	CD, 0.01μF, +80%, -20%
CY104	24794101	EL, 100μF, ±20%, 16V
CY109	24232103	CD, 0.01μF, +80%, -20%
CY111	24797479	EL, 4.7μF, ±20%, 50V
CY117	24232103	CD, 0.01μF, +80%, -20%
CY601	24794101	EL, 100μF, ±20%, 16V
CY602	24797479	EL, 4.7μF, ±20%, 50V
CY603	24797479	EL, 4.7μF, ±20%, 50V
CY604	24794102	EL, 1000μF, ±20%, 16V
CY605	24797479	EL, 4.7μF, ±20%, 50V
CY606	24797479	EL, 4.7μF, ±20%, 50V
CY608	24794101	EL, 100μF, ±20%, 16V
CY610	24797478	EL, 0.47μF, ±20%, 50V
CZ01	24474101	CD, 100pF, ±10%
CZ02	24474101	CD, 100pF, ±10%
CZ03	24085901	EL, 0.47μF, ±20%, 50V, Non-Polar
CZ05	24232103	CD, 0.01μF, +80%, -20%
CZ07	24567104	PF, 0.1μF
CZ09	24473220	CD, 22pF
CZ10	24473100	CD, 10pF
CZ11	24473220	CD, 22pF
CZ12	24232103	CD, 0.01μF, +80%, -20%
CZ13	24232103	CD, 0.01μF, +80%, -20%
CZ14	24794100	EL, 10μF, ±20%, 16V
CZ17	24232103	CD, 0.01μF, +80%, -20%
CZ19	24474181	CD, 180pF, ±10%
CZ20	24232103	CD, 0.01μF, +80%, -20%
CZ21	24212122	CD, 1200pF, ±10%
CZ22	24794100	EL, 10μF, ±20%, 16V
CZ23	24232103	CD, 0.01μF, +80%, -20%
CZ24	24232103	CD, 0.01μF, +80%, -20%
CZ25	24794100	EL, 10μF, ±20%, 16V
CZ26	24232103	CD, 0.01μF, +80%, -20%
CZ28	24232103	CD, 0.01μF, +80%, -20%
CZ29	24232103	CD, 0.01μF, +80%, -20%
CZ30	24794100	EL, 10μF, ±20%, 16V
CZ31	24567104	PF, 0.1μF
CZ32	24474101	CD, 100pF, ±10%
CZ33	24473270	CD, 27pF
CZ34	24474101	CD, 100pF, ±10%
CZ35	24473270	CD, 27pF
CZ45	24473100	CD, 10pF

Location No.	Part No.	Description
RESISTORS		
R180	24366103	CF, 10k ohm
R181	24366103	CF, 10k ohm
R185	24366103	CF, 10k ohm
R186	24366103	CF, 10k ohm
R204	24366104	CF, 100k ohm
R205	24366101	CF, 100 ohm
R206	24366221	CF, 220 ohm
R213	24366681	CF, 680 ohm
R214	24366681	CF, 680 ohm
R215	24366681	CF, 680 ohm
R216	24366103	CF, 10k ohm
R218	24366101	CF, 100 ohm
R219	24366101	CF, 100 ohm
R220	24366101	CF, 100 ohm
R229	24366392	CF, 3900 ohm
R230	24366101	CF, 100 ohm
R231	24366222	CF, 2200 ohm
R235	24366222	CF, 2200 ohm
R236	24366101	CF, 100 ohm
R237	24366101	CF, 100 ohm
R238	24366562	CF, 5600 ohm
R241	24367563	CF, 56k ohm, ±2%
R242	24367153	CF, 15k ohm, ±2%
R247	24366102	CF, 1k ohm
R258	24366101	CF, 100 ohm
R259	24366101	CF, 100 ohm
R260	24366222	CF, 2200 ohm
R261	24366681	CF, 680 ohm
R262	24366102	CF, 1k ohm
R263	24366102	CF, 1k ohm
R264	24366103	CF, 10k ohm
R265	24366392	CF, 3900 ohm
R266	24366332	CF, 3300 ohm
R267	24366101	CF, 100 ohm
R269	24366151	CF, 150 ohm
R270	24366102	CF, 1k ohm
R271	24366472	CF, 4700 ohm
R272	24366222	CF, 2200 ohm
R273	24366821	CF, 820 ohm
R274	24366103	CF, 10k ohm
R275	24366392	CF, 3900 ohm
R276	24366102	CF, 1k ohm
R277	24366101	CF, 100 ohm
R278	24366102	CF, 1k ohm
R279	24366332	CF, 3300 ohm
R301	24366103	CF, 10k ohm
R302	24366101	CF, 100 ohm
R303	24366103	CF, 10k ohm
R304	24366103	CF, 10k ohm
R305	24322828	MF, 0.82 ohm, 1W
R306	24366123	CF, 12k ohm
R307	24366101	CF, 100 ohm
R308	24366101	CF, 100 ohm
R310	24366562	CF, 5600 ohm
R312	24366103	CF, 10k ohm
R314	24366473	CF, 47k ohm
R315	24366821	CF, 820 ohm
R316	24366102	CF, 1k ohm
R319	24366100	CF, 10 ohm
R320	24000249	MF, 47k ohm, 1/4W
R321	24366472	CF, 4700 ohm
R322	24000635	MF, 12k ohm, ±1%, 1/4W
R323	24000635	MF, 12k ohm, ±1%, 1/4W

Location No.	Part No.	Description
R324	24366103	CF, 10k ohm
R325	24366472	CF, 4700 ohm
R326	24366103	CF, 10k ohm
R327	24366103	CF, 10k ohm
R328	24000633	MF, 10k ohm, 1/4W
R329	24366103	CF, 10k ohm
R330	24000221	MF, 20k ohm, 1/4W
R331	24019119	MF, 30k ohm, 1/6W
R332	24000525	MF, 4700 ohm, 1/4W
R333	24366103	CF, 10k ohm
R334	24366102	CF, 1k ohm
R335	24366102	CF, 1k ohm
R336	24366102	CF, 1k ohm
R337	24321129	MF, 1.2 ohm, 1/2W
R338	24366123	CF, 12k ohm
R339	24366393	CF, 39k ohm
R340	24366824	CF, 820k ohm
R341	24366273	CF, 27k ohm
R342	24366822	CF, 8200 ohm
R343	24366102	CF, 1k ohm
R344	24382271	OMF, 270 ohm, 1W
R346	24382391	OMF, 390 ohm, 1W
R347	24366103	CF, 10k ohm
R348	24366103	CF, 10k ohm
R349	24366392	CF, 3900 ohm
R350	24366822	CF, 8200 ohm
R351	24366472	CF, 4700 ohm
R360	24366123	CF, 12k ohm
R362	24366103	CF, 10k ohm
R363	24366682	CF, 6800 ohm
R364	24366103	CF, 10k ohm
R370	24366222	CF, 2200 ohm
R371	24366824	CF, 820k ohm
R372	24366333	CF, 33k ohm
R373	24366823	CF, 82k ohm
R374	24366104	CF, 100k ohm
R375	24366153	CF, 15k ohm
R376	24366333	CF, 33k ohm
R377	24366102	CF, 1k ohm
R378	24366562	CF, 5600 ohm
R379	24366103	CF, 10k ohm
R380	24366223	CF, 22k ohm
R381	24366822	CF, 8200 ohm
R385	24366102	CF, 1k ohm
R386	24366103	CF, 10k ohm
R390	24383561	OMF, 560 ohm, 2W
R391	24383561	OMF, 560 ohm, 2W
R392	24383561	OMF, 560 ohm, 2W
R401	24366391	CF, 390 ohm
R403	24366392	CF, 3900 ohm
R403	24382561	OMF, 560 ohm, 1W
R404	24366103	CF, 10k ohm
R405	24366101	CF, 100 ohm
R406	24382222	OMF, 2200 ohm, 1W
R407	24381100	OMF, 10 ohm, 1/2W
R409	24384220	OMF, 22 ohm, 3W
R410	24384220	OMF, 22 ohm, 3W
R411	24323479	MF, 4.7 ohm, 2W
R412	24383223	OMF, 22k ohm, 2W
R413	24366101	CF, 100 ohm
R414	24019259	FR, 27ohm, 1/4W
R416	24383121	OMF, 120 ohm, 2W
R419	24942102	CC, 1k ohm, 1/2W
R421	24382104	OMF, 100k ohm, 1W

Location No.	Part No.	Description
R424	24366103	CF, 10k ohm
R430	24366105	CF, 1M ohm
R431	24383102	OMF, 1k ohm, 2W
R432	24942274	CC, 270k ohm, 1/2W
R433	24942274	CC, 270k ohm, 1/2W
R434	24942274	CC, 270k ohm, 1/2W
R436	24366101	CF, 100 ohm
R443	24310109	MF, 1.0 ohm, 1/2W
R444	24338398	MF, 0.39 ohm, 1W
R445	24366102	CF, 1k ohm
R446	24366153	CF, 15k ohm
R447	24382473	OMF, 47k ohm, 1W
R448	24366103	CF, 10k ohm
R449	24366152	CF, 1500 ohm
R452	24366102	CF, 1k ohm
R453	24366102	CF, 1k ohm
R460	24366103	CF, 10k ohm
R461	24366103	CF, 10k ohm
R462	24366103	CF, 10k ohm
R463	24366103	CF, 10k ohm
R464	24366472	CF, 4700 ohm
R465	24366474	CF, 470k ohm
R467	24366124	CF, 120k ohm
R468	24366153	CF, 15k ohm
R469	24366101	CF, 100 ohm
R470	24366224	CF, 220k ohm
R471	24000112	FR, 10 ohm, 1/4W
R472	24366153	CF, 15k ohm
R473	24000633	MF, 10k ohm, 1/4W
R474	24000358	MF, 1k ohm, 1/4W
R476	24000368	MF, 2700 ohm, 1/4W
R478	24339828	MF, 0.82 ohm, 2W
R479	24366823	CF, 82k ohm
R480	24000639	MF, 22k ohm, 1/4W
R482	24366103	CF, 10k ohm
R483	24366102	CF, 1k ohm
R484	24366474	CF, 470k ohm
R485	24366103	CF, 10k ohm
R486	24366103	CF, 10k ohm
R488	24366392	CF, 3900 ohm
R489	24366222	CF, 2200 ohm
R490	24366331	CF, 330 ohm
R491	24366682	CF, 6800 ohm
R492	24366272	CF, 2700 ohm
R493	24366152	CF, 1500 ohm
R494	24366102	CF, 1k ohm
R498	24366103	CF, 10k ohm
R502	24366101	CF, 100 ohm
R503	24366101	CF, 100 ohm
R504	24366682	CF, 6800 ohm
R505	24366272	CF, 2700 ohm
R506	24366822	CF, 8200 ohm
R507	24366101	CF, 100 ohm
R508	24366472	CF, 4700 ohm
R509	24366101	CF, 100 ohm
R510	24366101	CF, 100 ohm
R513	24366472	CF, 4700 ohm
R514	24366472	CF, 4700 ohm
R515	24366222	CF, 2200 ohm
R516	24366222	CF, 2200 ohm
R518	24366100	CF, 10 ohm
R520	24366100	CF, 10 ohm
R522	24366100	CF, 10 ohm
R524	24366103	CF, 10k ohm

Location No.	Part No.	Description
R526	24366472	CF, 4700 ohm
R562	24366273	CF, 27k ohm
R563	24366392	CF, 3900 ohm
R580	24366681	CF, 680 ohm
R581	24366103	CF, 10k ohm
R590	24366101	CF, 100 ohm
R591	24366472	CF, 4700 ohm
R592	24366472	CF, 4700 ohm
R593	24366102	CF, 1k ohm
R594	24366102	CF, 1k ohm
R595	24366472	CF, 4700 ohm
R596	24366102	CF, 1k ohm
R597	24366821	CF, 820 ohm
R607	24366103	CF, 10k ohm
R608	24366103	CF, 10k ohm
R609	24366103	CF, 10k ohm
R610	24366392	CF, 3900 ohm
R611	24366392	CF, 3900 ohm
R612	24366123	CF, 12k ohm
R613	24366123	CF, 12k ohm
R614	24366562	CF, 5600 ohm
R615	24366562	CF, 5600 ohm
R616	24366229	CF, 2.2 ohm
R617	24366229	CF, 2.2 ohm
R618	24366223	CF, 22k ohm
R619	24366223	CF, 22k ohm
R620	24366104	CF, 100k ohm
R621	24366223	CF, 22k ohm
R622	24366223	CF, 22k ohm
R623	24366223	CF, 22k ohm
R626	24366224	CF, 220k ohm
R688	24552391	OMF, 390 ohm, 1/2W
R690	24552391	OMF, 390 ohm, 1/2W
R702	24552221	OMF, 220 ohm, 1/2W
R709	24366563	CF, 56k ohm
R713	24366273	CF, 27k ohm
R715	24366333	CF, 33k ohm
R716	24366273	CF, 27k ohm
R717	24366333	CF, 33k ohm
R718	24366101	CF, 100 ohm
R719	24366100	CF, 10 ohm
R720	24366102	CF, 1k ohm
R722	24552471	OMF, 470 ohm, 1/2W
R723	24366101	CF, 100 ohm
R724	24366151	CF, 150 ohm
R725	24366821	CF, 820 ohm
R730	24552100	OMF, 10 ohm, 1/2W
R731	24552331	OMF, 330 ohm, 1/2W
R732	24366470	CF, 47 ohm
R733	24366683	CF, 68k ohm
R734	24366470	CF, 47 ohm
R735	24366683	CF, 68k ohm
R736	24553270	OMF, 27 ohm, 1W
R737	24366751	CF, 750 ohm
R738	24366102	CF, 1k ohm
R739	24366751	CF, 750 ohm
R740	24553270	OMF, 27 ohm, 1W
R741	24322399	MF, 3.9 ohm, 1W
R742	24321399	MF, 3.9 ohm, 1/2W
R743	24554221	OMF, 220 ohm, 2W
R744	24366122	CF, 1200 ohm
R745	24366122	CF, 1200 ohm
R761	24366273	CF, 27k ohm
R762	24366563	CF, 56k ohm

Location No.	Part No.	Description
R763	24552331	OMF, 330 ohm, 1/2W
R764	24366470	CF, 47 ohm
R765	24552100	OMF, 10 ohm, 1/2W
R766	24366470	CF, 47 ohm
R767	24552221	OMF, 220 ohm, 1/2W
R768	24366751	CF, 750 ohm
R769	24366122	CF, 1200 ohm
R770	24553270	OMF, 27 ohm, 1W
R771	24322399	MF, 3.9 ohm, 1W
R772	24366683	CF, 68k ohm
R773	24366683	CF, 68k ohm
R774	24366751	CF, 750 ohm
R775	24366122	CF, 1200 ohm
R776	24553270	OMF, 27 ohm, 1W
R777	24321399	MF, 3.9 ohm, 1/2W
R778	24366102	CF, 1k ohm
R779	24554221	OMF, 220 ohm, 2W
R781	24366273	CF, 27k ohm
R782	24366563	CF, 56k ohm
R783	24552221	OMF, 220 ohm, 1/2W
R784	24552100	OMF, 10 ohm, 1/2W
R785	24366470	CF, 47 ohm
R786	24366751	CF, 750 ohm
R787	24366122	CF, 1200 ohm
R788	24366683	CF, 68k ohm
R789	24366683	CF, 68k ohm
R790	24366751	CF, 750 ohm
R791	24366122	CF, 1200 ohm
R792	24366102	CF, 1k ohm
R793	24321399	MF, 3.9 ohm, 1/2W
R794	24553270	OMF, 27 ohm, 1W
R795	24322399	MF, 3.9 ohm, 1W
R796	24554221	OMF, 220 ohm, 2W
R797	24366470	CF, 47 ohm
R798	24552331	OMF, 330 ohm, 1/2W
R799	24553270	OMF, 27 ohm, 1W
R802	24366102	CF, 1k ohm
R803	24366683	CF, 68k ohm
R805	24366101	CF, 100 ohm
R806	24366101	CF, 100 ohm
R807	24367273	CF, 27k ohm, ±2%
R808	24552470	OMF, 47 ohm, 1/2W
R809	24321689	MF, 6.8 ohm, 1/2W
R810	24383680	OMF, 68 ohm, 2W
R811	24552121	OMF, 120 ohm, 1/2W
R812	24552390	OMF, 39 ohm, 1/2W
R814	24552821	OMF, 820 ohm, 1/2W
R816	24384104	OMF, 100k ohm, 3W
⚠R817	24009954	Metal-Glazed Resistor, 2.2M ohm, 1/2W
⚠R819	24009954	Metal-Glazed Resistor, 2.2M ohm, 1/2W
R820	24007061	Cement, 1.8 ohm, ±10%, 2W
R821	24045006	Cement, 4.7 ohm, 7W
R822	24366104	CF, 100k ohm
R823	24553820	OMF, 82 ohm, 1W
R832	24321828	MF, 0.82 ohm, 1/2W
R833	24321189	MF, 1.8 ohm, 1/2W
R834	24366330	CF, 33 ohm
R835	24366150	CF, 15 ohm
R836	24338109	MF, 1 ohm, 1W
R837	24321479	MF, 4.7 ohm, 1/2W
R838	24383333	OMF, 33k ohm, 2W
R839	24383473	OMF, 47k ohm, 2W

Location No.	Part No.	Description
R840	24382124	OMF, 120k ohm, 1W
R841	24366102	CF, 1k ohm
R842	24366332	CF, 3300 ohm
R843	24366332	CF, 3300 ohm
R844	24366473	CF, 47k ohm
R845	24366153	CF, 15k ohm
R846	24366331	CF, 330 ohm
R847	24366331	CF, 330 ohm
R854	24553121	OMF, 120 ohm, 1W
R855	24553271	OMF, 270 ohm, 1W
R856	24366152	CF, 1500 ohm
R857	24381682	OMF, 6800 ohm, 1/2W
R858	24366102	CF, 1k ohm
R859	24382333	OMF, 33k ohm, 1W
⚠R861	24005015	Metal-Glazed Resistor, 8.2M ohm, 1W
R862	24366104	CF, 100k ohm
R863	24366101	CF, 100 ohm
R864	24382333	OMF, 33k ohm, 1W
R865	24545109	FR, 1 ohm, 1/4W
R870	24552100	OMF, 10 ohm, 1/2W
R874	24366109	CF, 1 ohm
R881	24366472	CF, 4700 ohm
R882	24366222	CF, 2200 ohm
R883	24366472	CF, 4700 ohm
R884	24366222	CF, 2200 ohm
R885	24366472	CF, 4700 ohm
R886	24366222	CF, 2200 ohm
R901	24366101	CF, 100 ohm
R903	24942102	CC, 1k ohm, 1/2W
R905	24366470	CF, 47 ohm
R906	24366331	CF, 330 ohm
R908	24366680	CF, 68 ohm
R909	24366470	CF, 47 ohm
R911	24366101	CF, 100 ohm
R912	24019416	MF, 0.1 ohm, 1/2W
R913	24942102	CC, 1k ohm, 1/2W
R915	24366330	CF, 33 ohm
R916	24366331	CF, 330 ohm
R918	24366470	CF, 47 ohm
R919	24366470	CF, 47 ohm
R920	24366153	CF, 15k ohm
R921	24366101	CF, 100 ohm
R923	24942102	CC, 1k ohm, 1/2W
R925	24366470	CF, 47 ohm
R926	24366331	CF, 330 ohm
R927	24366100	CF, 10 ohm
R928	24366680	CF, 68 ohm
R929	24366470	CF, 47 ohm
R930	24366153	CF, 15k ohm
R931	24383153	OMF, 15k ohm, 2W
R932	24383153	OMF, 15k ohm, 2W
R933	24000945	FR, 1.8 ohm, 2W
R936	24383153	OMF, 15k ohm, 2W
R937	24383153	OMF, 15k ohm, 2W
R938	24366150	CF, 15 ohm
R941	24554153	OMF, 15k ohm, 2W
R942	24554153	OMF, 15k ohm, 2W
R943	24554153	OMF, 15k ohm, 2W
R944	24383153	OMF, 15k ohm, 2W
R945	24366150	CF, 15 ohm
R948	24366562	CF, 5600 ohm
R949	24366153	CF, 15k ohm
R951	24554153	OMF, 15k ohm, 2W

Location No.	Part No.	Description
R952	24554153	OMF, 15k ohm, 2W
R953	24554153	OMF, 15k ohm, 2W
R954	24383153	OMF, 15k ohm, 2W
R956	24366101	CF, 100 ohm
R959	24366150	CF, 15 ohm
R961	24366102	CF, 1k ohm
R962	24366361	CF, 360 ohm
R964	24366332	CF, 3300 ohm
R965	24366471	CF, 470 ohm
R966	24366331	CF, 330 ohm
R967	24366681	CF, 680 ohm
R968	24366470	CF, 47 ohm
R969	24366683	CF, 68k ohm
R970	24366393	CF, 39k ohm
R971	24367821	CF, 820 ohm, ±2%
R972	24367471	CF, 470 ohm, ±2%
R973	24367681	CF, 680 ohm, ±2%
R974	24367681	CF, 680 ohm, ±2%
R975	24366561	CF, 560 ohm
R976	24367272	CF, 2700 ohm, ±2%
R977	24367512	CF, 5100 ohm, ±2%
R978	24367391	CF, 390 ohm, ±2%
R983	24366681	CF, 680 ohm
R984	24366821	CF, 820 ohm
R985	24366821	CF, 820 ohm
R986	24366821	CF, 820 ohm
R987	24366470	CF, 47 ohm
R991	24366822	CF, 8200 ohm
R992	24366153	CF, 15k ohm
R3051	24366223	CF, 22k ohm
R4222	24366472	CF, 4700 ohm
R4223	24366103	CF, 10k ohm
R4224	24366272	CF, 2700 ohm
R4225	24366102	CF, 1k ohm
R4403	24366101	CF, 100 ohm
R4404	24366101	CF, 100 ohm
R4406	24366752	CF, 7500 ohm
R4407	24366361	CF, 360 ohm
R4410	24366103	CF, 10k ohm
R4412	24366101	CF, 100 ohm
R4413	24366101	CF, 100 ohm
R4416	24366101	CF, 100 ohm
R4417	24366101	CF, 100 ohm
R4418	24366102	CF, 1k ohm
R4422	24366101	CF, 100 ohm
R4425	24381471	OMF, 470 ohm, 1/2W
R4426	24366152	CF, 1500 ohm
R4427	24366102	CF, 1k ohm
R4428	24366102	CF, 1k ohm
R4430	24366102	CF, 1k ohm
R4431	24366682	CF, 6800 ohm
R4432	24366182	CF, 1800 ohm
R4465	24366103	CF, 10k ohm
R4466	24366102	CF, 1k ohm
R7701	24366104	CF, 100k ohm
R7705	24366154	CF, 150k ohm
R7707	24366472	CF, 4700 ohm
R7708	24366472	CF, 4700 ohm
R7710	24366102	CF, 1k ohm
R7710	24384680	OMF, 68 ohm, 3W
R7711	24323129	MF, 1.2 ohm, 2W
R7712	24366472	CF, 4700 ohm
R7713	24366472	CF, 4700 ohm
R7715	24384680	OMF, 68 ohm, 3W

Location No.	Part No.	Description
R7716	24323129	MF, 1.2 ohm, 2W
R7717	24366472	CF, 4700 ohm
R7718	24366472	CF, 4700 ohm
R7720	24384680	OMF, 68 ohm, 3W
R7721	24323129	MF, 1.2 ohm, 2W
R7722	24366473	CF, 47k ohm
R7723	24366472	CF, 4700 ohm
R7725	24384680	OMF, 68 ohm, 3W
R7726	24323129	MF, 1.2 ohm, 2W
R7727	24366472	CF, 4700 ohm
R7728	24366472	CF, 4700 ohm
R7730	24384680	OMF, 68 ohm, 3W
R7731	24323129	MF, 1.2 ohm, 2W
R7732	24366473	CF, 47k ohm
R7733	24366472	CF, 4700 ohm
R7735	24384680	OMF, 68 ohm, 3W
R7736	24323129	MF, 1.2 ohm, 2W
R7741	24366471	CF, 470 ohm
R7742	24366222	CF, 2200 ohm
R7743	24366223	CF, 22k ohm
R7744	24366102	CF, 1k ohm
R7745	24366222	CF, 2200 ohm
R7746	24366223	CF, 22k ohm
R7747	24366222	CF, 2200 ohm
R7749	24366331	CF, 330 ohm
R7750	24323228	MF, 0.22 ohm, 2W
R7751	24366471	CF, 470 ohm
R7757	24366223	CF, 22k ohm
R7758	24366222	CF, 2200 ohm
R7760	24366103	CF, 10k ohm
R7761	24366333	CF, 33k ohm
R7762	24366103	CF, 10k ohm
R7763	24366471	CF, 470 ohm
R7764	24366331	CF, 330 ohm
R7765	24323338	MF, 0.33 ohm, 2W
R7766	24366223	CF, 22k ohm
R7767	24366153	CF, 15k ohm
R7768	24366100	CF, 10 ohm
R7771	24366102	CF, 1k ohm
R7772	24366102	CF, 1k ohm
R7775	24366273	CF, 27k ohm
R7776	24366472	CF, 4700 ohm
R7777	24366273	CF, 27k ohm
R7778	24366472	CF, 4700 ohm
R7779	24366102	CF, 1k ohm
R7780	24366102	CF, 1k ohm
R7781	24366333	CF, 33k ohm
R7793	24366224	CF, 220k ohm
R7797	24366472	CF, 4700 ohm
R7798	24366103	CF, 10k ohm
R7799	24366222	CF, 2200 ohm
R7880	24366221	CF, 220 ohm
R7881	24366472	CF, 4700 ohm
R7882	24366103	CF, 10k ohm
R7883	24366332	CF, 3300 ohm
R7884	24366103	CF, 10k ohm
R7885	24366103	CF, 10k ohm
R7886	24366154	CF, 150k ohm
R7887	24366103	CF, 10k ohm
R7888	24366153	CF, 15k ohm
R7889	24366153	CF, 15k ohm
R7900	24366471	CF, 470 ohm
R7901	24366471	CF, 470 ohm
R7902	24366332	CF, 3300 ohm

Location No.	Part No.	Description
R8610	24366103	CF, 10k ohm
R8611	24019090	MF, 300k ohm, 1/4W
R8612	24019090	MF, 300k ohm, 1/4W
R8613	24366102	CF, 1k ohm
R8614	24000633	MF, 10k ohm, 1/4W
R8615	24366471	CF, 470 ohm
R8617	24000633	MF, 10k ohm, 1/4W
R8618	24383473	OMF, 47k ohm, 2W
R8619	24366124	CF, 120k ohm
R8620	24366473	CF, 47k ohm
R8621	24366473	CF, 47k ohm
R8622	24366101	CF, 100 ohm
R8623	24366101	CF, 100 ohm
R8624	24366152	CF, 1500 ohm
R8627	24366333	CF, 33k ohm
R8628	24366221	CF, 220 ohm
R9501	24366470	CF, 47 ohm
R9502	24366470	CF, 47 ohm
R9503	24366681	CF, 680 ohm
R9504	24366683	CF, 68k ohm
R9505	24366393	CF, 39k ohm
R9506	24366681	CF, 680 ohm
R9601	24366470	CF, 47 ohm
R9602	24366392	CF, 3900 ohm
R9603	24366332	CF, 3300 ohm
R9604	24366272	CF, 2700 ohm
R9605	24366682	CF, 6800 ohm
R9606	24366272	CF, 2700 ohm
R9607	24366470	CF, 47 ohm
R9608	24366681	CF, 680 ohm
R9609	24366683	CF, 68k ohm
R9610	24366393	CF, 39k ohm
R9611	24366681	CF, 680 ohm
R9612	24366470	CF, 47 ohm
R9613	24366330	CF, 33 ohm
R9614	24366330	CF, 33 ohm
R9701	24366103	CF, 10k ohm
R9702	24366103	CF, 10k ohm
R9703	24366103	CF, 10k ohm
R9704	24366561	CF, 560 ohm
R9705	24366822	CF, 8200 ohm
R9706	24366471	CF, 470 ohm
R9707	24366271	CF, 270 ohm
R9708	24366331	CF, 330 ohm
R9709	24366271	CF, 270 ohm
R9710	24366222	CF, 2200 ohm
R9713	24366102	CF, 1k ohm
R9714	24366102	CF, 1k ohm
R9715	24366102	CF, 1k ohm
RA01	24366102	CF, 1k ohm
RA03	24366102	CF, 1k ohm
RA04	24366102	CF, 1k ohm
RA05	24366102	CF, 1k ohm
RA07	24366102	CF, 1k ohm
RA08	24366102	CF, 1k ohm
RA09	24366102	CF, 1k ohm
RA13	24366682	CF, 6800 ohm
RA14	24366103	CF, 10k ohm
RA16	24366102	CF, 1k ohm
RA17	24366102	CF, 1k ohm
RA18	24366102	CF, 1k ohm
RA22	24366102	CF, 1k ohm
RA24	24366101	CF, 100 ohm
RA25	24366101	CF, 100 ohm

Location No.	Part No.	Description
RA26	24366102	CF, 1k ohm
RA27	24366102	CF, 1k ohm
RA33	24366102	CF, 1k ohm
RA34	24366103	CF, 10k ohm
RA35	24366102	CF, 1k ohm
RA36	24366472	CF, 4700 ohm
RA37	24366101	CF, 100 ohm
RA38	24366101	CF, 100 ohm
RA39	24366102	CF, 1k ohm
RA40	24366331	CF, 330 ohm
RA41	24366331	CF, 330 ohm
RA61	24366103	CF, 10k ohm
RA62	24366103	CF, 10k ohm
RA64	24366103	CF, 10k ohm
RA65	24366332	CF, 3300 ohm
RA66	24366332	CF, 3300 ohm
RA67	24366273	CF, 27k ohm
RA68	24366273	CF, 27k ohm
RA69	24366223	CF, 22k ohm
RA70	24366333	CF, 33k ohm
RA71	24366683	CF, 68k ohm
RA72	24366223	CF, 22k ohm
RA73	24366103	CF, 10k ohm
RA74	24366222	CF, 2200 ohm
RA75	24366333	CF, 33k ohm
RA76	24366103	CF, 10k ohm
RA77	24366223	CF, 22k ohm
RA78	24366102	CF, 1k ohm
RA79	24366223	CF, 22k ohm
RA81	24366102	CF, 1k ohm
RA83	24366102	CF, 1k ohm
RA84	24366102	CF, 1k ohm
RA99	24366103	CF, 10k ohm
RA071	24366333	CF, 33k ohm
RA100	24366102	CF, 1k ohm
RA122	24366221	CF, 220 ohm
RA123	24366221	CF, 220 ohm
RA124	24366221	CF, 220 ohm
RA125	24366221	CF, 220 ohm
RA241	24366472	CF, 4700 ohm
RA251	24366472	CF, 4700 ohm
RA421	24366333	CF, 33k ohm
RA422	24366101	CF, 100 ohm
RB01	24366271	CF, 270 ohm
RB02	24366221	CF, 220 ohm
RB03	24366101	CF, 100 ohm
RB04	24366223	CF, 22k ohm
RB05	24366471	CF, 470 ohm
RB09	24366470	CF, 47 ohm
RB11	24366103	CF, 10k ohm
RB40	24366103	CF, 10k ohm
RB41	24366102	CF, 1k ohm
RB42	24366102	CF, 1k ohm
RB43	24366103	CF, 10k ohm
RB44	24366103	CF, 10k ohm
RB45	24366101	CF, 100 ohm
RB81	24366122	CF, 1200 ohm
RB82	24366123	CF, 12k ohm
RB83	24366123	CF, 12k ohm
RB84	24366562	CF, 5600 ohm
RB90	24366392	CF, 3900 ohm
RB91	24366473	CF, 47k ohm
RB92	24366271	CF, 270 ohm
RB93	24366271	CF, 270 ohm

Location No.	Part No.	Description
RB94	24366222	CF, 2200 ohm
RB95	24366222	CF, 2200 ohm
RB98	24366102	CF, 1k ohm
RC27	24366102	CF, 1k ohm
RF01	24366332	CF, 3300 ohm (50D9UXE/50D9UXA)
RF03	24366682	CF, 6800 ohm (50D9UXE/50D9UXA)
RF04	24366223	CF, 22k ohm (50D9UXE/50D9UXA)
RF06	24366102	CF, 1k ohm (50D9UXE/50D9UXA)
RF08	24366100	CF, 10 ohm (50D9UXE/50D9UXA)
RF09	24366100	CF, 10 ohm (50D9UXE/50D9UXA)
RF10	24366100	CF, 10 ohm (50D9UXE/50D9UXA)
RF11	24366103	CF, 10k ohm (50D9UXE/50D9UXA)
RF12	24366101	CF, 100 ohm (50D9UXE/50D9UXA)
RF13	24366101	CF, 100 ohm (50D9UXE/50D9UXA)
RF14	24366101	CF, 100 ohm (50D9UXE/50D9UXA)
RF15	24366103	CF, 10k ohm (50D9UXE/50D9UXA)
RF16	24366471	CF, 470 ohm (50D9UXE/50D9UXA)
RF20	24366222	CF, 2200 ohm (50D9UXE/50D9UXA)
RF22	24366102	CF, 1k ohm (50D9UXE/50D9UXA)
RF26	24366102	CF, 1k ohm (50D9UXE/50D9UXA)
RF31	24366102	CF, 1k ohm (50D9UXE/50D9UXA)
RF32	24366821	CF, 820 ohm (50D9UXE/50D9UXA)
RF33	24366152	CF, 1500 ohm (50D9UXE/50D9UXA)
RF34	24366102	CF, 1k ohm (50D9UXE/50D9UXA)
RG01	24366333	CF, 33k ohm
RG02	24366333	CF, 33k ohm
RG03	24366101	CF, 100 ohm
RG04	24366101	CF, 100 ohm
RG09	24366472	CF, 4700 ohm
RG10	24366822	CF, 8200 ohm
RG11	24366472	CF, 4700 ohm
RG12	24366822	CF, 8200 ohm
RG15	24366102	CF, 1k ohm
RG16	24366223	CF, 22k ohm
RR10	24366101	CF, 100 ohm
RR63	24366332	CF, 3300 ohm
RR64	24366152	CF, 1500 ohm
RR65	24366102	CF, 1k ohm
RR66	24366101	CF, 100 ohm (50D9UXE/50D9UXA)
RR67	24366271	CF, 270 ohm (50D9UXE/50D9UXA)
RR68	24366332	CF, 3300 ohm
RR69	24366152	CF, 1500 ohm

Location No.	Part No.	Description
RR70	24366222	CF, 2200 ohm
RR71	24366332	CF, 3300 ohm (50D9UXE/50D9UXA)
RR72	24366332	CF, 3300 ohm (50D9UXE/50D9UXA)
RR73	24366102	CF, 1k ohm
RR74	24366102	CF, 1k ohm
RR75	24366102	CF, 1k ohm
RR76	24366103	CF, 10k ohm
RR77	24366392	CF, 3900 ohm
RR79	24366332	CF, 3300 ohm (50D9UXE/50D9UXA)
RR81	24366271	CF, 270 ohm (50D9UXE/50D9UXA)
RR82	24366100	CF, 10 ohm (50D9UXE/50D9UXA)
RR83	24366271	CF, 270 ohm (50D9UXE/50D9UXA)
RR84	24366101	CF, 100 ohm (50D9UXE/50D9UXA)
RR85	24366102	CF, 1k ohm
RR86	24366152	CF, 1500 ohm
RR87	24366332	CF, 3300 ohm
RR88	24366101	CF, 100 ohm
RS01	24366102	CF, 1k ohm
RS02	24366102	CF, 1k ohm
RS03	24366562	CF, 5600 ohm
RS04	24366562	CF, 5600 ohm
RS06	24366272	CF, 2700 ohm
RS07	24366562	CF, 5600 ohm
RS08	24366562	CF, 5600 ohm
RS09	24366562	CF, 5600 ohm
RS10	24366562	CF, 5600 ohm
RS11	24366562	CF, 5600 ohm
RS12	24366562	CF, 5600 ohm
RS13	24366101	CF, 100 ohm
RS14	24366101	CF, 100 ohm
RS15	24366104	CF, 100k ohm
RS16	24366104	CF, 100k ohm
RS17	24366223	CF, 22k ohm
RS18	24366223	CF, 22k ohm
RS19	24366102	CF, 1k ohm
RS20	24366102	CF, 1k ohm
RS21	24366222	CF, 2200 ohm
RS22	24366222	CF, 2200 ohm
RS23	24366101	CF, 100 ohm
RS24	24366101	CF, 100 ohm
RS31	24366103	CF, 10k ohm
RS32	24366104	CF, 100k ohm
RS35	24366104	CF, 100k ohm
RS36	24366223	CF, 22k ohm
RS37	24366102	CF, 1k ohm
RS38	24366222	CF, 2200 ohm
RS39	24366101	CF, 100 ohm
RS40	24366104	CF, 100k ohm
RS41	24366223	CF, 22k ohm
RS42	24366102	CF, 1k ohm
RS43	24366222	CF, 2200 ohm
RS44	24366101	CF, 100 ohm
RS664	24366223	CF, 22k ohm
RS666	24366223	CF, 22k ohm
RS667	24366102	CF, 1k ohm
RS668	24366683	CF, 68k ohm
RS669	24366104	CF, 100k ohm

Location No.	Part No.	Description
RS670	24552152	OMF, 1500 ohm, 1/2W
RS671	24366103	CF, 10k ohm
RS672	24366103	CF, 10k ohm
RS673	24366563	CF, 56k ohm
RS674	24366563	CF, 56k ohm
RS675	24366153	CF, 15k ohm
RS676	24366103	CF, 10k ohm
RS678	24366103	CF, 10k ohm
RS679	24366103	CF, 10k ohm
RS680	24366102	CF, 1k ohm
RS681	24366102	CF, 1k ohm
RV09	24366101	CF, 100 ohm
RV10	24366101	CF, 100 ohm
RV15	24366101	CF, 100 ohm
RV21	24366333	CF, 33k ohm
RV22	24366103	CF, 10k ohm
RV23	24552101	OMF, 100 ohm, 1/2W
RV24	24366471	CF, 470 ohm
RV25	24366101	CF, 100 ohm
RV26	24366152	CF, 1500 ohm
RV30	24366750	CF, 75 ohm
RV31	24366103	CF, 10k ohm
RV32	24366750	CF, 75 ohm
RV34	24366101	CF, 100 ohm
RV37	24366750	CF, 75 ohm
RV52	24366750	CF, 75 ohm
RV61	24366103	CF, 10k ohm
RV62	24366103	CF, 10k ohm
RV63	24366103	CF, 10k ohm
RV64	24366102	CF, 1k ohm
RV66	24366750	CF, 75 ohm
RV67	24366750	CF, 75 ohm
RV71	24366750	CF, 75 ohm
RV73	24366101	CF, 100 ohm
RV74	24366101	CF, 100 ohm
RV80	24366101	CF, 100 ohm
RV88	24366181	CF, 180 ohm
RV95	24366103	CF, 10k ohm
RV98	24366750	CF, 75 ohm
RY02	24366101	CF, 100 ohm
RY03	24366222	CF, 2200 ohm
RY04	24366103	CF, 10k ohm
RY126	24366683	CF, 68k ohm
RY127	24366104	CF, 100k ohm
RY604	24366102	CF, 1k ohm
RY605	24366104	CF, 100k ohm
RY606	24366393	CF, 39k ohm
RY607	24366153	CF, 15k ohm
RY608	24366152	CF, 1500 ohm
RY609	24366391	CF, 390 ohm
RY610	24382560	OMF, 56 ohm, 1W
RY613	24382820	OMF, 82 ohm, 1W
RY614	24366103	CF, 10k ohm
RY615	24366223	CF, 22k ohm
RY616	24366104	CF, 100k ohm
RY630	24366100	CF, 10 ohm
RY631	24366100	CF, 10 ohm
RZ01	24366102	CF, 1k ohm
RZ01	24366272	CF, 2700 ohm
RZ02	24366102	CF, 1k ohm
RZ02	24366272	CF, 2700 ohm
RZ03	24366102	CF, 1k ohm
RZ03	24366332	CF, 3300 ohm
RZ04	24366102	CF, 1k ohm

Location No.	Part No.	Description
RZ04	24366102	CF, 1k ohm
RZ05	24366102	CF, 1k ohm
RZ05	24366391	CF, 390 ohm
RZ06	24366102	CF, 1k ohm
RZ06	24366821	CF, 820 ohm
RZ08	24366391	CF, 390 ohm
RZ09	24366101	CF, 100 ohm
RZ13	24366102	CF, 1k ohm
RZ14	24366102	CF, 1k ohm
RZ15	24366102	CF, 1k ohm
RZ17	24366391	CF, 390 ohm
RZ18	24366391	CF, 390 ohm
RZ20	24366101	CF, 100 ohm
RZ29	24366331	CF, 330 ohm
RZ30	24366331	CF, 330 ohm

COILS & TRANSFORMERS

L101	23248035	Coil, Choke, TLN3278D
L103	23238714	Coil, Peaking, TRF4100AJ
L104	23238714	Coil, Peaking, TRF4100AJ
L200	23103852	Coil, Filter, TEM2028AH
L301	23237975	Coil, Peaking, TRF4101AC
L302	23248073	Coil, Choke, TLN3299D
L303	23248073	Coil, Choke, TLN3299D
L304	23103859	Coil (Ferrite Bead), TEM2011
L305	23238710	Coil, Peaking, TRF4220AJ
L400	23237975	Coil, Peaking, TRF4101AC
L400	23289101	Coil, Peaking, TRF4101AF
L441	23233995	Coil, Linearity, TLN2215AG
L461	23248191	Coil, Choke, TLN3351AD
L462	23231313	Deflection Yoke, TDY707NS
L463	23231313	Deflection Yoke, TDY707NS
L464	23231313	Deflection Yoke, TDY707NS
L465	23103859	Coil (Ferrite Bead), TEM2011
L466	23103775	Coil (Ferrite Bead), TEM2014
L467	23103775	Coil (Ferrite Bead), TEM2014
L472	23102441	Magnet, MAG-1094
L473	23102441	Magnet, MAG-1094
L474	23102441	Magnet, MAG-1094
L481	23237975	Coil, Peaking, TRF4101AC
L501	23238714	Coil, Peaking, TRF4100AJ
L503	23289844	Coil, Peaking, TRF4470AT
L504	23289840	Coil, Peaking, TRF4100AT
L506	23289840	Coil, Peaking, TRF4100AT
L701	23237987	Coil, Peaking, TRF4100AC
L702	23261974	Coil, Choke, HC5-035
L704	23103859	Coil (Ferrite Bead), TEM2011
L705	23103859	Coil (Ferrite Bead), TEM2011
L764	23103859	Coil (Ferrite Bead), TEM2011
L765	23103859	Coil (Ferrite Bead), TEM2011
L766	23261974	Coil, Choke, HC5-035
L769	23237987	Coil, Peaking, TRF4100AC
L780	23237987	Coil, Peaking, TRF4100AC
L781	23103859	Coil (Ferrite Bead), TEM2011
L782	23103859	Coil (Ferrite Bead), TEM2011
L783	23261974	Coil, Choke, HC5-035
L804	23103859	Coil (Ferrite Bead), TEM2011
L830	23280025	Coil, Peaking, TRF4331AZ
L831	23280022	Coil, Peaking, TRF4101AZ
L833	23289842	Coil, Peaking, TRF4220AT
L835	23248087	Coil, Choke, TLN3312D
L856	23103859	Coil (Ferrite Bead), TEM2011
L857	23103859	Coil (Ferrite Bead), TEM2011
L858	23103859	Coil (Ferrite Bead), TEM2011

Location No.	Part No.	Description
L859	23103859	Coil (Ferrite Bead), TEM2011
L861	23103859	Coil (Ferrite Bead), TEM2011
L862	23248073	Coil, Choke, TLN3299D
L863	23103859	Coil (Ferrite Bead), TEM2011
L864	23103859	Coil (Ferrite Bead), TEM2011
L865	23103859	Coil (Ferrite Bead), TEM2011
L866	23248073	Coil, Choke, TLN3299D
L867	70211045	Coil, Choke, 0.02mH
L868	23103859	Coil (Ferrite Bead), TEM2011
L869	23103859	Coil (Ferrite Bead), TEM2011
L870	23248073	Coil, Choke, TLN3299D
L871	70211045	Coil, Choke, 0.02mH
L872	23248073	Coil, Choke, TLN3299D
L873	70211045	Coil, Choke, 0.02mH
L874	70211045	Coil, Choke, 0.02mH
L901	23237975	Coil, Peaking, TRF4101AC
L902	23238714	Coil, Peaking, TRF4100AJ
L903	23289680	Coil, Peaking, TRF4680AF
L911	23237987	Coil, Peaking, TRF4100AC
L912	23289680	Coil, Peaking, TRF4680AF
L913	23238714	Coil, Peaking, TRF4100AJ
L915	23289109	Coil, Peaking, TRF41R0AF
L922	23289680	Coil, Peaking, TRF4680AF
L923	23238714	Coil, Peaking, TRF4100AJ
L925	23289109	Coil, Peaking, TRF41R0AF
L961	23289840	Coil, Peaking, TRF4100AT
L962	23289109	Coil, Peaking, TRF41R0AF
L7701	23103859	Coil (Ferrite Bead), TEM2011
L7702	23103859	Coil (Ferrite Bead), TEM2011
L7703	23103859	Coil (Ferrite Bead), TEM2011
L7704	23103859	Coil (Ferrite Bead), TEM2011
L7705	23103859	Coil (Ferrite Bead), TEM2011
L7706	23103859	Coil (Ferrite Bead), TEM2011
L7710	23248195	Coil, Choke, TLN3441AT
L7711	23248195	Coil, Choke, TLN3441AT
L7712	23248195	Coil, Choke, TLN3441AT
L7713	23248195	Coil, Choke, TLN3441AT
LA01	23289100	Coil, Peaking, TRF4100AF
LB02	23262281	Coil, IF, TRF1197D
LC05	23238562	Coil, Peaking, TRF4109AJ
LC06	23103859	Coil (Ferrite Bead), TEM2011
LF01	23238506	Coil, Peaking, TRF4229AJ (50D9UXE/50D9UXA)
LF02	23238506	Coil, Peaking, TRF4229AJ (50D9UXE/50D9UXA)
LF03	23238506	Coil, Peaking, TRF4229AJ (50D9UXE/50D9UXA)
LF04	23238506	Coil, Peaking, TRF4229AJ (50D9UXE/50D9UXA)
LF06	23238562	Coil, Peaking, TRF4109AJ (50D9UXE/50D9UXA)
LF07	23238562	Coil, Peaking, TRF4109AJ (50D9UXE/50D9UXA)
LF08	23238714	Coil, Peaking, TRF4100AJ (50D9UXE/50D9UXA)
LF09	23238714	Coil, Peaking, TRF4100AJ (50D9UXE/50D9UXA)
LF10	23238562	Coil, Peaking, TRF4109AJ (50D9UXE/50D9UXA)
LF11	23289109	Coil, Peaking, TRF41R0AF (50D9UXE/50D9UXA)
LF12	23238714	Coil, Peaking, TRF4100AJ (50D9UXE/50D9UXA)

Location No.	Part No.	Description
LF13	23289100	Coil, Peaking, TRF4100AF (50D9UXE/50D9UXA)
LF16	23289121	Coil, Peaking, TRF4121AF (50D9UXE/50D9UXA)
LR21	23103898	Coil, Filter, TEM2030AH
LR22	23103898	Coil, Filter, TEM2030AH
LR23	23103898	Coil, Filter, TEM2030AH
LV02	23103852	Coil, Filter, TEM2028AH
LV06	23103852	Coil, Filter, TEM2028AH
LV47	23238705	Coil, Peaking, TRF4560AJ
LY101	23221803	Coil, Choke, TLN3040D
LZ01	23238710	Coil, Peaking, TRF4220AJ
LZ02	23238714	Coil, Peaking, TRF4100AJ
LZ02	23289100	Coil, Peaking, TRF4100AF
LZ03	23238714	Coil, Peaking, TRF4100AJ
LZ04	23238714	Coil, Peaking, TRF4100AJ
LZ05	23238714	Coil, Peaking, TRF4100AJ
LZ08	23238707	Coil, Peaking, TRF4390AJ
LZ09	70131060	Baze Filter, ZBF253D-00
LZ10	70131060	Baze Filter, ZBF253D-00
LZ11	70131060	Baze Filter, ZBF253D-00
T400	23224364	Transformer, Focus, TLN2168AH
T401	23224371	Transformer, Horiz, Drive, TLN1080AH
T402	23248248	Coil, Choke, TLN3500AH
⚠T461A	23192940	Anode Cap, TCCP5157
T461B	23960136	Adhesive, TSE3843-W
⚠T461Z	23236628	Transformer, Flyback, TFB3087ZD
⚠T801	23211713	Line Filter, TRF3197AQ
⚠T802	23211713	Line Filter, TRF3197AQ
⚠T803	23211698	Line Filter, TRF3218AK
T804	23211713	Line Filter, TRF3197AQ
T830	23211661	Line Filter, TRF3192
⚠T862	23217467	Transformer, Converter, TPW3450AS

SEMICONDUCTORS

Q180	23114528	Transistor, 2SC1740S, Q
Q185	23114528	Transistor, 2SC1740S, Q
Q201	A6317440	Transistor, 2SC1815-Y
Q202	23114530	Transistor, 2SA933S-Q
Q203	23114530	Transistor, 2SA933S-Q
Q204	23114530	Transistor, 2SA933S-Q
Q206	23114528	Transistor, 2SC1740S, Q
Q209	23114530	Transistor, 2SA933S-Q
Q210	23114530	Transistor, 2SA933S-Q
Q211	23114528	Transistor, 2SC1740S, Q
Q212	23114528	Transistor, 2SC1740S, Q
Q237	23114528	Transistor, 2SC1740S, Q
Q261	23114530	Transistor, 2SA933S-Q
Q262	23114528	Transistor, 2SC1740S, Q
Q263	23114528	Transistor, 2SC1740S, Q
Q301	23319787	IC, LA7833S
Q301B	70391355	Screw, BITTB3X8 SZN
Q302	B0384625	IC, TA8859CP
Q304	B0347500	IC, TA75358P
Q305	23114530	Transistor, 2SA933S-Q
Q306	B0351501	IC, TA75902P(J)
Q307	B0347500	IC, TA75358P
Q308	23314548	Transistor, 2SC4256
Q370	23114528	Transistor, 2SC1740S, Q
Q371	23114530	Transistor, 2SA933S-Q
Q372	23114528	Transistor, 2SC1740S, Q
Q402	A6064650	Transistor, 2SK941
Q404	A6371775	Transistor, 2SC5144
Q404B	A8012650	Spacer, AC263
Q404D	72471082	Screw, BRDT2W3X10 SZN
Q405	23114530	Transistor, 2SA933S-Q
Q406	23114528	Transistor, 2SC1740S, Q
Q425	23114528	Transistor, 2SC1740S, Q
Q426	A6002060	Transistor, RN1206
Q427	A6002060	Transistor, RN1206
Q428	A6002060	Transistor, RN1206
Q460	23314916	Transistor, 2SK947-R
Q461	B0347500	IC, TA75358P
Q462	23114528	Transistor, 2SC1740S, Q
Q481	B0347235	IC, TA75339AP
Q501	B01A7048	IC, TB1274N
Q502	23114528	Transistor, 2SC1740S, Q
Q503	23114530	Transistor, 2SA933S-Q
Q504	23114530	Transistor, 2SA933S-Q
Q505	23114528	Transistor, 2SC1740S, Q
Q510	B0386208	IC, TA1276AN
Q520	23114528	Transistor, 2SC1740S, Q
Q580	23114528	Transistor, 2SC1740S, Q
Q601	B0376885	IC, TA8216H
Q601B	70391356	Screw, BITTB3X10 SZN
Q611	A6342200	Transistor, 2CS2878-A
Q612	A6342200	Transistor, 2CS2878-A
Q613	23114528	Transistor, 2SC1740S, Q
Q614	A6002040	Transistor, RN1204
Q615	23114530	Transistor, 2SA933S-Q
Q616	23114530	Transistor, 2SA933S-Q
Q706	23114528	Transistor, 2SC1740S, Q
Q707	A6734590	Transistor, 2SC752(G)TM-Y
Q709	23114528	Transistor, 2SC1740S, Q
Q710	23114530	Transistor, 2SA933S-Q
Q711	23314911	Transistor, 2SB1569A E
Q711B	70391355	Screw, BITTB3X8 SZN
Q712	23314914	Transistor, 2SD2400A E
Q712B	70391355	Screw, BITTB3X8 SZN
Q719	23114528	Transistor, 2SC1740S, Q
Q720	23114528	Transistor, 2SC1740S, Q
Q751	23905094	IC, STR392-110
Q752	23905094	IC, STR392-110
Q755	23904521	IC, AN7805
Q755B	70391355	Screw, BITTB3X8 SZN
Q757	23114528	Transistor, 2SC1740S, Q
Q758	23114528	Transistor, 2SC1740S, Q
Q759	23114530	Transistor, 2SA933S-Q
Q760	23114530	Transistor, 2SA933S-Q
Q761	23114530	Transistor, 2SA933S-Q
Q761	23314911	Transistor, 2SB1569A E
Q761B	70391355	Screw, BITTB3X8 SZN
Q762	23114528	Transistor, 2SC1740S, Q
Q764	B0485895	IC, TC74HC14AP
Q765	23114528	Transistor, 2SC1740S, Q
Q766	23114528	Transistor, 2SC1740S, Q
Q767	B0470188	IC, TC4066BP(N)
Q769	23114528	Transistor, 2SC1740S, Q
Q771	23314914	Transistor, 2SD2400A E
Q771B	70391355	Screw, BITTB3X8 SZN
Q772	23114530	Transistor, 2SA933S-Q
Q773	23114528	Transistor, 2SC1740S, Q
Q779	23114528	Transistor, 2SC1740S, Q
Q781	23114528	Transistor, 2SC1740S, Q

Location No.	Part No.	Description
Q782	23114530	Transistor, 2SA933S-Q
Q782	23318840	IC, AN79M05F
Q782B	70391355	Screw, BITTB3X8 SZN
Q783	23114528	Transistor, 2SC1740S, Q
Q784	23314911	Transistor, 2SB1569A E
Q784B	70391355	Screw, BITTB3X8 SZN
Q785	23314914	Transistor, 2SD2400A E
Q785B	70391355	Screw, BITTB3X8 SZN
Q796	23114528	Transistor, 2SC1740S, Q
Q797	B0349260	IC, TA75358P
Q798	B0470188	IC, TC4066BP(N)
Q801	23135015	IC, STR-Z4369
Q811	A6002060	Transistor, RN1206
Q812	23114528	Transistor, 2SC1740S, Q
Q821	A6002060	Transistor, RN1206
Q824	23114528	Transistor, 2SC1740S, Q
Q825	23905977	IC, PQ09RD11
Q825B	70391355	Screw, BITTB3X8 SZN
Q826	23905977	IC, PQ09RD11
Q826B	70391355	Screw, BITTB3X8 SZN
Q827	23905976	IC, PQ05RD11
Q827B	70391355	Screw, BITTB3X8 SZN
Q828	23905976	IC, PQ05RD11
Q828B	70391355	Screw, BITTB3X8 SZN
Q829	23905976	IC, PQ05RD11
Q829B	70391355	Screw, BITTB3X8 SZN
Q830	23135004	IC, STR83145A
Q830B	70391355	Screw, BITTB3X8 SZN
Q831	23114528	Transistor, 2SC1740S, Q
Q832	23114530	Transistor, 2SA933S-Q
Q833	23000140	IC, MM1437AS
⚠Q862	A8643112	Photo Coupler, TLP621(GRL-L
Q901	A6372621	Transistor, 2SC5360
Q902	23114528	Transistor, 2SC1740S, Q
Q911	A6372621	Transistor, 2SC5360
Q912	23114528	Transistor, 2SC1740S, Q
Q913	23114530	Transistor, 2SA933S-Q
Q914	23114528	Transistor, 2SC1740S, Q
Q915	23114528	Transistor, 2SC1740S, Q
Q916	23114530	Transistor, 2SA933S-Q
Q917	23114530	Transistor, 2SA933S-Q
Q918	23114528	Transistor, 2SC1740S, Q
Q919	23114528	Transistor, 2SC1740S, Q
Q920	23114528	Transistor, 2SC1740S, Q
Q921	A6372621	Transistor, 2SC5360
Q922	23114528	Transistor, 2SC1740S, Q
Q961	23114528	Transistor, 2SC1740S, Q
Q962	23114530	Transistor, 2SA933S-Q
Q963	23114528	Transistor, 2SC1740S, Q
Q964	23114530	Transistor, 2SA933S-Q
Q965	23114528	Transistor, 2SC1740S, Q
Q966	23114530	Transistor, 2SA933S-Q
Q968	23114528	Transistor, 2SC1740S, Q
Q971	23114530	Transistor, 2SA933S-Q
Q972	23114530	Transistor, 2SA933S-Q
Q973	23114530	Transistor, 2SA933S-Q
Q974	23114528	Transistor, 2SC1740S, Q
Q975	A6734590	Transistor, 2SC752(G)TM-Y
Q4420	B01A0067	IC, TA1300AN
Q4430	23114530	Transistor, 2SA933S-Q
Q4465	23114530	Transistor, 2SA933S-Q
Q8610	B0349261	IC, TA75393P(FA2
⚠Q8611	A8643112	Photo Coupler, TLP621(GRL-L
Q8612	23114528	Transistor, 2SC1740S, Q

Location No.	Part No.	Description
Q8630	23114528	Transistor, 2SC1740S, Q
Q8631	23114528	Transistor, 2SC1740S, Q
QA01	23000565	IC, 750011-142S
QA02	23906642	IC, AT24C64-10PC
QA05	A6734590	Transistor, 2SC752(G)TM-Y
QA10	23114530	Transistor, 2SA933S-Q
QB02	23114530	Transistor, 2SA933S-Q
QB03	A6002050	Transistor, RN1205
QB81	A6342200	Transistor, 2CS2878-A
QB82	A6342200	Transistor, 2CS2878-A
QB83	23114530	Transistor, 2SA933S-Q
QB92	23114528	Transistor, 2SC1740S, Q
QB93	23114530	Transistor, 2SA933S-Q
QB94	23114530	Transistor, 2SA933S-Q
QB95	23114530	Transistor, 2SA933S-Q
QB96	23114530	Transistor, 2SA933S-Q
QF01	23906822	IC, SDA5273-2S C (50D9UXE/50D9UXA)
QF03	23114528	Transistor, 2SC1740S, Q (50D9UXE/50D9UXA)
QF04	A6734590	Transistor, 2SC752(G)TM-Y (50D9UXE/50D9UXA)
QF07	23114528	Transistor, 2SC1740S, Q (50D9UXE/50D9UXA)
QF08	23114530	Transistor, 2SA933S-Q (50D9UXE/50D9UXA)
QG01	B0385643	IC, TA1216AN
QR35	23114528	Transistor, 2SC1740S, Q
QR36	23114528	Transistor, 2SC1740S, Q
QR37	23114530	Transistor, 2SA933S-Q (50D9UXE/50D9UXA)
QR38	23114528	Transistor, 2SC1740S, Q
QR39	23114530	Transistor, 2SA933S-Q (50D9UXE/50D9UXA)
QR40	23114528	Transistor, 2SC1740S, Q
QR41	23114530	Transistor, 2SA933S-Q (50D9UXE/50D9UXA)
QR70	A6734590	Transistor, 2SC752(G)TM-Y
QS01	A6342200	Transistor, 2CS2878-A
QS02	A6342200	Transistor, 2CS2878-A
QS03	23114528	Transistor, 2SC1740S, Q
QS04	23114528	Transistor, 2SC1740S, Q
QS07	A6010040	Transistor, RN2004
QS08	A6342200	Transistor, 2CS2878-A
QS09	23114528	Transistor, 2SC1740S, Q
QS10	A6342200	Transistor, 2CS2878-A
QS11	23114528	Transistor, 2SC1740S, Q
QS671	23906596	IC, BA4558
QS672	A6342200	Transistor, 2CS2878-A
QS673	A6010040	Transistor, RN2004
QV01	23000369	IC, MM1495XD
QV07	A6002030	Transistor, RN1203
QV08	23114528	Transistor, 2SC1740S, Q
QV09	23114528	Transistor, 2SC1740S, Q
QV11	A6002030	Transistor, RN1203
QV13	A6317440	Transistor, 2SC1815-Y
QV51	23114528	Transistor, 2SC1740S, Q
QY10	A6534060	Transistor, 2SA1015-GR
QY601	23318255	IC, μPC1406HA
QY602	23114528	Transistor, 2SC1740S, Q
QY604	A6342200	Transistor, 2CS2878-A
QY605	23114529	Transistor, 2SA933S-R
QY606	A6010040	Transistor, RN2004
QZ01	23114530	Transistor, 2SA933S-Q

Location No.	Part No.	Description
QZ01	B0410895	IC, TC90A49P
QZ02	23114528	Transistor, 2SC1740S, Q
QZ02	23114530	Transistor, 2SA933S-Q
QZ04	23114530	Transistor, 2SA933S-Q
QZ05	23114530	Transistor, 2SA933S-Q
QZ07	23114530	Transistor, 2SA933S-Q
QZ08	23114528	Transistor, 2SC1740S, Q
D101	23316756	Diode, Zener, MTZJ33D
D201	23118859	Diode, 1SS133
D301	23118520	Diode, Zener, RD8.2ESA B2
D302	23118094	Diode, EU2A, LF-F10
D303	23118499	Diode, Zener, RD18ESA B2
D304	23316794	Diode, SC570ALFE2
D305	23118822	Diode, ERB12-02
D306	23118822	Diode, ERB12-02
D312	23118859	Diode, 1SS133
D338	23118859	Diode, 1SS133
D370	23118859	Diode, 1SS133
D371	23118859	Diode, 1SS133
D401	23118094	Diode, EU2A, LF-F10
D402	23118094	Diode, EU2A, LF-F10
D404	23316254	Diode, ERC06-15L
D405	23316720	Diode, Zener, MTZJ12C
D406	A7978850	Diode, S5295G
D411	23118499	Diode, Zener, RD18ESA B2
D413	23118707	Diode, RP 1H, LF-C1
D414	23118094	Diode, EU2A, LF-F10
D415	23118094	Diode, EU2A, LF-F10
D416	23118707	Diode, RP 1H, LF-C1
D422	23118518	Diode, Zener, RD9.1ESA B1
D424	23118859	Diode, 1SS133
D448	23118094	Diode, EU2A, LF-F10
D450	23118859	Diode, 1SS133
D461	23224366	Diode, FMQ-3GU
D462	23118499	Diode, Zener, RD18ESA B2
D471	23118094	Diode, EU2A, LF-F10
D473	23115774	Diode, Zener, RD6.2E(4)
D481	23118859	Diode, 1SS133
D490	23118530	Diode, Zener, RD5.6ESA B1
D498	23118859	Diode, 1SS133
D501	23118859	Diode, 1SS133
D580	23118528	Diode, Zener, RD5.6ESA B3
D610	23118859	Diode, 1SS133
D611	23118859	Diode, 1SS133
D612	23118859	Diode, 1SS133
D613	23118859	Diode, 1SS133
D614	23118859	Diode, 1SS133
D615	23118859	Diode, 1SS133
D616	23118859	Diode, 1SS133
D617	23118859	Diode, 1SS133
D618	23118859	Diode, 1SS133
D704	23118859	Diode, 1SS133
D705	23118859	Diode, 1SS133
D715	23118859	Diode, 1SS133
D721	23118859	Diode, 1SS133
D761	23118859	Diode, 1SS133
D762	23118859	Diode, 1SS133
D763	23118859	Diode, 1SS133
D764	23118859	Diode, 1SS133
D781	23118859	Diode, 1SS133
D782	23118859	Diode, 1SS133
D783	23118859	Diode, 1SS133
D784	23118859	Diode, 1SS133
D803	23316787	Diode, D15XB60H, F5

Location No.	Part No.	Description
D803B	70391355	Screw, BITTB3X8 SZN
D804	23118537	Diode, Zener, RD6.2ESA B3
D805	23118518	Diode, Zener, RD9.1ESA B1
D806	23118615	Diode, Zener, RD27ESA B3
D809	23118602	Diode, Zener, RD36ESA B4
D810	23118615	Diode, Zener, RD27ESA B3
D811	23118057	Diode, AG01A
D812	23118516	Diode, Zener, RD9.1ESA B3
D813	23118060	Diode, AL01Z
D814	23118529	Diode, Zener, RD5.6ESA B2
D816	24000656	Varistor, TNR15G471K
D819	23118859	Diode, 1SS133
D820	23118515	Diode, Zener, RD11ESA B1
D821	23118537	Diode, Zener, RD6.2ESA B3
D822	23118859	Diode, 1SS133
D825	23115532	Diode, ERB12-01E
D826	23115532	Diode, ERB12-01E
D827	23115532	Diode, ERB12-01E
D828	23115532	Diode, ERB12-01E
D829	23115532	Diode, ERB12-01E
D831	23118621	Diode, Zener, RD10ESA B3
D832	23118621	Diode, Zener, RD10ESA B3
D833	23118532	Diode, Zener, RD5.1ESA B2
D834	23118529	Diode, Zener, RD5.6ESA B2
D835	23357207	Diode, LN1WBA60
D836	A7568200	Diode, 1S1832
D837	23118525	Diode, Zener, RD6.8ESA B3
D838	23118536	Diode, Zener, RD4.7ESA B1
D839	70612402	Diode, SF5J42
D854	23357214	Diode, D4SBS4
D855	23357215	Diode, D4SBS6
D855B	70391355	Screw, BITTB3X8 SZN
D856	23357216	Diode, D4SBL20U
D858	23118859	Diode, 1SS133
D859	23316768	Diode, FMB-26L
D859B	70391355	Screw, BITTB3X8 SZN
D860	23357217	Diode, D4SBL40
D860B	70391355	Screw, BITTB3X8 SZN
D862	23118859	Diode, 1SS133
D863	23316553	Diode, 1SS145
D86B	70391355	Screw, BITTB3X8 SZN
D891	23118859	Diode, 1SS133
D901	23118859	Diode, 1SS133
D902	23118859	Diode, 1SS133
D911	23118859	Diode, 1SS133
D912	23118859	Diode, 1SS133
D921	23118859	Diode, 1SS133
D922	23118859	Diode, 1SS133
D924	23118859	Diode, 1SS133
D925	23118859	Diode, 1SS133
D931	23118859	Diode, 1SS133
D932	23118859	Diode, 1SS133
D933	23118859	Diode, 1SS133
D934	23118859	Diode, 1SS133
D936	A7568250	Diode, 1S1834
D941	23118859	Diode, 1SS133
D942	23118859	Diode, 1SS133
D943	23118859	Diode, 1SS133
D945	A7568250	Diode, 1S1834
D946	23118859	Diode, 1SS133
D963	23118859	Diode, 1SS133
D964	23118859	Diode, 1SS133
D965	23118859	Diode, 1SS133
D966	23118859	Diode, 1SS133

Location No.	Part No.	Description
D967	A7568250	Diode, 1S1834
D4223	23115532	Diode, ERB12-01E
D7701	23118859	Diode, 1SS133
D7702	23118859	Diode, 1SS133
D7705	23118859	Diode, 1SS133
D7706	23118859	Diode, 1SS133
D7707	23118859	Diode, 1SS133
D7708	23118859	Diode, 1SS133
D7709	23118538	Diode, Zener, RD6.2ESA B2
D7714	23118859	Diode, 1SS133
D7715	23118859	Diode, 1SS133
D7716	23118859	Diode, 1SS133
D7717	23118538	Diode, Zener, RD6.2ESA B2
D7718	23118538	Diode, Zener, RD6.2ESA B2
D7719	23118538	Diode, Zener, RD6.2ESA B2
D7720	23118538	Diode, Zener, RD6.2ESA B2
D7721	23118538	Diode, Zener, RD6.2ESA B2
D7722	23118538	Diode, Zener, RD6.2ESA B2
D7730	23118538	Diode, Zener, RD6.2ESA B2
D7736	23118538	Diode, Zener, RD6.2ESA B2
D7738	23118859	Diode, 1SS133
D7739	23118859	Diode, 1SS133
D7740	23118859	Diode, 1SS133
D7741	23118859	Diode, 1SS133
D7742	23118859	Diode, 1SS133
D7743	23118859	Diode, 1SS133
D7745	23118859	Diode, 1SS133
D7746	23118859	Diode, 1SS133
D7747	23118859	Diode, 1SS133
D7748	23118859	Diode, 1SS133
D7749	23118859	Diode, 1SS133
D7760	23118859	Diode, 1SS133
D7806	23118859	Diode, 1SS133
D7810	23118859	Diode, 1SS133
D8610	23115774	Diode, Zener, RD6.2E(4)
D8611	23118610	Diode, Zener, RD30ESA B4
D8612	23118613	Diode, Zener, RD30ESA B1
D8613	23118532	Diode, Zener, RD5.1ESA B2
D8614	23118537	Diode, Zener, RD6.2ESA B3
D8615	23118859	Diode, 1SS133
D8616	23118517	Diode, Zener, RD9.1ESA B2
D8617	23118532	Diode, Zener, RD5.1ESA B2
DA421	23118529	Diode, Zener, RD5.6ESA B2
DB01	23358541	Diode (LED), 4343VRT
DB02	23358503	Diode (LED), SCL003MC3FX
DB03	23358522	Diode (LED), SIR-56SB3F
DF01	23316654	Diode, Zener, MTZJ3.0A (50D9UXE/50D9UXA)
DR61	23118859	Diode, 1SS133 (50D9UXE/50D9UXA)
DR62	23118859	Diode, 1SS133 (50D9UXE/50D9UXA)
DR63	23118859	Diode, 1SS133 (50D9UXE/50D9UXA)
DS671	23118495	Diode, Zener, RD22ESA B3
DV10	23118859	Diode, 1SS133
DY601	23118859	Diode, 1SS133
DY602	23118859	Diode, 1SS133

MISCELLANEOUS

B107	23711305	Screw, PP3X.5X5BNI
B224	23035412	Screw, BTB 4X12 SZN
B225	23035412	Screw, BTB 4X12 SZN
B230	23037312	Screw, BTBW 3X12 SZN

Location No.	Part No.	Description
B233	23035412	Screw, BTB 4X12 SZN
B234	23030937	Screw, BTBW 3X12 SBN
B237	23035412	Screw, BTB 4X12 SZN
B239	23035412	Screw, BTB 4X12 SZN
B330	23037312	Screw, BTBW 3X12 SZN
B332	23037312	Screw, BTBW 3X12 SZN
BB14A	23903022	Socket, 8P
BB14B	23903022	Socket, 8P
BB14C	23368627	Plug, 8P
BB15A	23903022	Socket, 8P
BB15B	23903022	Socket, 8P
BB15C	23368627	Plug, 8P
BB16A	23903022	Socket, 8P
BB16B	23903022	Socket, 8P
BB16C	23368627	Plug, 8P
E935	23710134	Screw, SCREW PP4
E943	23710134	Screw, SCREW PP4
E956	23710134	Screw, SCREW PP4
E966	23960136	Adhesive, TSE3843-W
E976	23960136	Adhesive, TSE3843-W
E986	23960136	Adhesive, TSE3843-W
⚠F801	23144458	Fuse, 5.0A, 250V
F801A	23165433	Holder, Fuse
F801B	23165433	Holder, Fuse
G101	23238506	Coil, Peaking, TRF4229AJ
G102	23238506	Coil, Peaking, TRF4229AJ
G106	23289109	Coil, Peaking, TRF41R0AF
G431	23237975	Coil, Peaking, TRF4101AC
G510	23289479	Coil, Peaking, TRF44R7AF
GA69	24366470	CF, 47 ohm
GY102	23238506	Coil, Peaking, TRF4229AJ
GY103	23238506	Coil, Peaking, TRF4229AJ
GY104	23237995	Coil, Peaking, TRF4229AC
HY02	23148327	Module, MVCM13, PIP
KB01	23904946	Remote Sensor, RPM-676CBR-S
P101	23164558	Plug, 8P
P513	23903040	Socket, 56P
P661	23363607	Jack, Headphone
P708	23902655	Socket, B-B, 15P
P709	23902655	Socket, B-B, 15P
P720	23164786	Plug, 6P
⚠P801	23372023	Power Cord (50D9UXE/50D9UXH)
⚠P801	23372026	Power Cord (50D9UXA)
PB12	23164560	Plug, 6P
PF01A	23367724	Plug, B-B,15P (50D9UXE/50D9UXA)
PF01B	23902655	Socket, B-B, 15P
PU01A	23368634	Plug, 25P
PU01B	23903025	Socket, 25P
PU02A	23368634	Plug, 25P
PU02B	23903025	Socket, 25P
PU11	23902655	Socket, B-B, 15P
PU12	23902781	Socket, B-B, 12P
PV01	23365837	Jack, 1S6P
PV02	23365966	Jack, 1S6P
PV04	23164563	Plug, 3P
PV06	23365972	Jack, 6P
PV62	23164558	Plug, 8P
PY630	23363607	Jack, Headphone
S601	23145411	Switch, Slide, 2C2P
⚠S801	23145434	Switch, Power, 2C2P
SA01	23145226	Switch, Push, 1C1P

Location No.	Part No.	Description
SA02	23145226	Switch, Push, 1C1P
SA03	23145226	Switch, Push, 1C1P
SA04	23145226	Switch, Push, 1C1P
SA06	23145226	Switch, Push, 1C1P
SA07	23145226	Switch, Push, 1C1P
⚠SR80	23146574	Relay, DLS5D1-O(M) 0.15W
⚠SR81	23146574	Relay, DLS5D1-O(M) 0.15W
⚠V901A	23902019	Socket, CRT, 9P
⚠V902A	23902019	Socket, CRT, 9P
⚠V903A	23902019	Socket, CRT, 9P
W661	23151232	Speaker, SPK-1235, 160X160mm, 8 ohm
W662	23151232	Speaker, SPK-1235, 160X160mm, 8 ohm
X401	23153721	Ceramic Resonator, 503kHz, TCR1023
X501	23153438	Crystal, 16.200MHz
X4401	23153721	Ceramic Resonator, 503kHz, TCR1023
XA01	23153497	Crystal, 16.0 MHz
XF01	23153421	Crystal, 20.48MHz (50D9UXE/50D9UXA)
⚠Z410	23110842	Focus Pack, TPA6031
⚠Z410A	23505177	Focus Cable
⚠Z450	24082996	CR Block, TPA5007BH
⚠Z450A	23504953	Anode Cable
Z801	23148734	Module, HIC1026A, PROTECTOR, HIC1026
Z803	23148755	Module, SLI-MI-06, DC/DC CONVERTER
Z830	23144609	Protector, PRF5000PRT, DC60V, 5.0A
Z831	23144603	Protector, PRF10005PRT, DC60V, 1.0A
Z853	23144608	Protector, PRF40005PRT, DC60V, 4.0A
Z854	23144609	Protector, PRF5000PRT, DC60V, 5.0A
Z856	23144605	Protector, PRF20005PRT, DC60V, 2.0A
Z857	23144607	Protector, PRF31505PRT, DC60V, 3.15A
Z858	23144610	Protector, PRF63005PRT, DC60V, 6.3A
Z859	23144610	Protector, PRF63005PRT, DC60V, 6.3A
Z860	23144608	Protector, PRF40005PRT, DC60V, 4.0A
Z901	23103839	Ferrite Core, TFE1012 (50D9UXE/50D9UXA)
Z902	23103839	Ferrite Core, TFE1012 (50D9UXE/50D9UXA)
ZC01	23148757	Module, CM50DP30H, CONVER50
ZT01	23153736	Ceramic Resonator, TCR1025
ZY01	23148722	Module, MKMP32A, MULTI PICTURE MKM
ZY02	23148747	Module, MYCJ32, 3D-YCS COMB
ZY03	23148761	Module, TMA201A, SCAN CONVERTER, DFS

Location No.	Part No.	Description
PC BOARD ASSEMBLIES		
＊M021Z		RMT IN Board, PB9092-1
＊M022Z		FRT IN Board, PB9092-2
＊M023Z		FRT CON Board, PB9092-3
＊M031Z		CRT-D/R Board, PB9752-1
＊M032Z		CRT-D/G Board, PB9752-2
＊M033Z		CRT-D/B Board, PB9752-3
＊M034Z		SVM-G Board, PB9752-4
＊M035Z		SVM-R Board, PB9752-5
＊M036Z		SVM-B Board, PB9752-6
＊U401		DEF Board, PB9731
＊U701		CONV. OUT Board, PB9749
＊U801		Power Board, PB9748
＊U901		Signal Board, PB9738 (50D9UXE/50D9UXA)
＊U901		Signal Board, PB9740 (50D9UXH)
＊U902		VCD Board, PB9747
＊UM01		TEXT Board, PB9745 (50D9UXE/50D9UXA)
＊UV01		BACK AV Board, PB9746
PICTURE TUBE		
⚠V901R	23005845	Protector Coupling 50R
⚠V902G	23005846	Protector Coupling 50G
⚠V903B	23005847	Protector Coupling 50B
TUNER		
H001	23321393	Tuner, EC954LW
HY01	23321384	Tuner, ECA32LX2
ACCESSORIES		
K902	23306246	Remote Hand Unit, CT-9933 (50D9UXE/50D9UXA)
K902	23306245	Remote Hand Unit, CT-9932 (50D9UXH)
AT03	23588255	Battery Cover
Y101E	23565061	Owner's Manual, English, 50D9UXE/50D9UXH/50D9UXA
Y101C	23565062	Owner's Manual, Hong Kong, 50D9UXH
Y109	23943846	Cover, Poly
CABINET PARTS		
A101	23411259	Wood Cabinet
A107	23549746	Rear Board Cover
A109	23564457	Label (50D9UXE)
A109	23564675	Label (50D9UXH)
A109	23564608	Label (50D9UXA)
A126	23445281	Button, Catch Male
A127	23445281	Button, Catch Male
A151	23525992	Case
A152	23935939	Packing, Bottom
A169	23730162	Screw, Wood
A171	23805157	Handle
A175	23436661	Caster
A202	23450181	Front Panel
A203	23527093	Speaker Grille R
A204	23527095	Speaker Grille L
A213	23427871	Door
A224	23445308	Knob, Control

Location No.	Part No.	Description
A225	23445309	Knob, Power
A322	23445282	Button, Catch Female
⚠A401	23549658	Back Board Cover
A505	72471068	Screw, BIDT2 4X12BZ
A506	23035412	Screw, BTB4X12SZN
A512	23035412	Screw, BTB4X12SZN
A519	72471068	Screw, BIDT2 4X12BZ
A520	23037310	Screw, BTBW 3X10SZN
A701	23064320	Case (50D9UXE)
A701	23064370	Case (50D9UXH)
A701	23064342	Case (50D9UXA)
A702	23935938	Packing, Top
A703	23845450	Joint
K501	23430817	Lenti Sheet, SCREEN50KKHL
K502	23430799	Fresnel Sheet, SCREEN50KKPF
K601	23430509	Mirror, MIRROR50H

Location No.	Part No.	Description

SIGNAL BOARD PB9738

BOTTOM (FOIL) SIDE

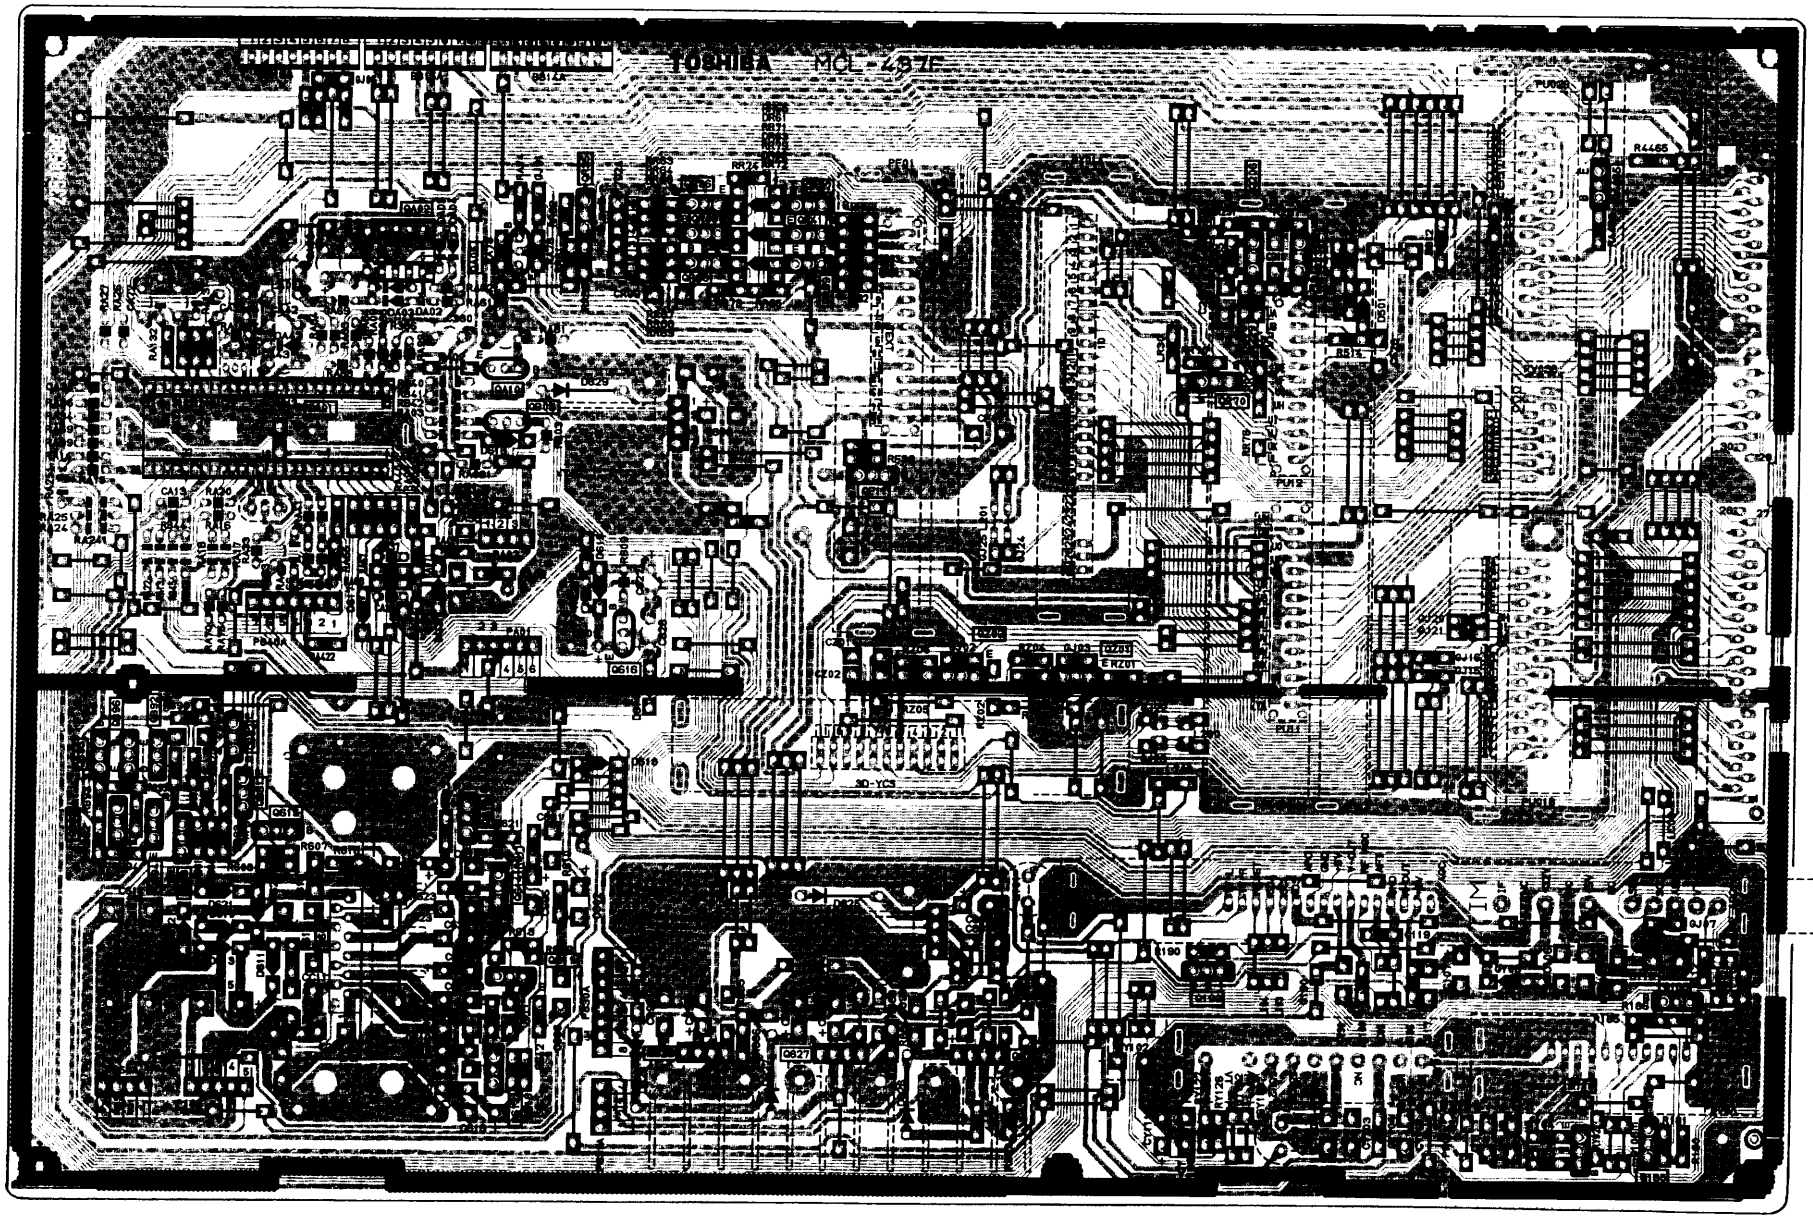

SIGNAL BOARD

BOTTOM (FOIL) SI

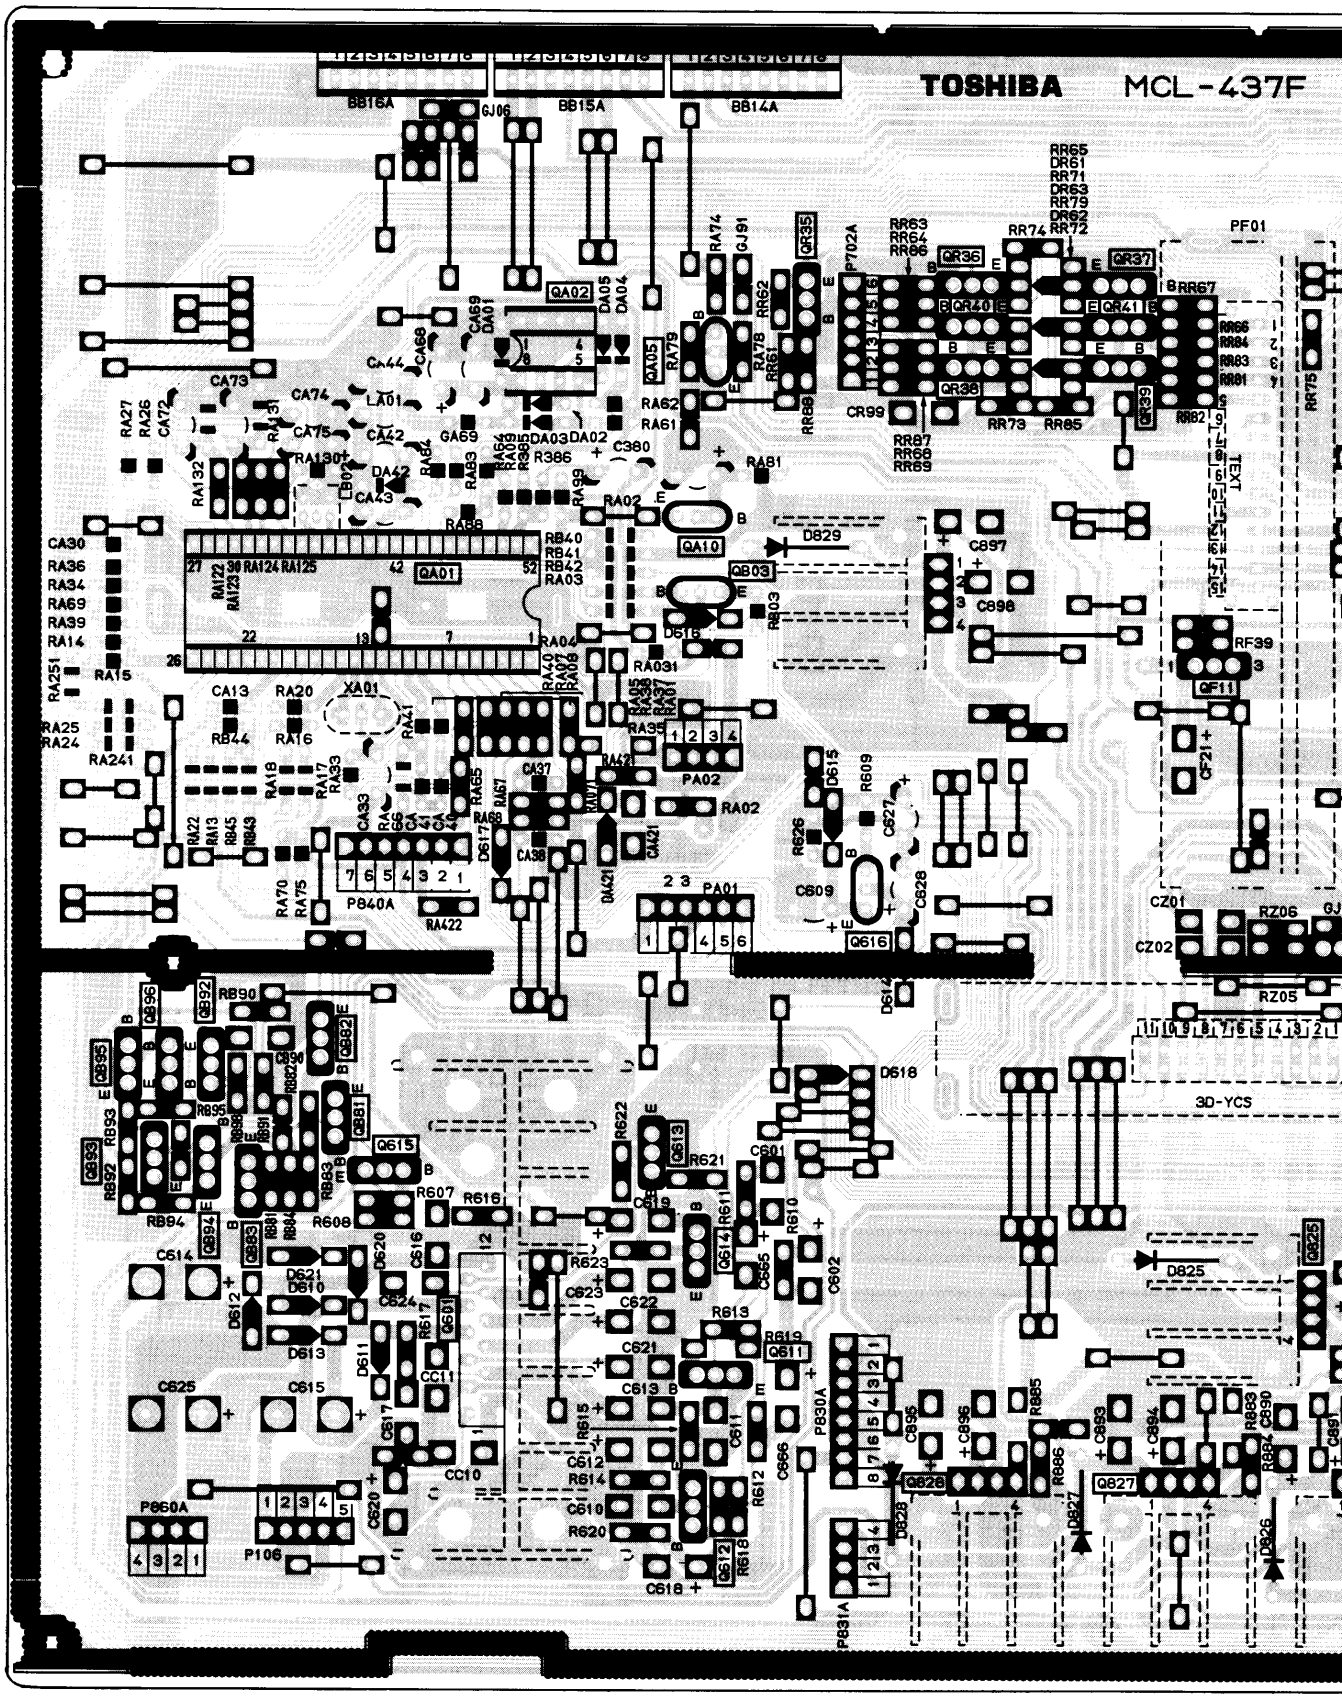

AL BOARD PB9738

BOTTOM (FOIL) SIDE

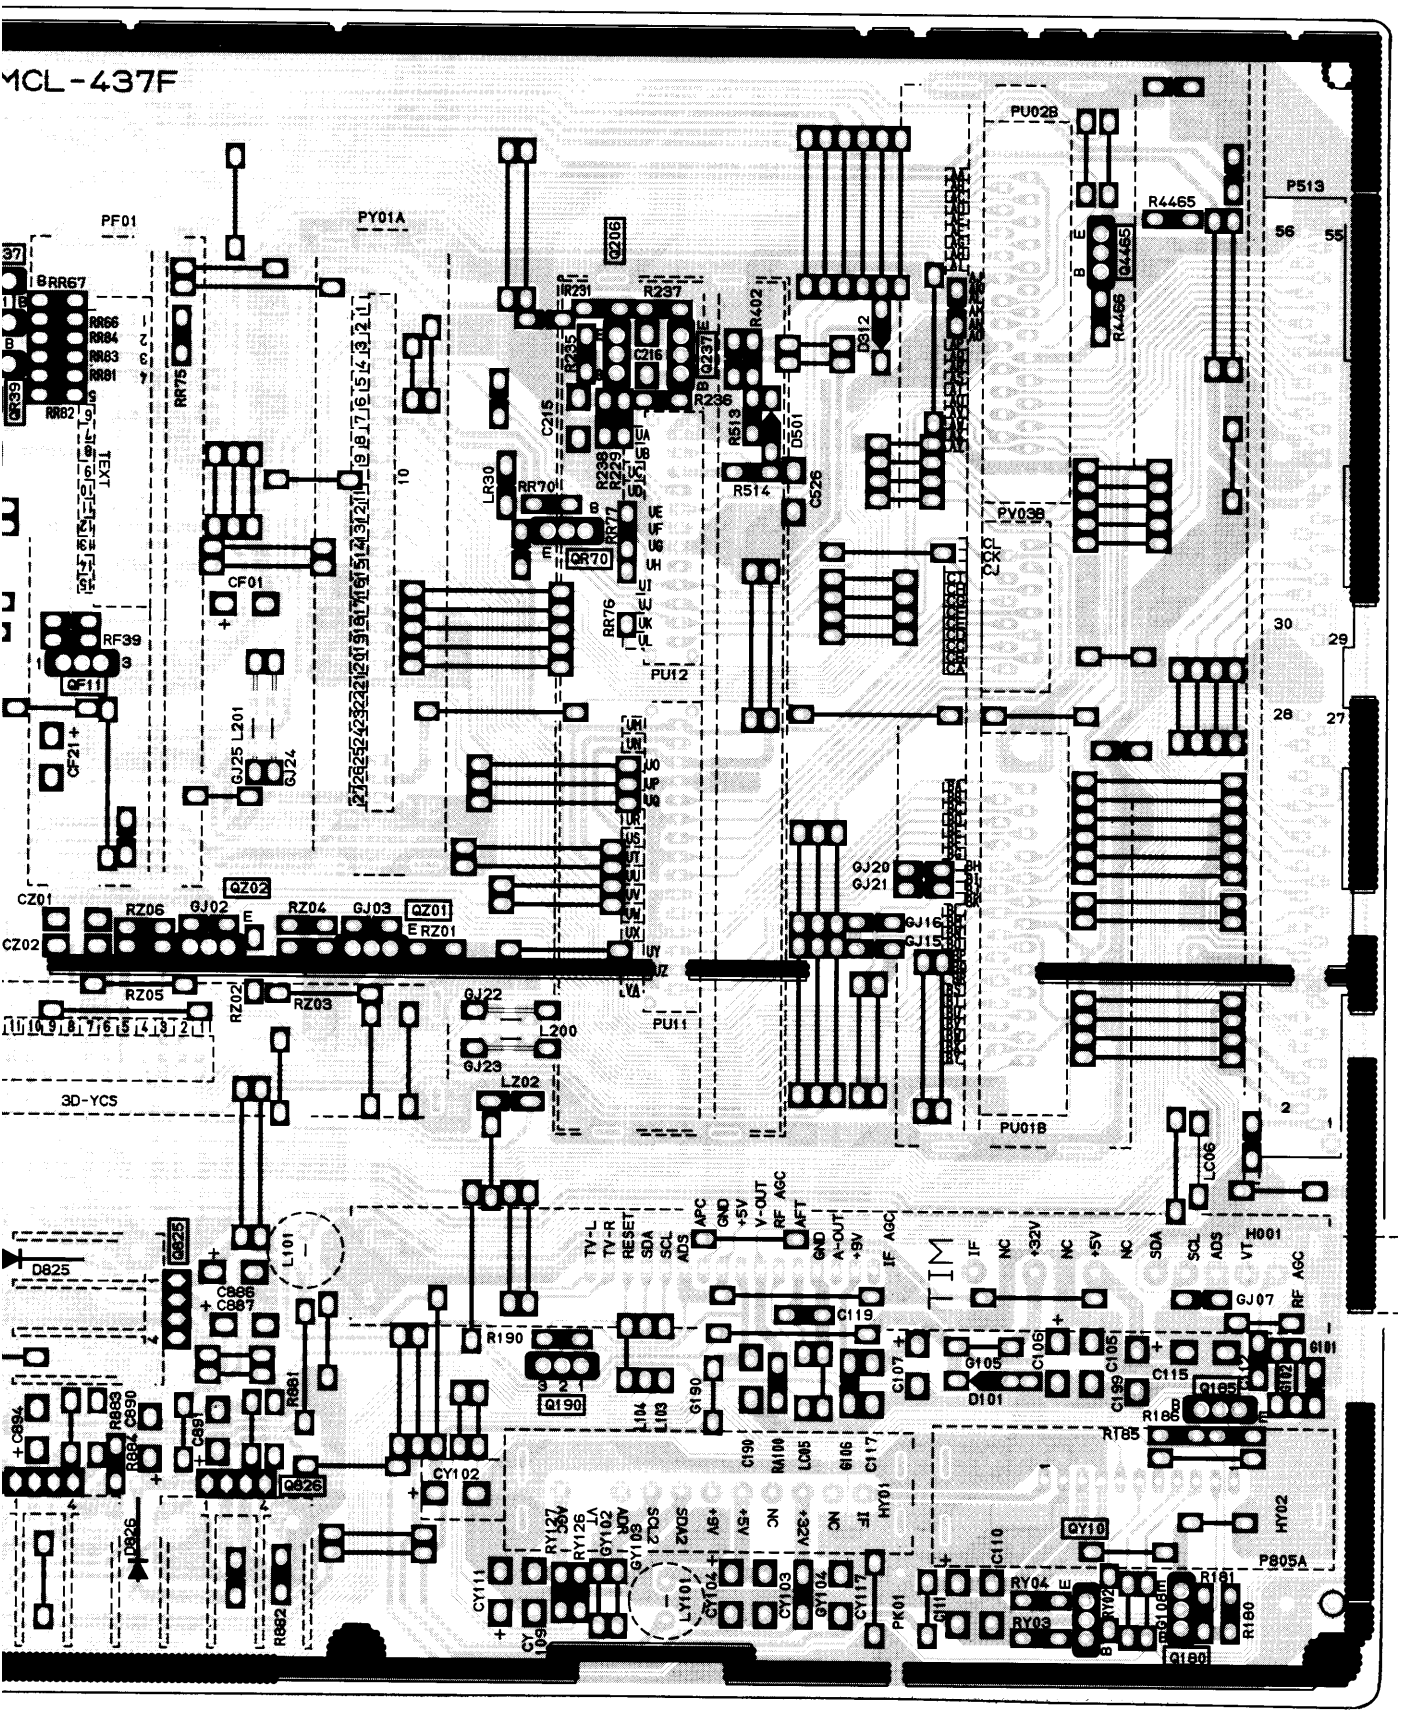

POWER BOARD PB9748

BOTTOM (FOIL) SIDE

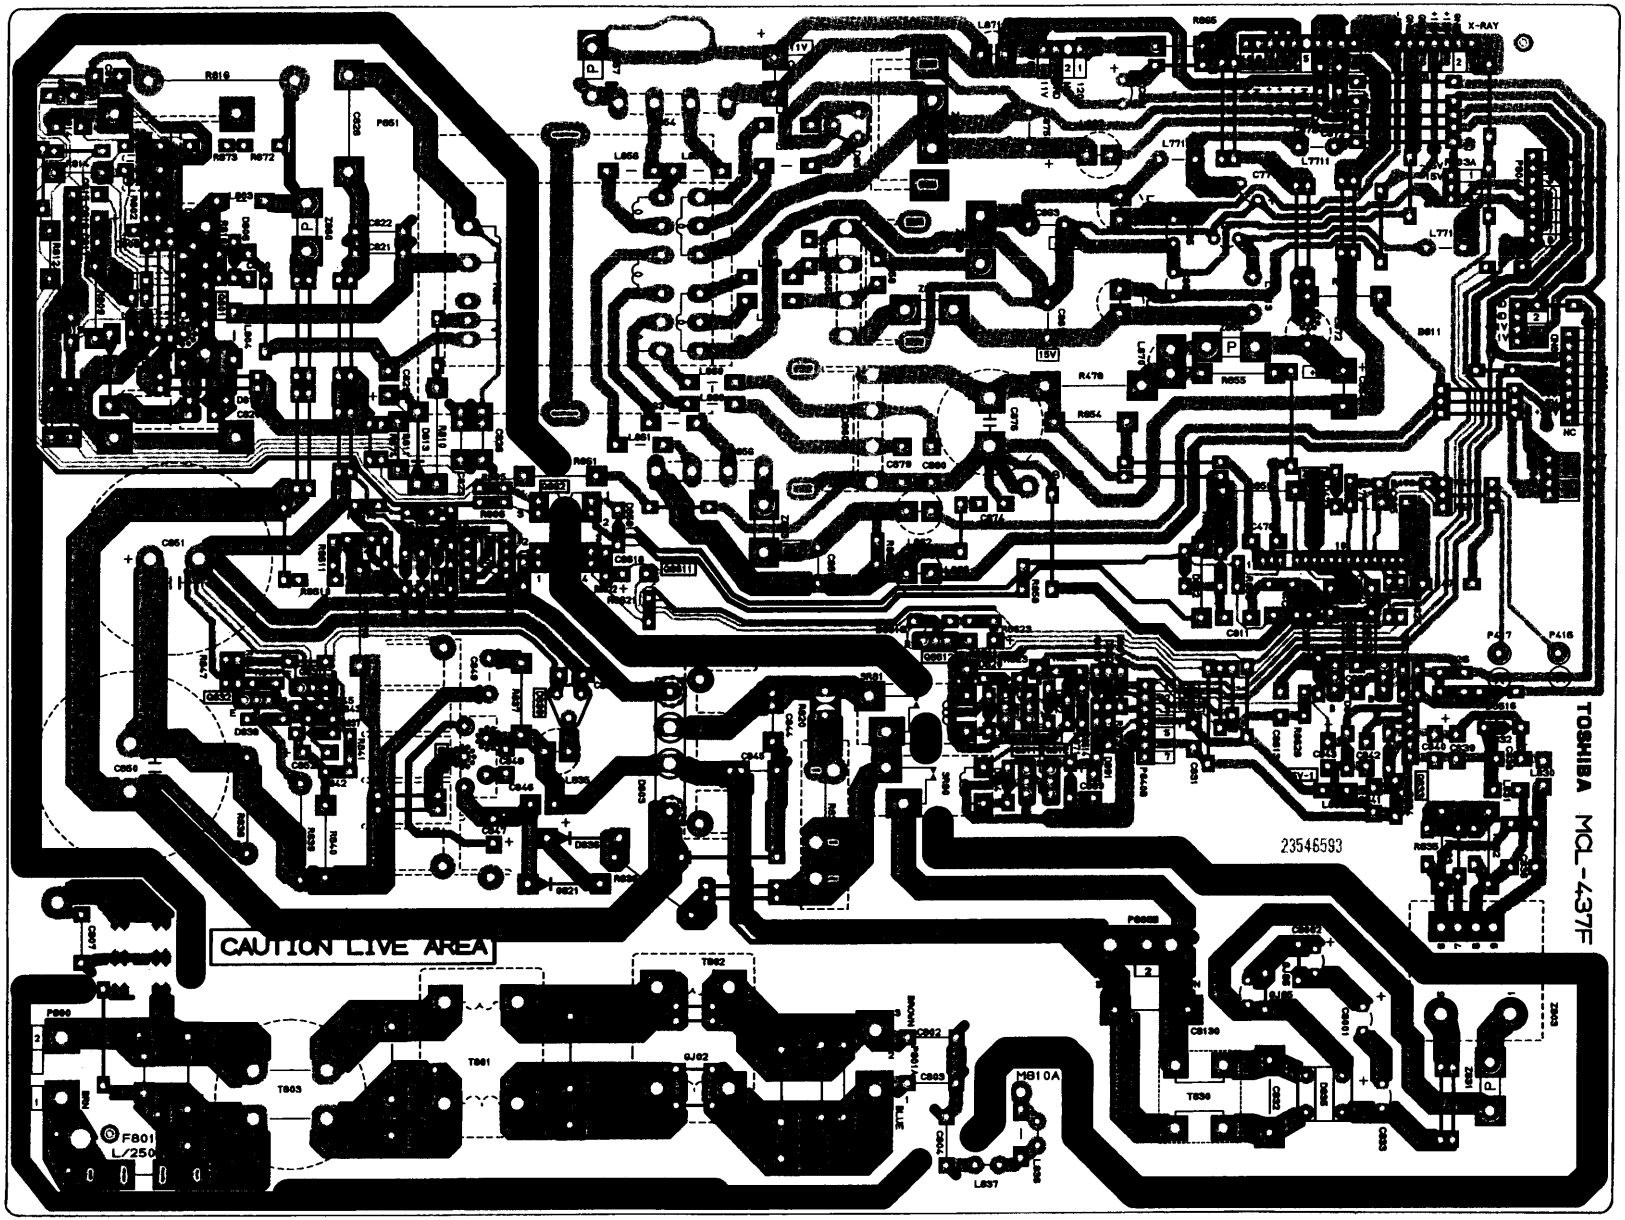

POWER BOARD

BOTTOM (FOIL)

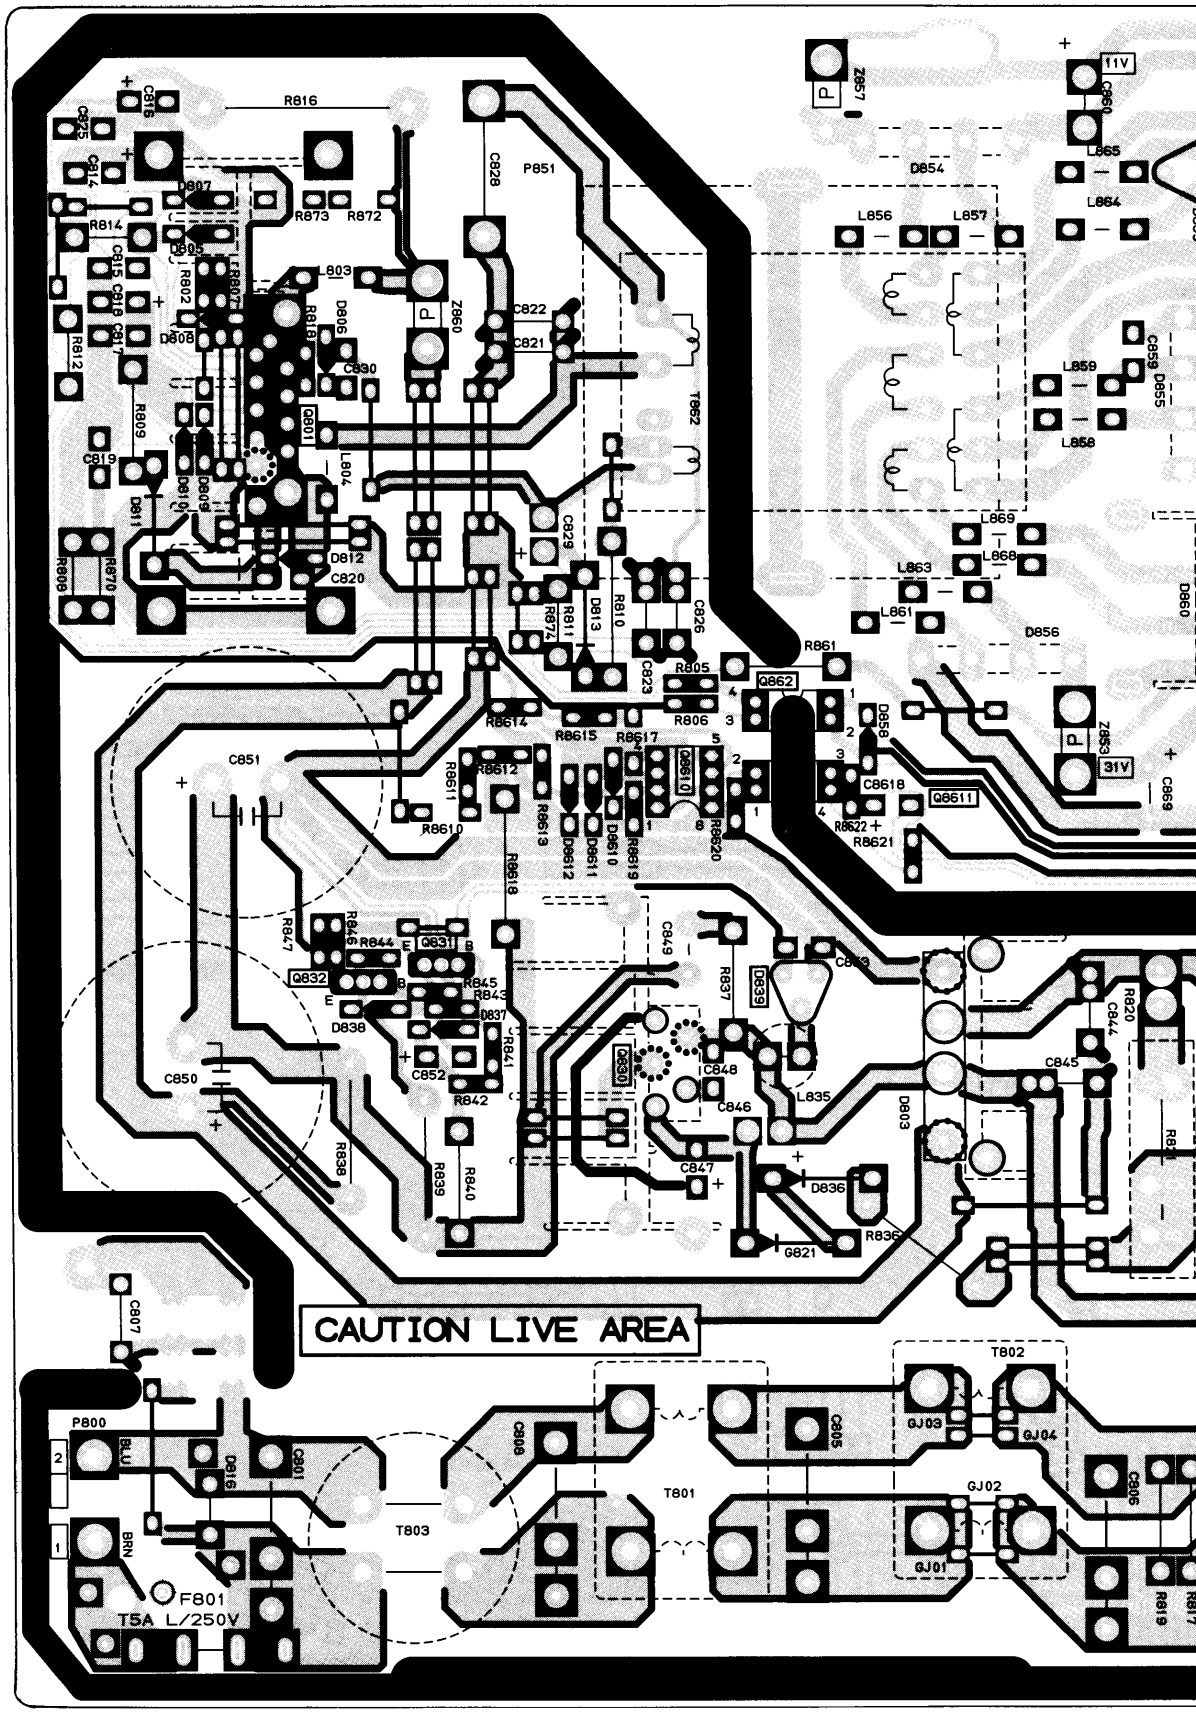

VER BOARD PB9748

BOTTOM (FOIL) SIDE

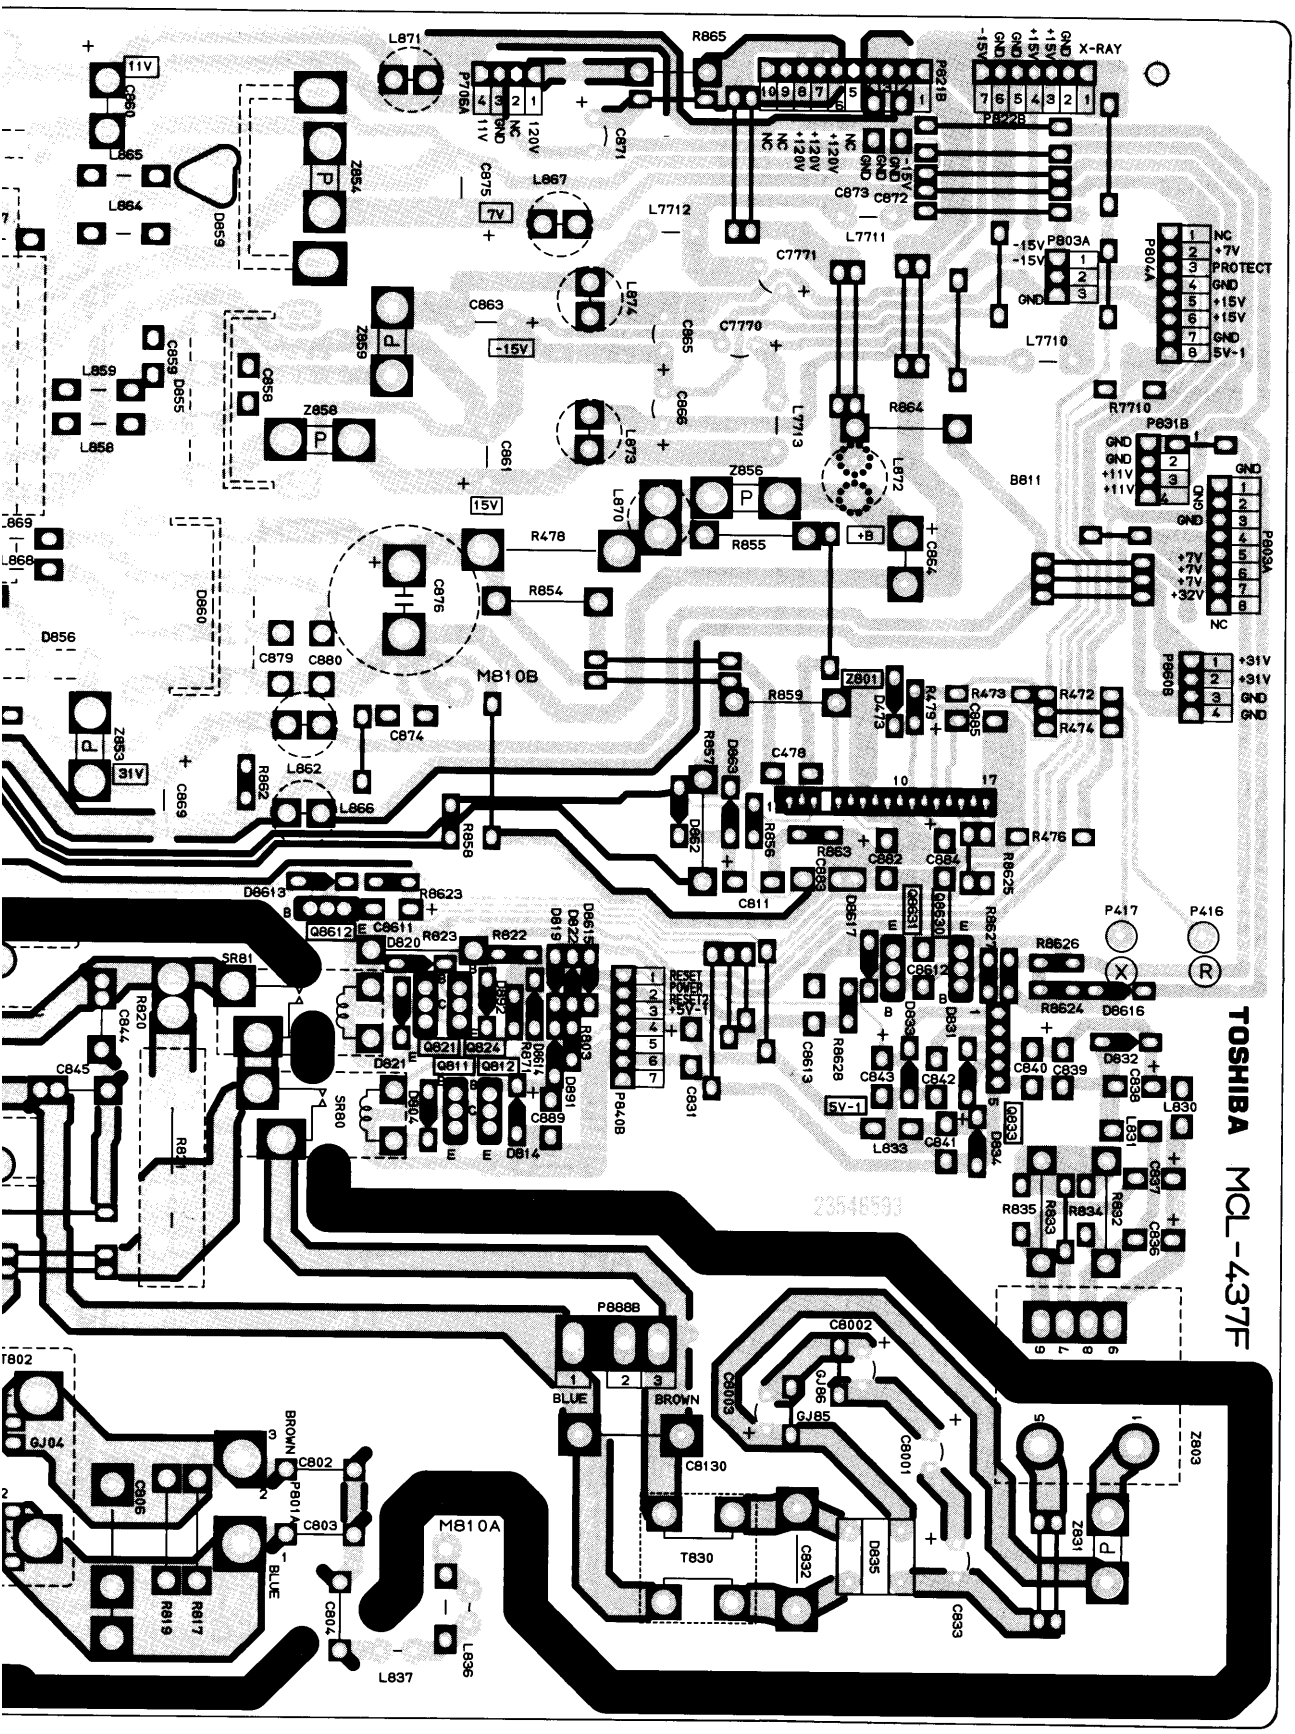

DEF BOARD PB9731

BOTTOM (FOIL) SIDE

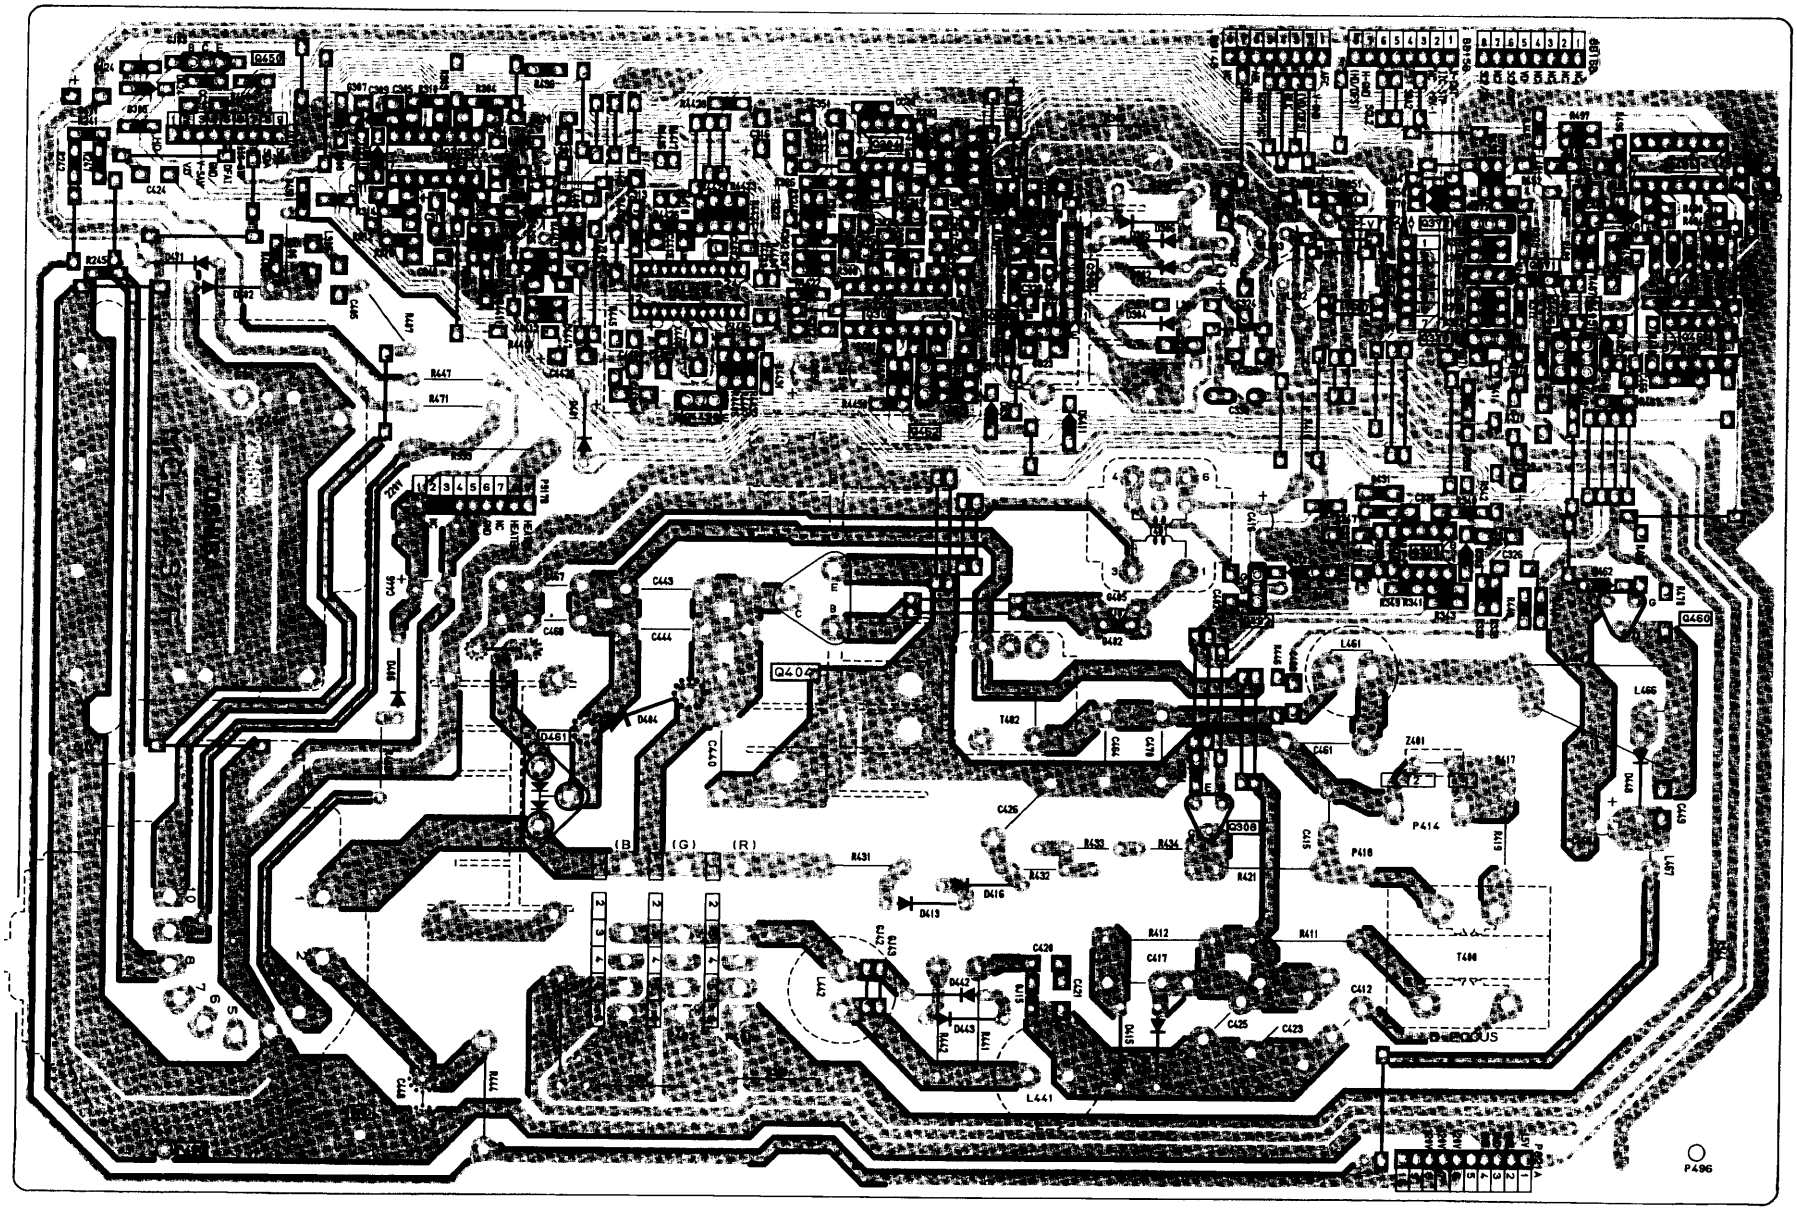

DEF BOARD P

BOTTOM (FOIL) S

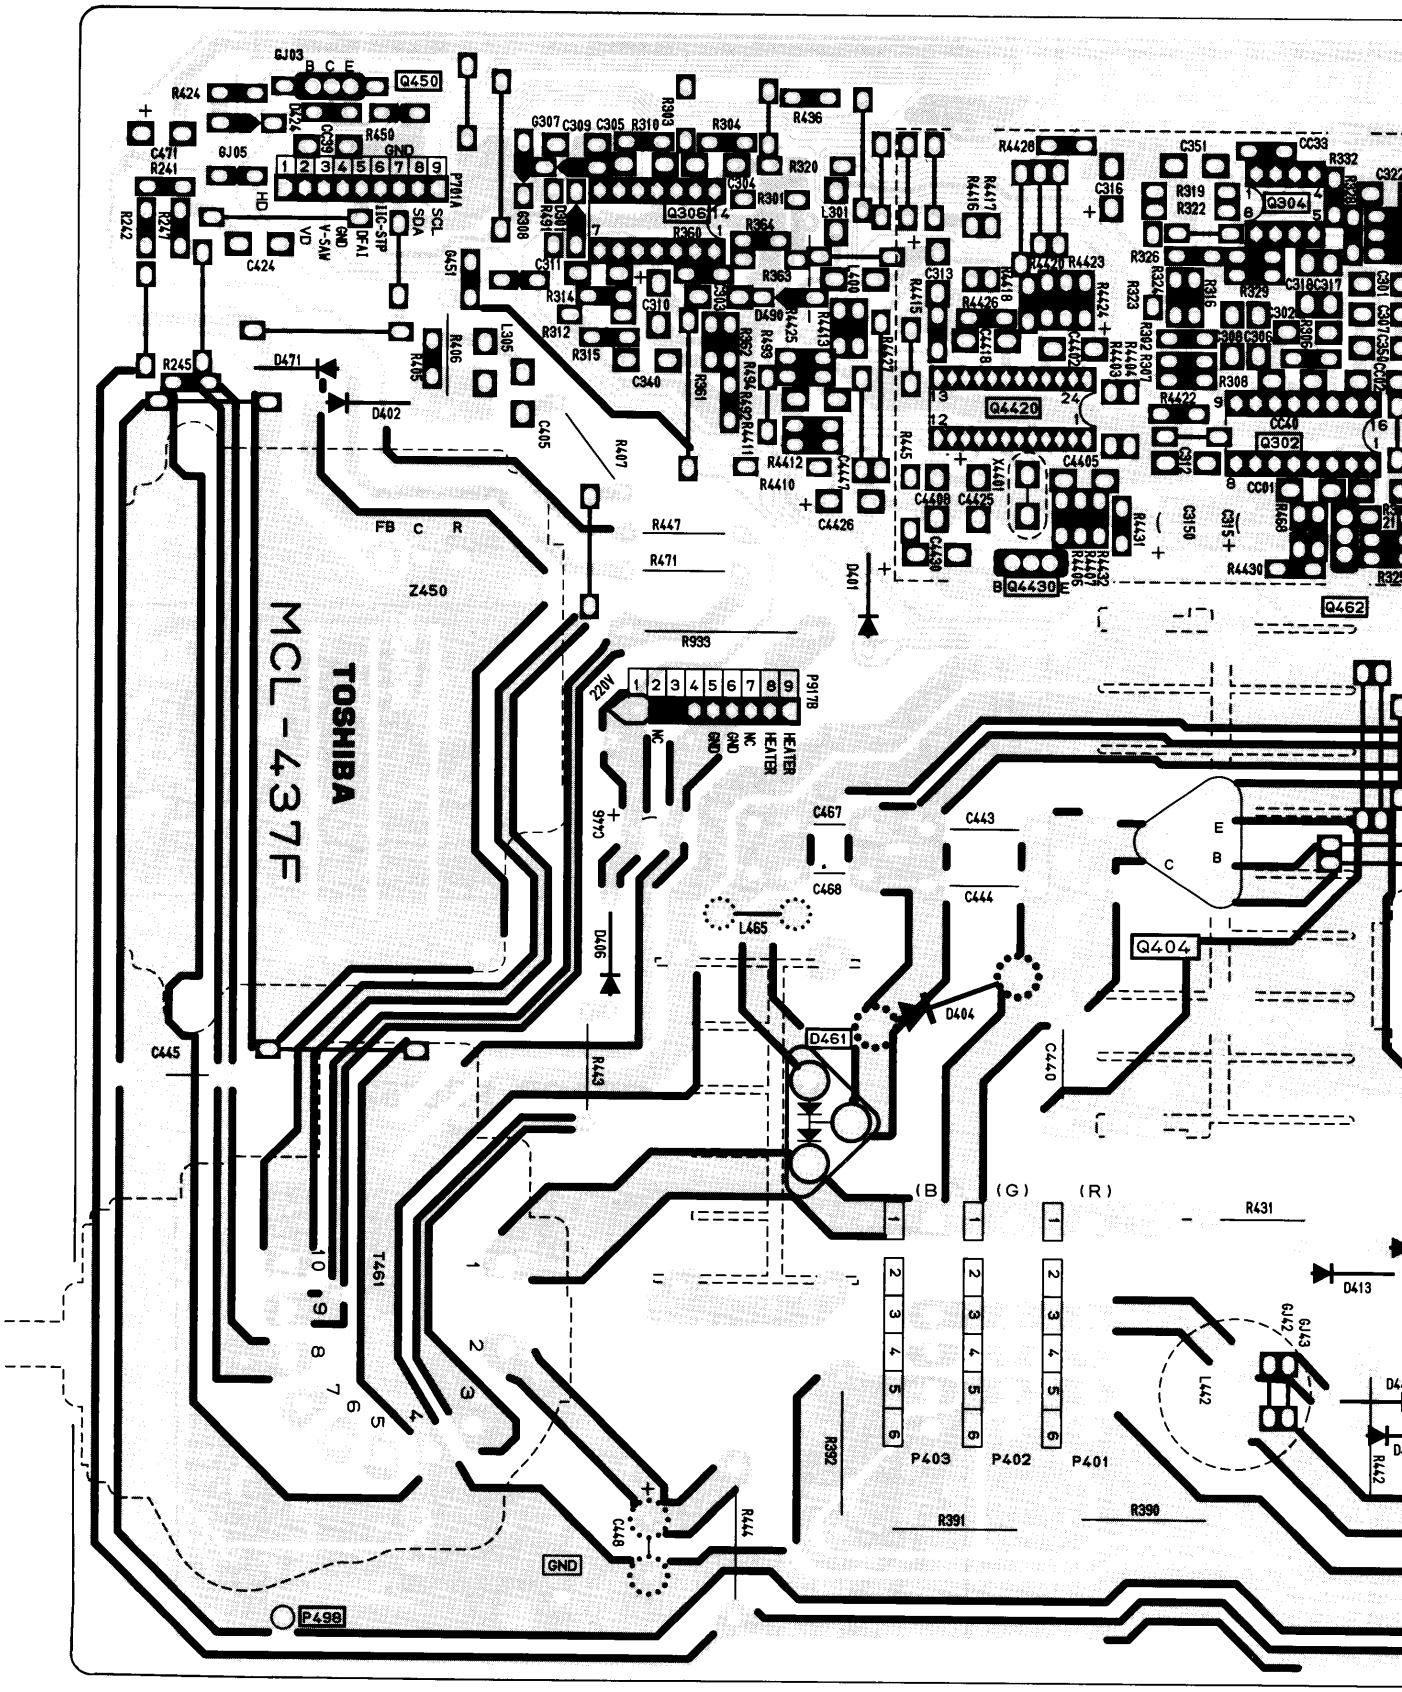

F BOARD PB9731

BOTTOM (FOIL) SIDE

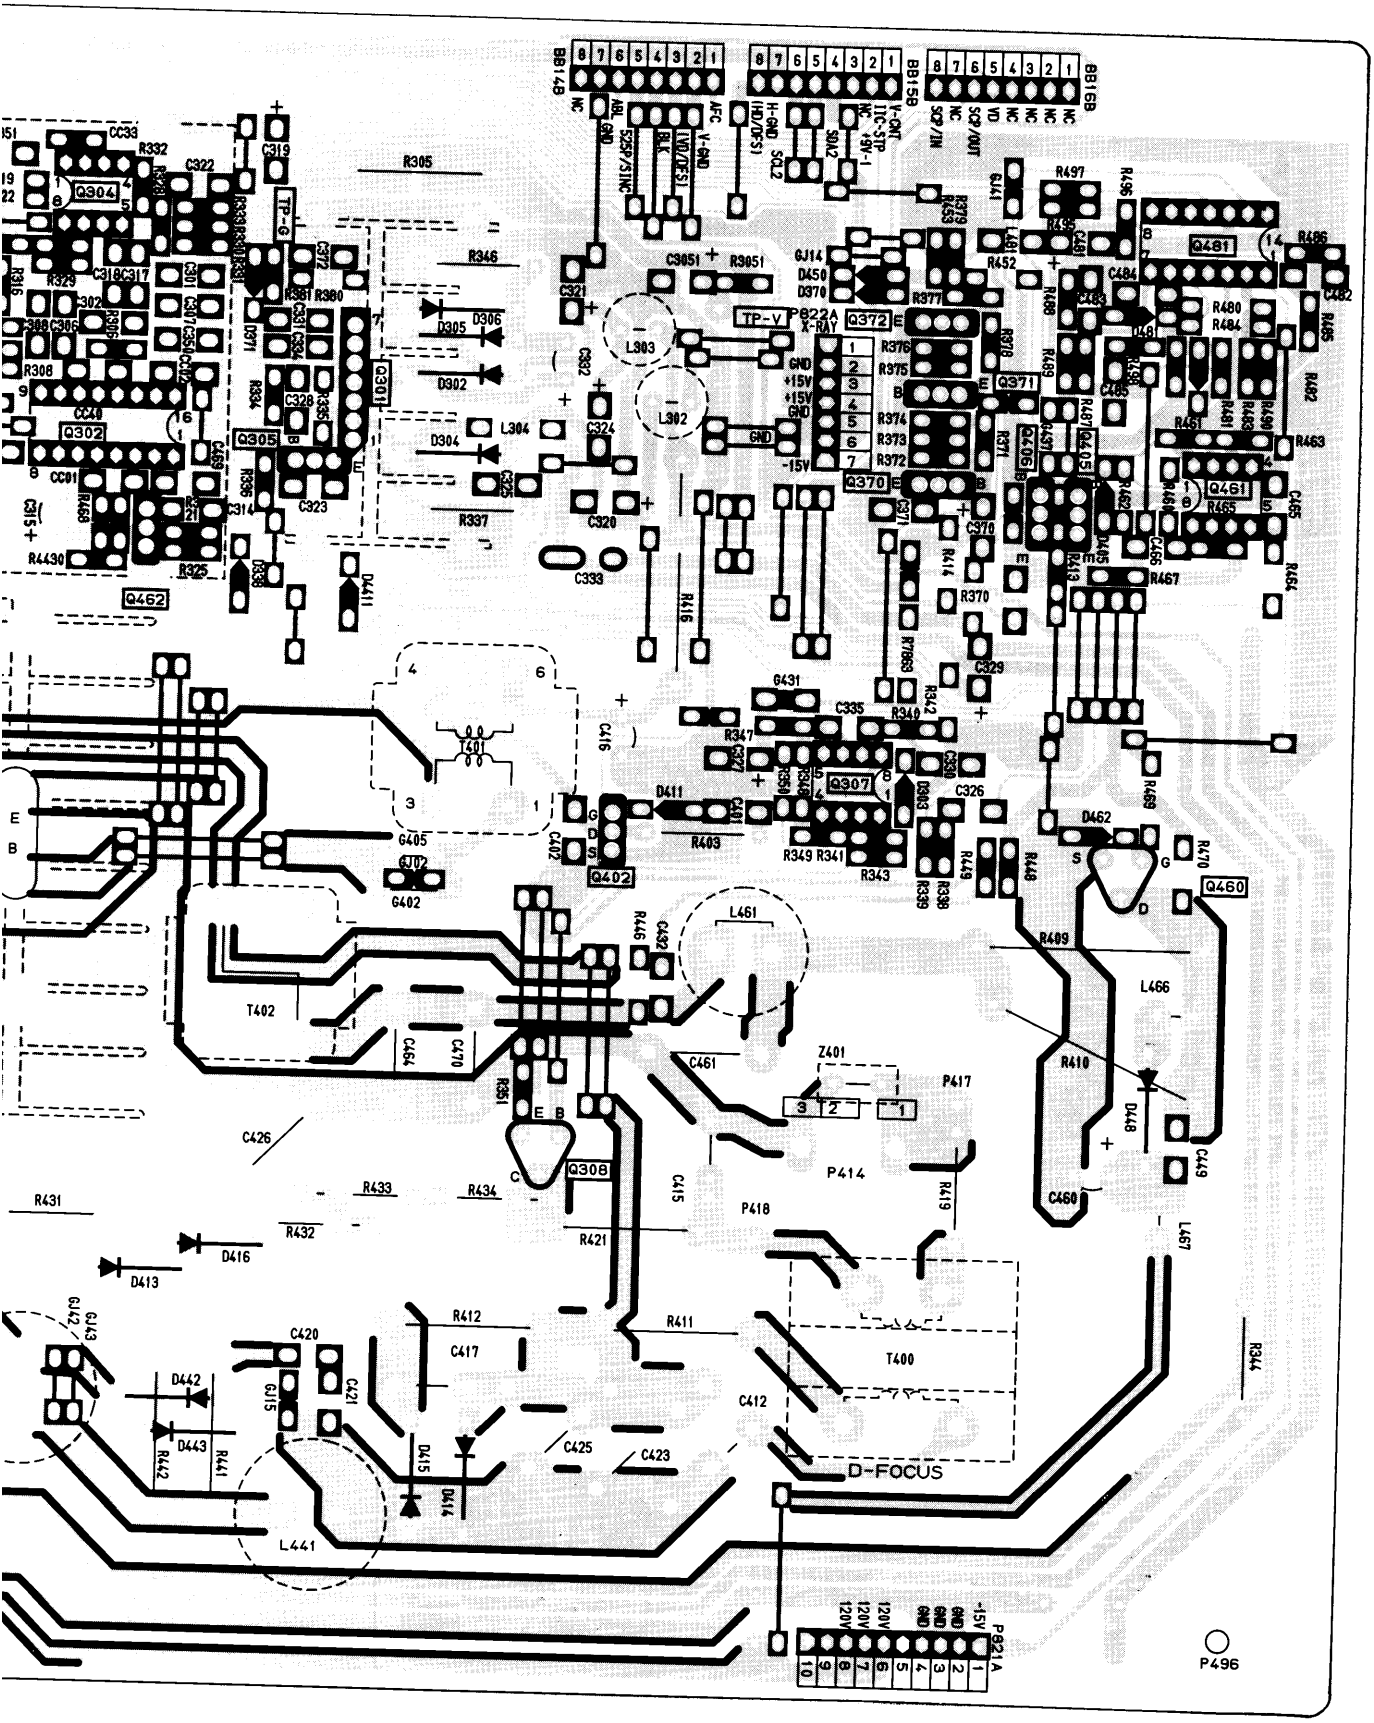

R-DRIVE BOARD PB9752-1

BOTTOM (FOIL) SIDE

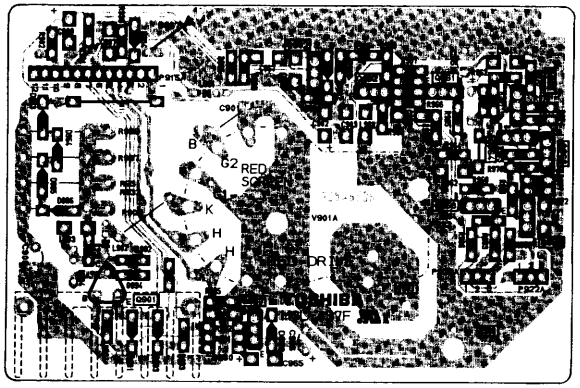

G-DRIVE BOARD PB9752-2

BOTTOM (FOIL) SIDE

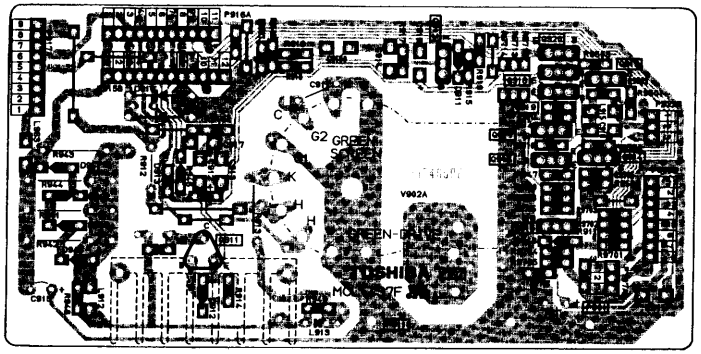

SVM-G BOARD PB9752-4

BOTTOM (FOIL) SIDE

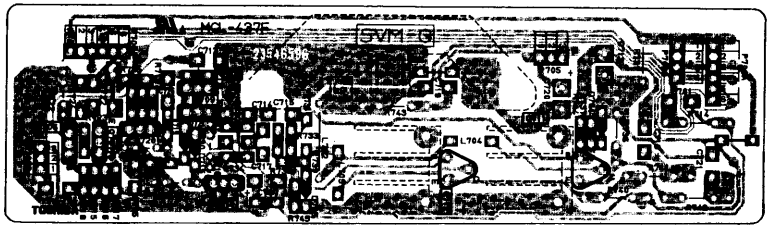

SVM-R BOARD PB9752-5

BOTTOM (FOIL) SIDE

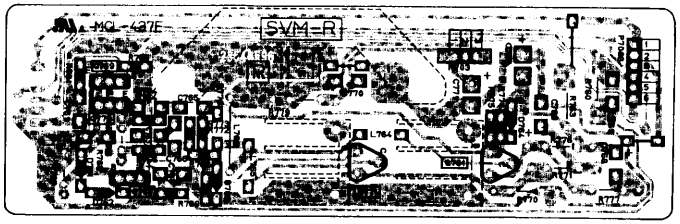

SVM-B BOARD PB9752-6

BOTTOM (FOIL) SIDE

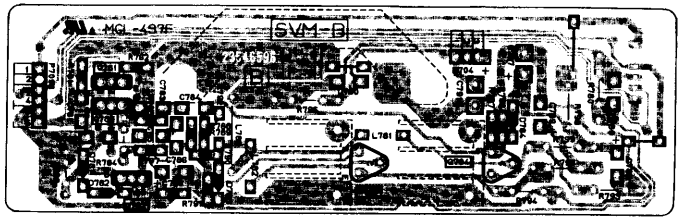

B-DRIVE BOARD PB9752-3

BOTTOM (FOIL) SIDE

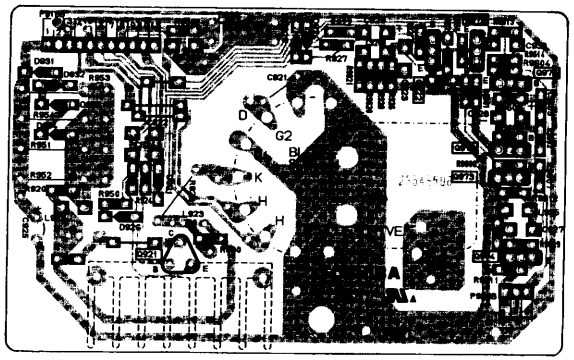

R-DRIVE BOARD PB9752-1

BOTTOM (FOIL) SIDE

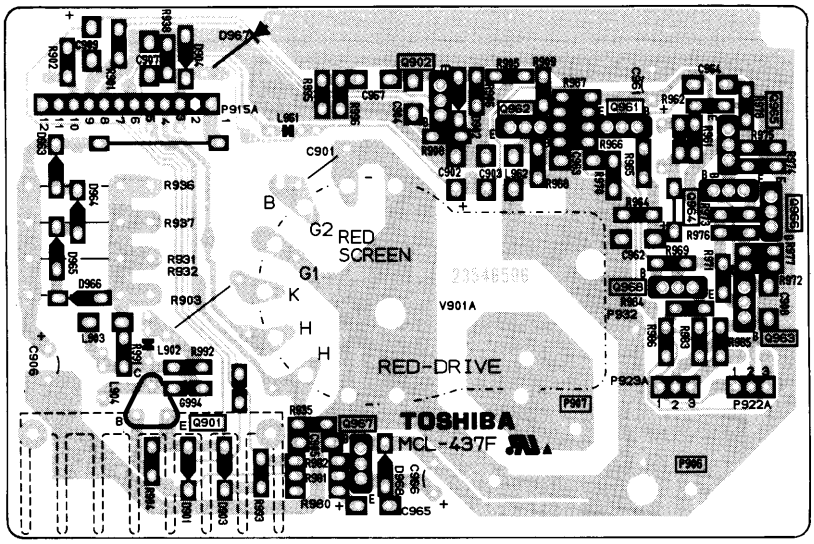

G-DRIVE BOARD PB9752-2

BOTTOM (FOIL) SIDE

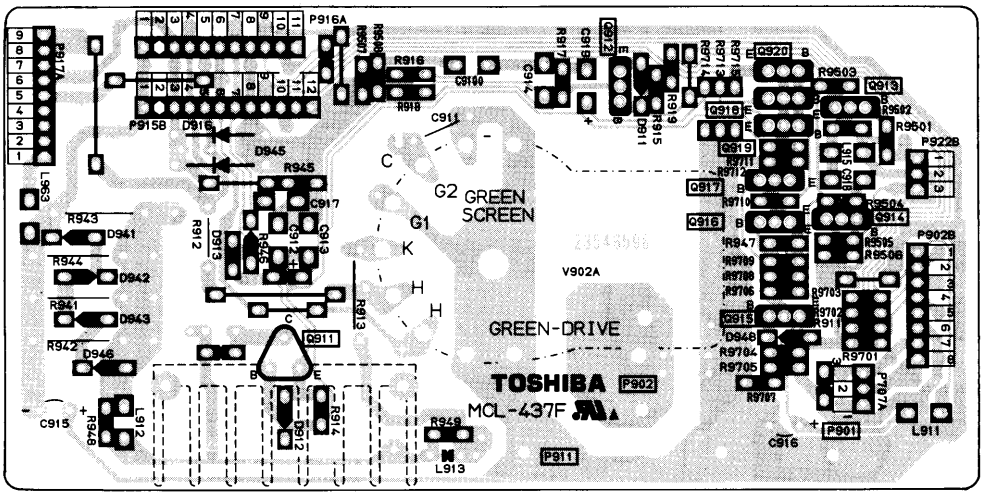

SVM-G BOARD PB9752-4

BOTTOM (FOIL) SIDE

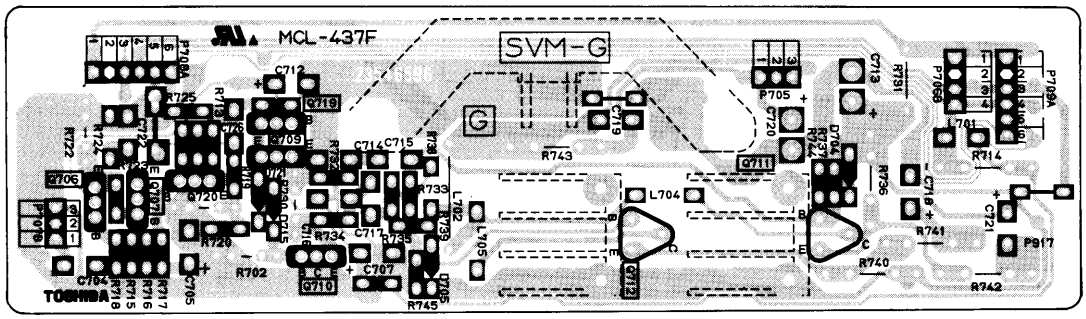

SVM-R BOARD PB9752-5

BOTTOM (FOIL) SIDE

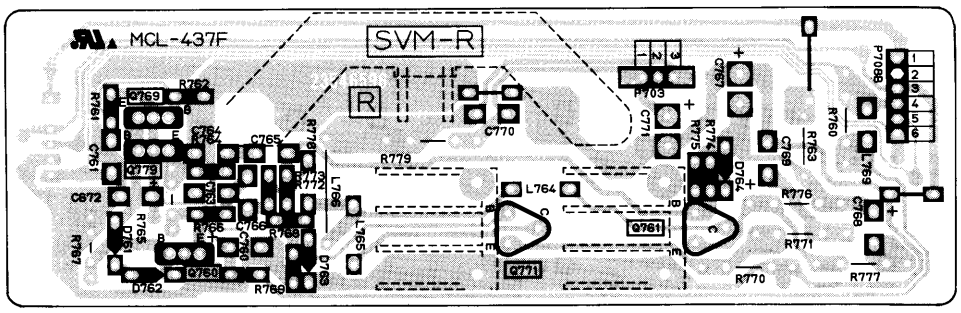

SVM-B BOARD PB9752-6

BOTTOM (FOIL) SIDE

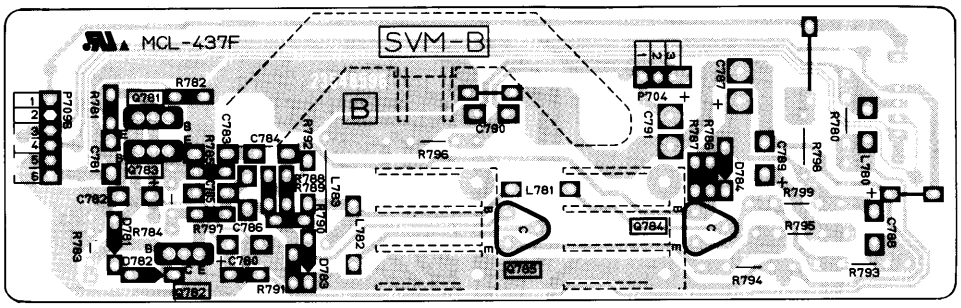

B-DRIVE BOARD PB9752-3

BOTTOM (FOIL) SIDE

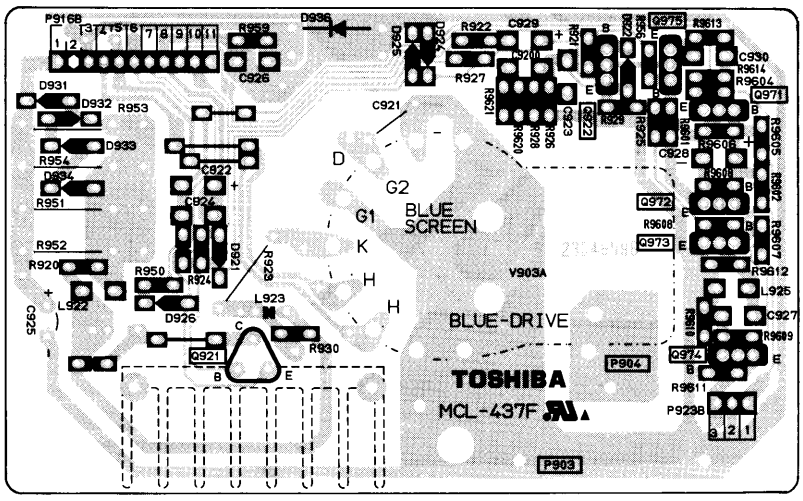

BACK/AV BOARD PB9746

BOTTOM (FOIL) SIDE

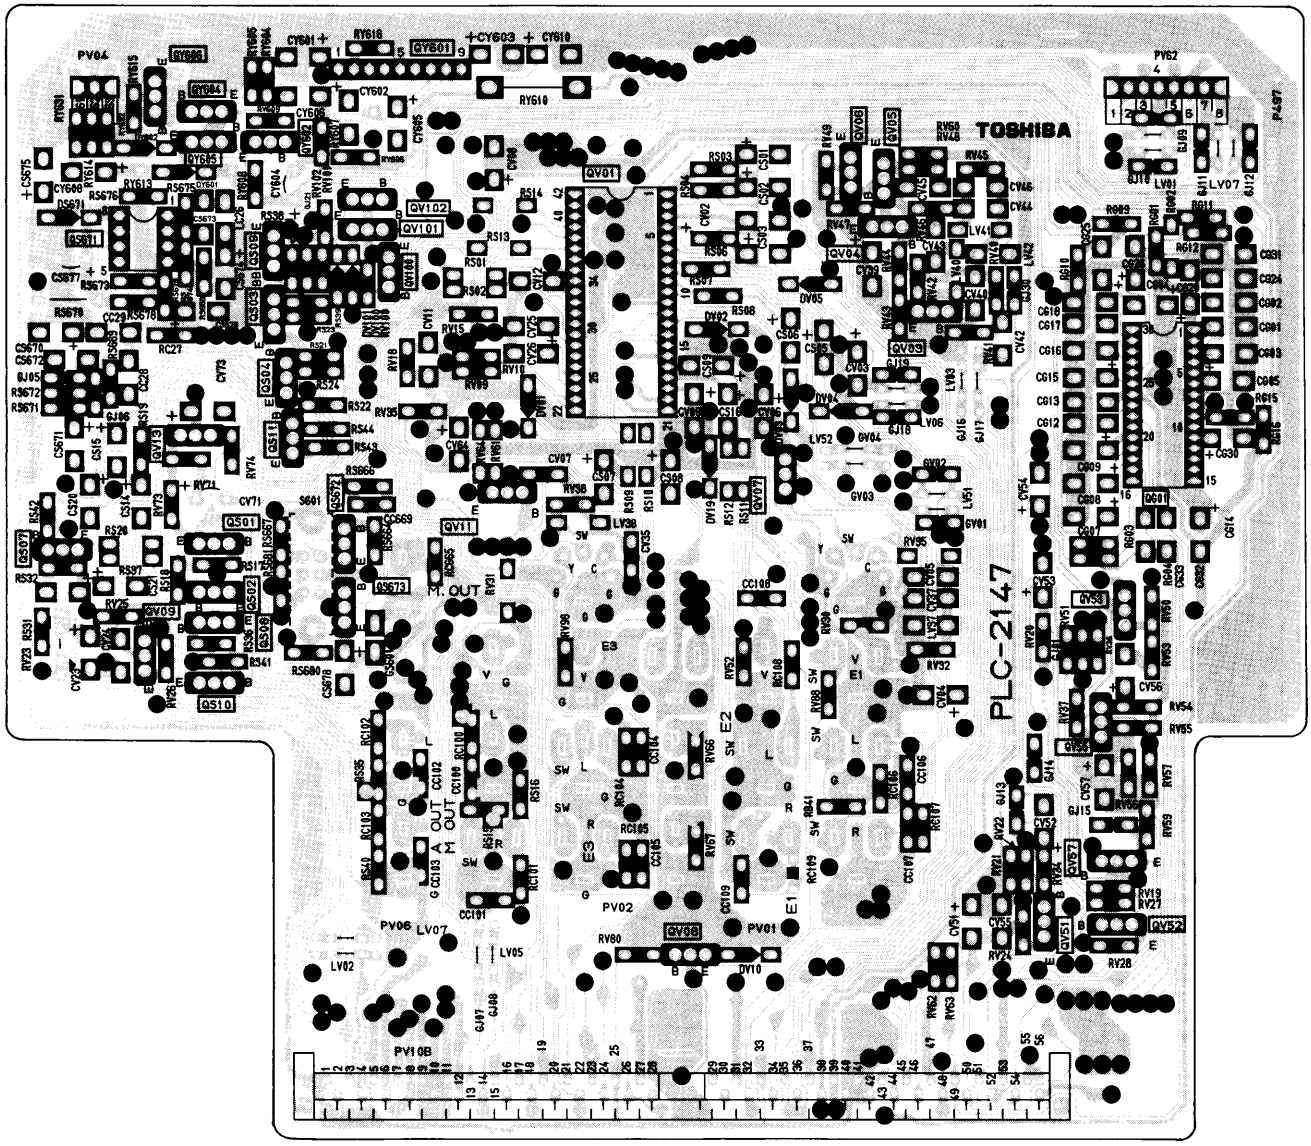

FRONT IN BOARD PB9092-2

BOTTOM (FOIL) SIDE

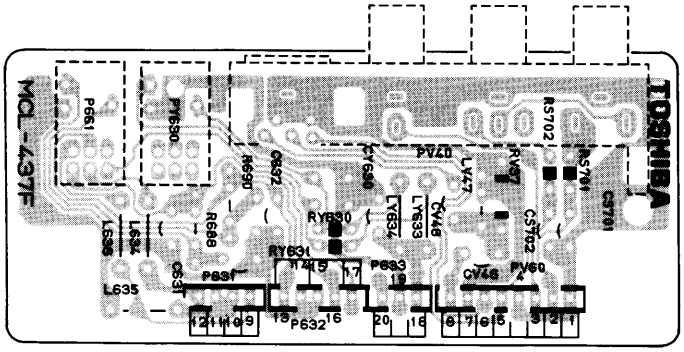

RMT IN BOARD PB9092-1

BOTTOM (FOIL) SIDE

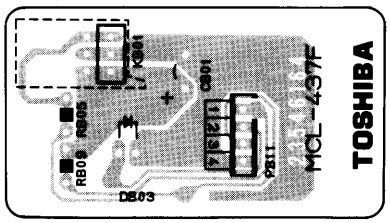

FRONT CONTROL BOARD PB9092-3

BOTTOM (FOIL) SIDE

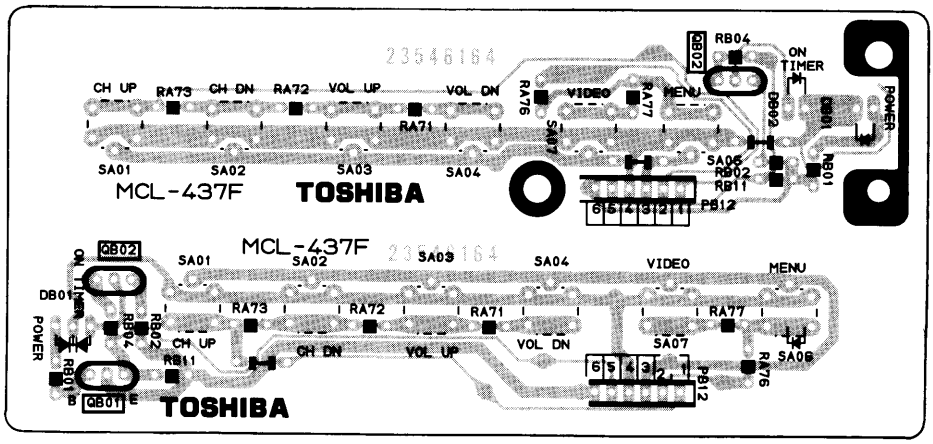

TEXT BOARD PB9745

BOTTOM (FOIL) SIDE

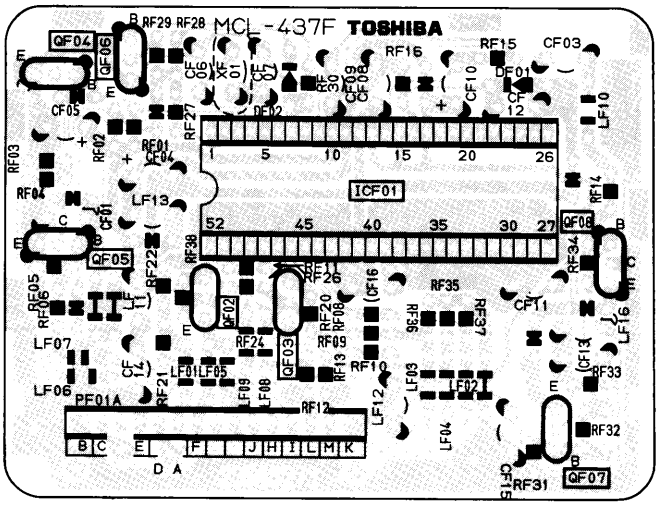

V/C/D BOARD PB9747

BOTTOM (FOIL) SIDE

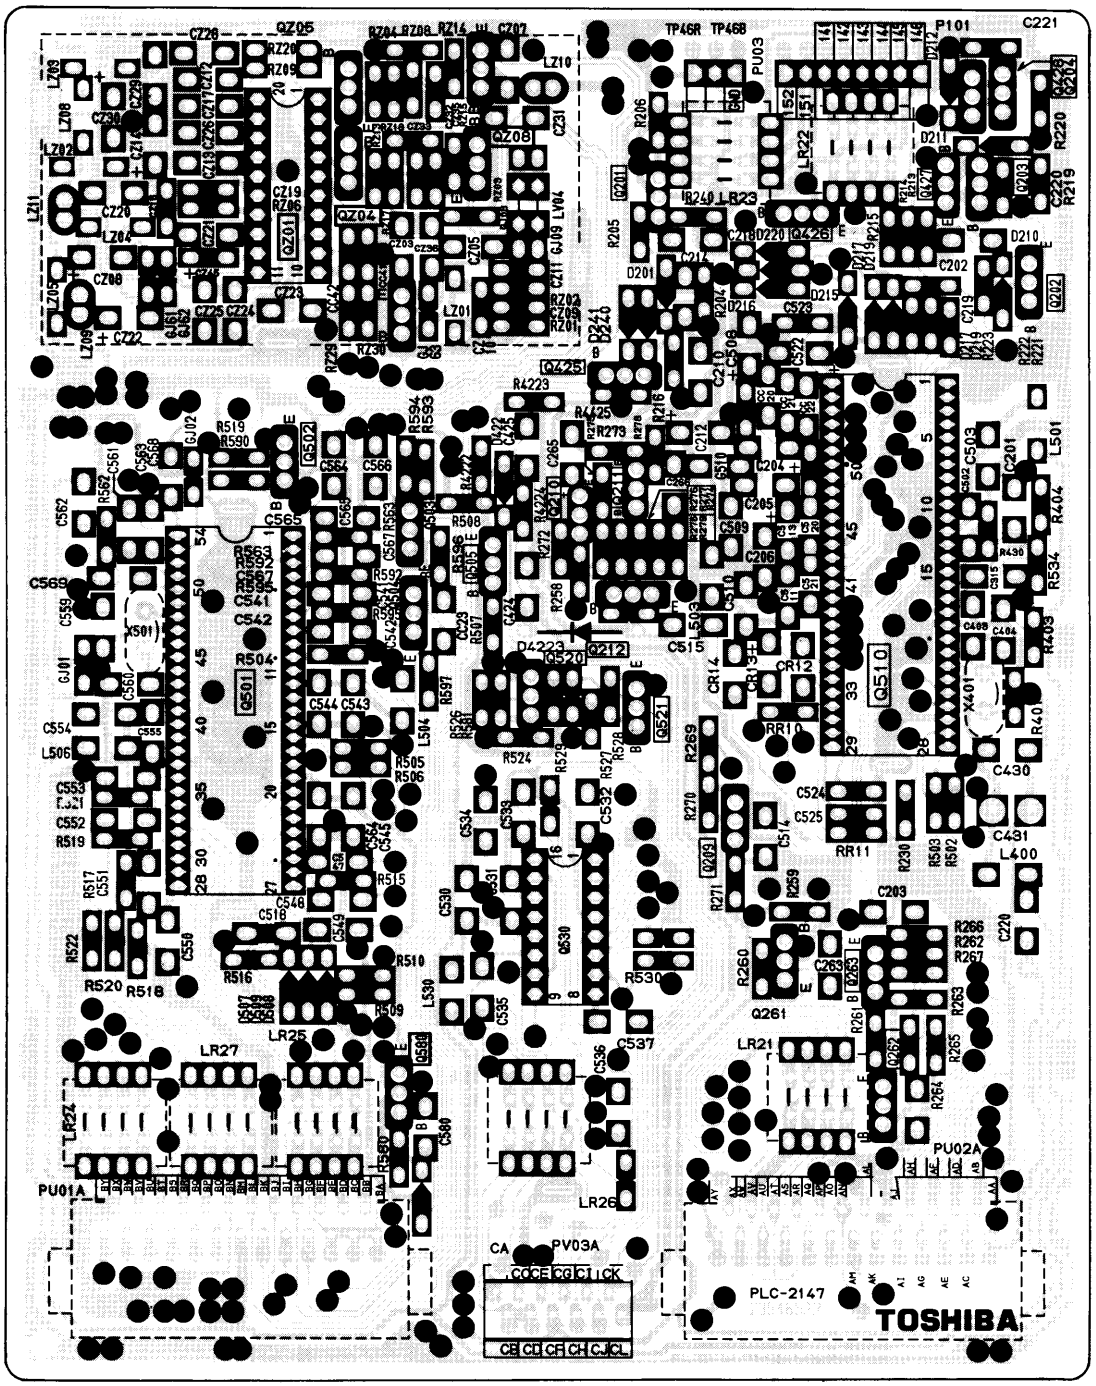

CONV/OUT CONTROL BOARD PB9749

BOTTOM (FOIL) SIDE

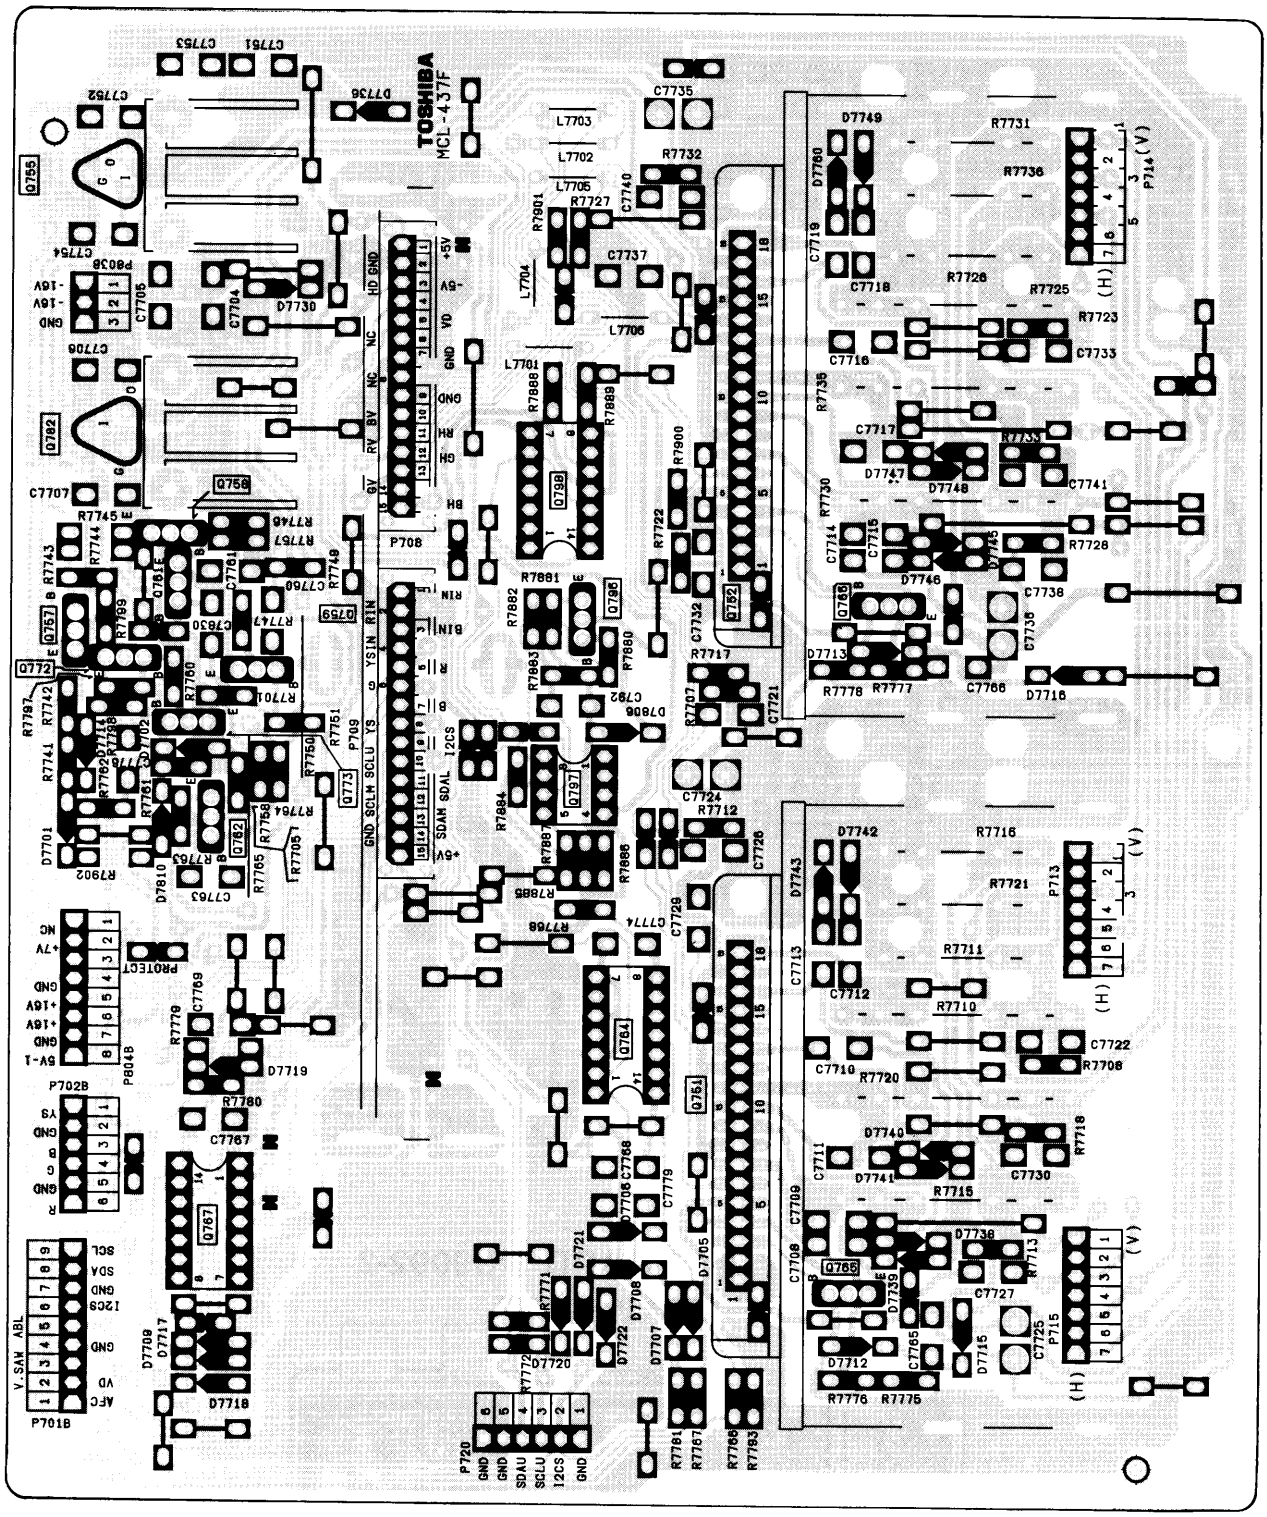

TERMINAL VIEW OF TRANSISTORS

① 2SD2253
(old)
2SC5243



② 2SC3852
2SD1763A
2SC1569
2SC4544
2SA1788
2SA1306
2SA1186A



③ 2SC752GTM
2SC2482
2SC2655
2SC4721P



④ 2SC752
2SA562TM
2SA1015
2SC1815
2SC2878
2SC1740S
2SC2120
2SA9335



⑤ 2SA1788



⑥ RN2203
RN2201
RN2004
RN1203
RN1204
RN2204
RN1205
RN1202
RN1201



⑦ 2SD1554
2SD2253
2SD1556
2SC5143
2SD2553
2SC5144



⑧ ON4409



MEMO

MEMO

MEMO

SPECIFICATION		Representative: 50D9UXE
Rated voltage		~ 110 V – 127 V, 220 V – 240 V, 50/60 Hz
Power consumption (at ~ 220 V, 50 Hz)		260 W
Dimensions (Width × Depth × Height)		1073.2 mm × 528.7 mm × 1296 mm
Mass		110 kg
Picture tube		Type 50(126 cm)
Television system (Aerial input)	Channel coverage	**System** **VHF** **UHF** **CATV (Channel)** PAL B/G (CCIR) 2 – 12 21 – 69 X ~ Z+2, S1 ~ S41 PAL I (UK) — 21 – 69 — PAL D/K (CHINA) 1 – 12 13 – 57 Z–1 ~ Z–38 SECAM B/G (CCIR) 2 – 12 21 – 69 X ~ Z+2, S1 ~ S41 SECAM D/K (OIRT) 1 – 12 21 – 69 X1 ~ X19 NTSC M (US) 2 – 13 14 – 69 A–6 ~ A–1, A ~ W, AA ~ ZZ, AAA, BBB NTSC M (JAPAN) 1 – 12 13 – 62 M1 ~ M10, S1 ~ S41
	Special RF signal	**Colour system** **Sound system** NTSC4.43 5.5/6.0/6.5 MHz PAL 60Hz 5.5/6.0/6.5 MHz
Colour system		PAL/SECAM/NTSC4.43/NTSC3.58
Sound output		14W + 14W
Accessories		• Remote controller × 1 • Caster trays × 4 • Batteries (R03, AAA) × 2 • AC adaptor × 1 (50D9UXM/61D9UXM only)

* Please refer to owner's manual in detail.

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (1/7)
50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal. Voltages reading may vary ±20%.
2. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
3. Waveforms are taken using a standard colour bar signal.
4. Make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position. Set other controls for best picture.

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ● : Solder links.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

40200009

PB9906	PB9905	PB9738	PB9749	PB9743	PB9743	PB9738D	PB9736F	PB9738D
61D9UXH	50D9UXH	50D9UXE 50D9UXA	50D9UXH	61D9UXE 61D9UXA	61D9UXH	43D9UXC	50D9UXC	61D9UXC

SIGNAL

DIGITAL WINDOW MODULE

TEXT UNIT

UP CONVERTER UNIT

3D-YCS

50D9UXE 50D9UXH 61D9UXH 50D9UXC
50D9UXA 61D9UXE 61D9UXH 61D9UXC
50D9UXH 61D9UXA 43D9UXC

✱ KETSU means to open the circuit

SIGNAL
50D9U SERIES

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (1/7)

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to cha
   volts, colour bar signal. Voltages reading may var
2. All waveforms are taken using a wide band oscilloso
3. Waveforms are taken using a standard colour bar
4. Make sure that CONTRAST and COLOUR contr
   BRIGHTNESS control is almost in maximum positi
   picture.

40200009

PB9906	PB9905	PB9738	PB9740	PB9742	PB9743	PB9738D	PB9738F	PB9738G
61D9UXM	50D9UXM	50D9UXE 50D9UXA	50D9UXH	61D9UXE 61D9UXA	61D9UXH	43D9UXC	50D9UXC	61D9UXC

SIGNAL

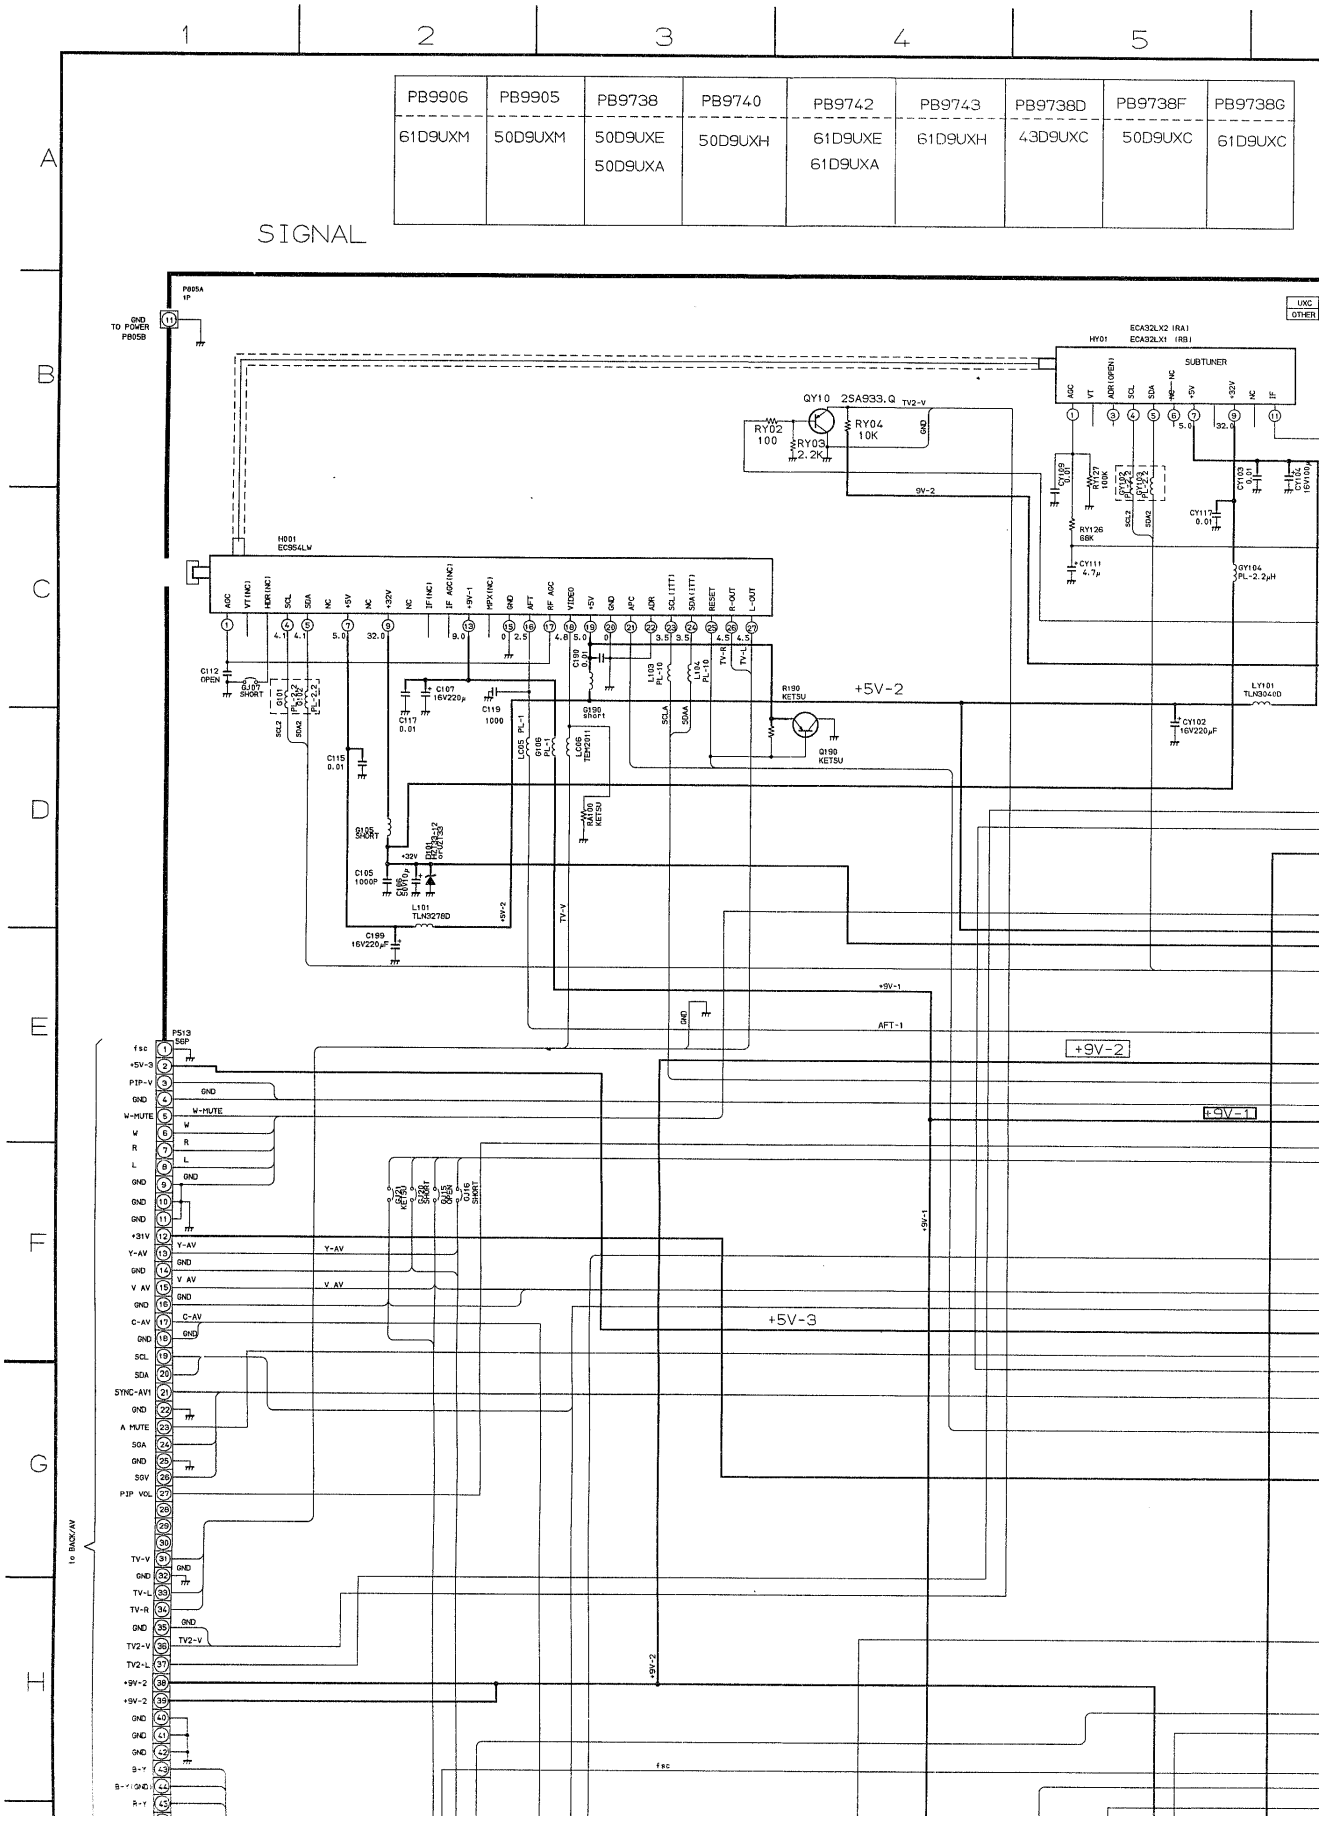

AVEFORMS

shown to chassis ground, line voltage 220
ding may vary ±20%.
band oscilloscope and a low capacity probe.
d colour bar signal.
OLOUR controls are in mid position and
ximum position. Set other controls for best

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⬬ : Solder links.

EXPRESSIO

VALUE OF

1. Resistance
2. Unless oth
   sed in μF a
3. Unless oth
   sed in μH,

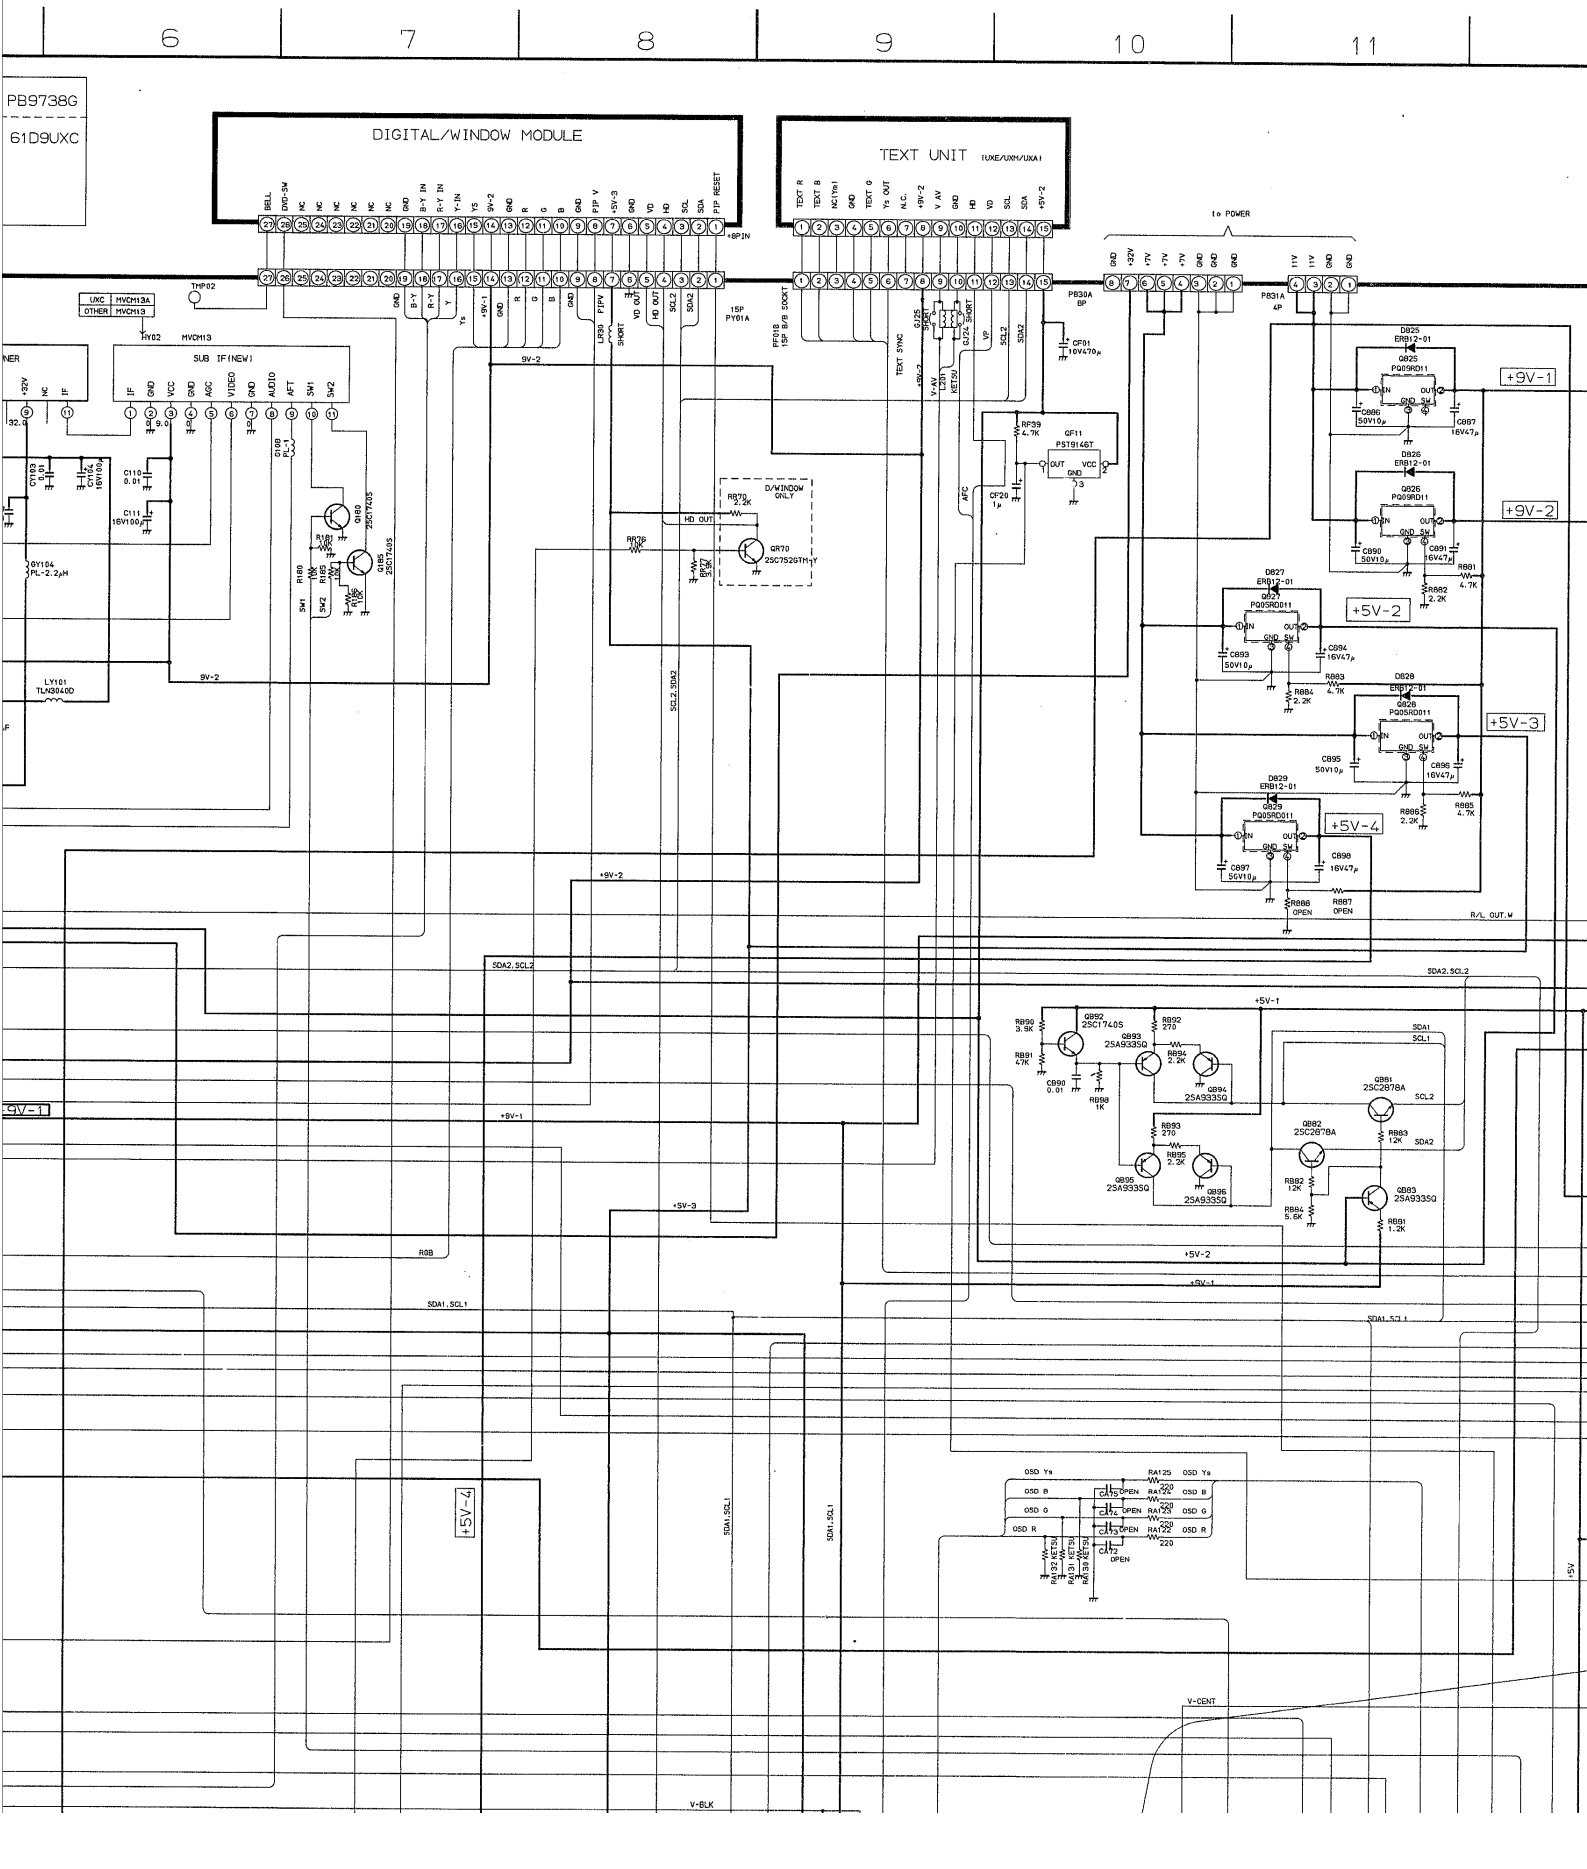

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

ematic dia-

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

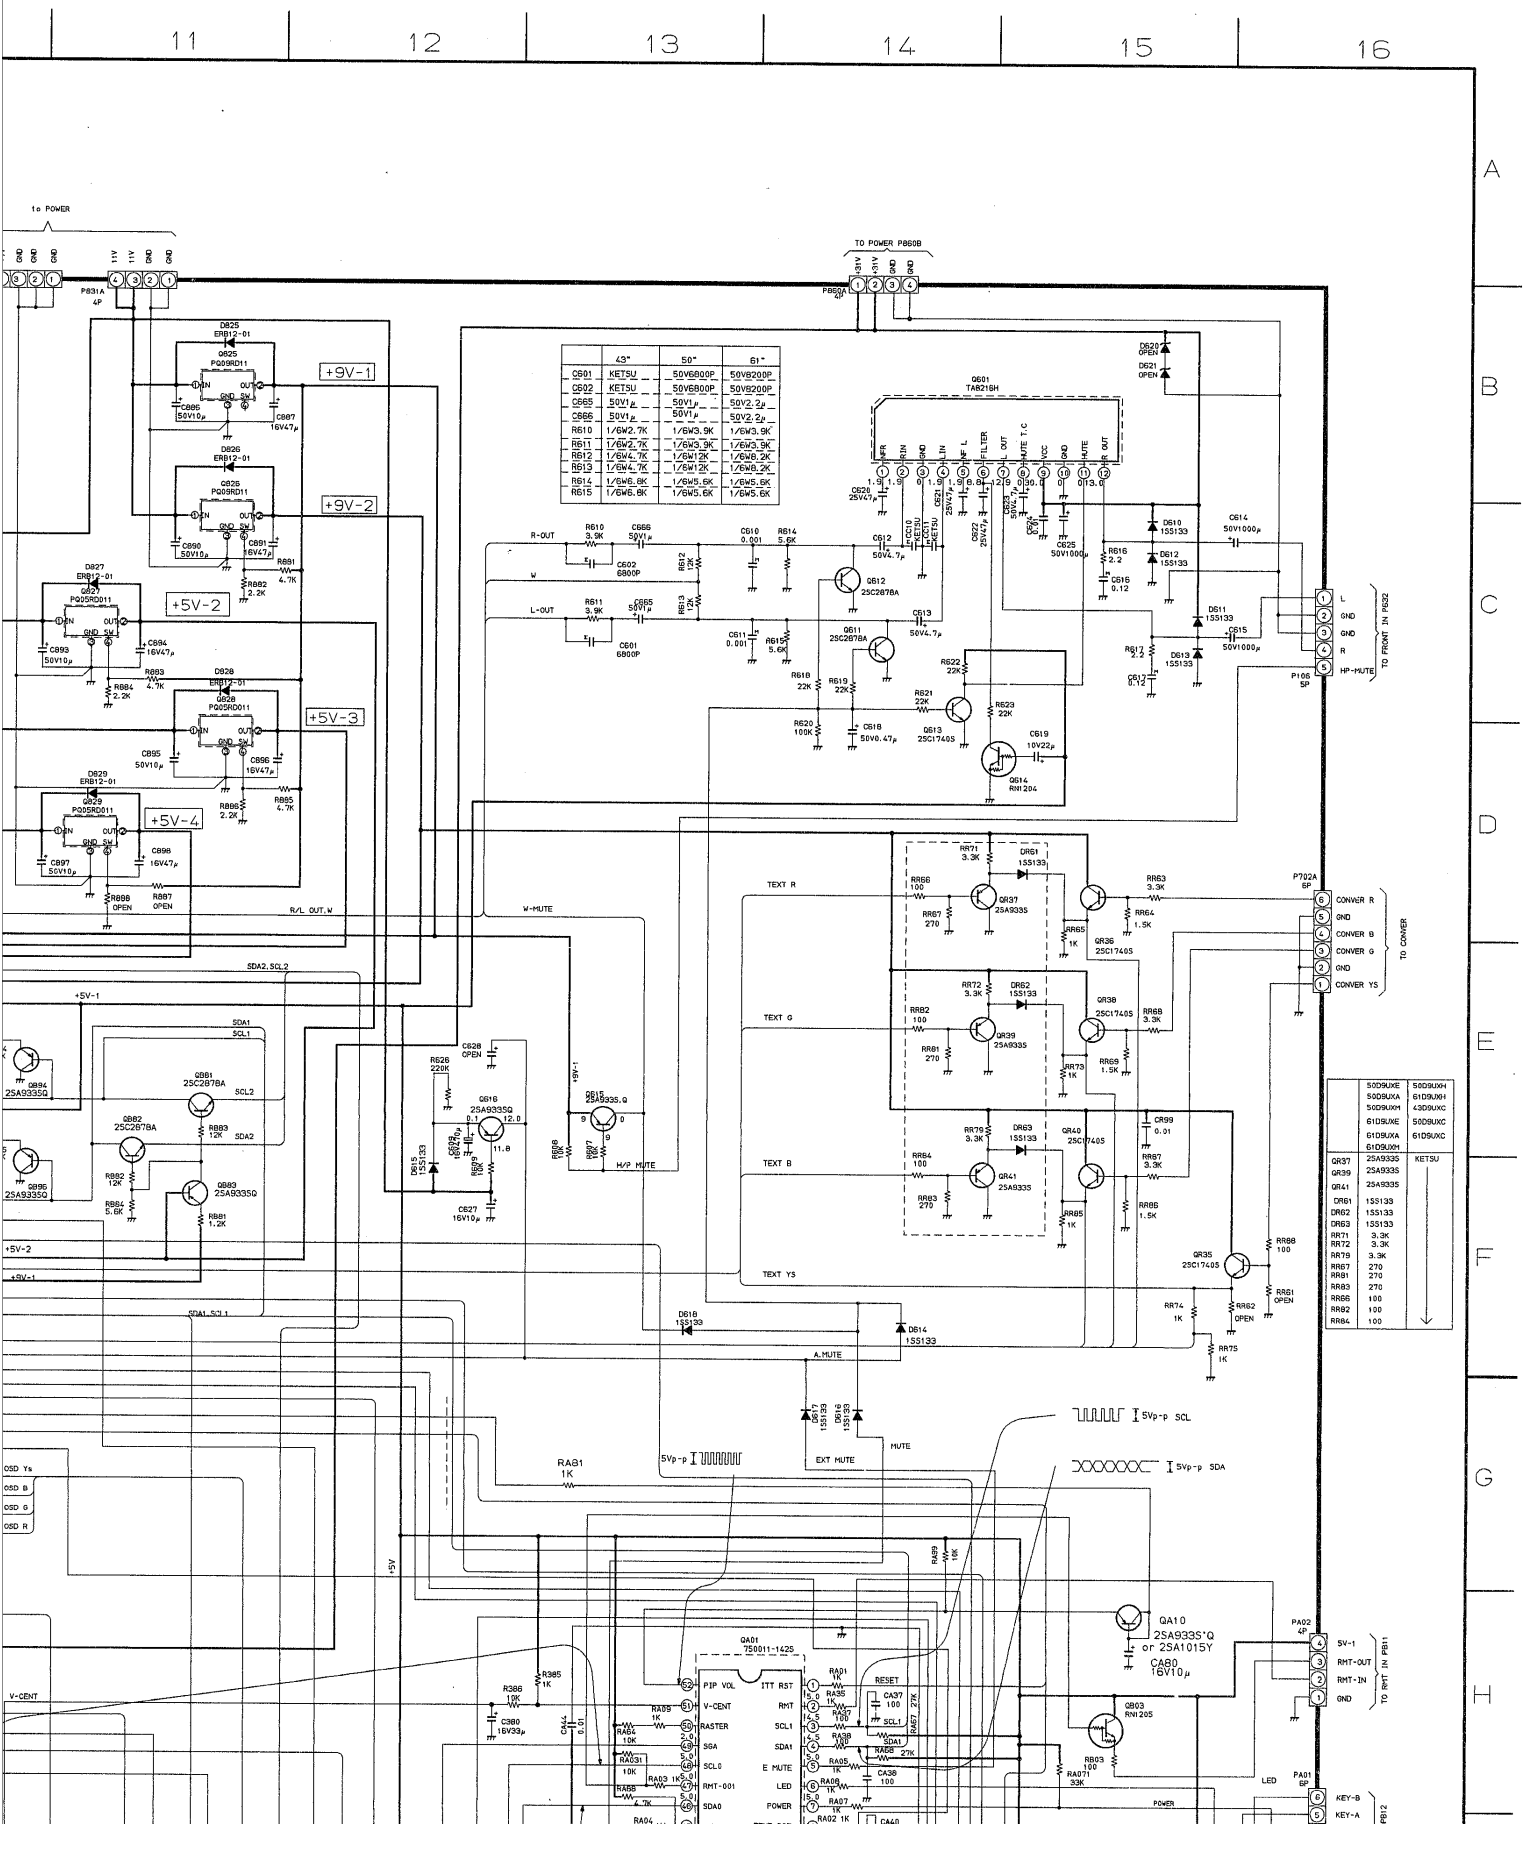
11
12
13
14
15
16
A
B
C
D
E
F
G
H
to POWER
TO POWER P860B
P831A 4P
P860A 4P
+9V-1
+9V-2
+5V-2
+5V-3
+5V-4
+5V-1
+5V
+5V-2
+5V-1
R/L OUT.W
W-MUTE
SDA2.SCL2
SDA1 SCL1
TEXT R
TEXT G
TEXT B
TEXT YS
H/P MUTE
A.MUTE
EXT MUTE
MUTE
5Vp-p SCL
5Vp-p SDA
TO FRONT IN P802
TO CONVER
TO RMT IN P831
P105 5P
P702A 6P
P802 6P
P803 4P
P804 4P
CONVER R
CONVER G
CONVER YS
HP-MUTE
RMT-OUT
RMT-IN
KEY-B
KEY-A
LED
POWER
V-CENT
PIP VOL
ITT R57
RASTER
SGA
SCL0
RMT-001
SDA0
RMT
SCL1
SDA1
E MUTE
LED
POWER
RESET
QA10 2SA933S*Q or 2SA1015Y
QB03 RN1205
QR35 2SC1740S
QR36 2SC1740S
QR37 2SA933S
QR38 2SC1740S
QR39 2SA933S
QR40 2SC1740S
QR41 2SA933S
QB01 2SC2878A
QB02 2SC2878A
QB03 2SA933S-Q
QB94 2SA933S-Q
QB95 2SA933S-Q
QB96 2SA933S-Q
QG12 2SC2878A
QG11 2SC2878A
QG13 2SC1740S
QG14 RN1204
QG16 2SA933S-Q
QG15 2SA933S-Q
QB25 PQ05RD11
QB26 PQ05RD11
QB27 PQ05RD011
QB28 PQ05RD011
QB29 PQ05RD011
DB25 ERB12-01
DB26 ERB12-01
DB27 ERB12-01
DB28 ERB12-01
DB29 ERB12-01
QA01 750011-1425
QB01 TA8216H
CB80 16V10μ
CB99 0.01
CB37 100
CA38 100
CA39 100
CA40
CB01 6800P
CB02 6800P
CB03 0.001
CB04 0.001
CB05 0.001
CB06 0.001
CB07 0.001
CB08 0.001
CB09 0.001
CB10 0.001
CB11 0.001
CB12 50V4.7μ
CB13 50V4.7μ
CB14 50V1000μ
CB15 50V1000μ
CB16 0.12
CB17 0.12
CB18 50V0.47μ
CB19 10V22μ
CB20 25V47μ
CB21 25V47μ
CB22 25V47μ
CB23 50V4.7μ
CB24 50V4.7μ
CB25 50V1000μ
CB26 OPEN
CB27 16V10μ
CB28 OPEN
CB29 16V39μ
CB30 0.01
CB31 0.01
CB32 0.01
CB33 0.01
CB34 0.01
CB35 0.01
CB36 0.01
CB37 0.01
CB38 0.01
CB39 0.01
CB40 0.01
CB41 0.01
CB42 0.01
CB43 0.01
CB44 0.01
CB45 0.01
CB46 0.01
CB47 0.01
CB48 0.01
CB49 0.01
CB50 0.01
CB51 0.01
CB52 0.01
CB53 0.01
CB54 0.01
CB55 0.01
CB56 0.01
CB57 0.01
CB58 0.01
CB59 0.01
CB60 0.01
CB61 0.01
CB62 0.01
CB63 0.01
CB64 0.01
CB65 0.01
CB66 0.01
CB67 0.01
CB68 0.01
CB69 0.01
CB70 0.01
CB71 0.01
CB72 0.01
CB73 0.01
CB74 0.01
CB75 0.01
CB76 0.01
CB77 0.01
CB78 0.01
CB79 0.01
CB80 0.01
CB81 0.01
CB82 0.01
CB83 0.01
CB84 0.01
CB85 0.01
CB86 0.01
CB87 0.01
CB88 0.01
CB89 0.01
CB90 0.01
CB91 0.01
CB92 0.01
CB93 0.01
CB94 0.01
CB95 0.01
CB96 0.01
CB97 0.01
CB98 0.01
CB99 0.01
CA01 0.01
CA02 0.01
CA03 0.01
CA04 0.01
CA05 0.01
CA06 0.01
CA07 0.01
CA08 0.01
CA09 0.01
CA10 0.01
CA11 0.01
CA12 0.01
CA13 0.01
CA14 0.01
CA15 0.01
CA16 0.01
CA17 0.01
CA18 0.01
CA19 0.01
CA20 0.01
CA21 0.01
CA22 0.01
CA23 0.01
CA24 0.01
CA25 0.01
CA26 0.01
CA27 0.01
CA28 0.01
CA29 0.01
CA30 0.01
CA31 0.01
CA32 0.01
CA33 0.01
CA34 0.01
CA35 0.01
CA36 0.01
CA37 0.01
CA38 0.01
CA39 0.01
CA40 0.01
CA41 0.01
CA42 0.01
CA43 0.01
CA44 0.01
CA45 0.01
CA46 0.01
CA47 0.01
CA48 0.01
CA49 0.01
CA50 0.01
CA51 0.01
CA52 0.01
CA53 0.01
CA54 0.01
CA55 0.01
CA56 0.01
CA57 0.01
CA58 0.01
CA59 0.01
CA60 0.01
CA61 0.01
CA62 0.01
CA63 0.01
CA64 0.01
CA65 0.01
CA66 0.01
CA67 0.01
CA68 0.01
CA69 0.01
CA70 0.01
CA71 0.01
CA72 0.01
CA73 0.01
CA74 0.01
CA75 0.01
CA76 0.01
CA77 0.01
CA78 0.01
CA79 0.01
CA80 0.01
CA81 0.01
CA82 0.01
CA83 0.01
CA84 0.01
CA85 0.01
CA86 0.01
CA87 0.01
CA88 0.01
CA89 0.01
CA90 0.01
CA91 0.01
CA92 0.01
CA93 0.01
CA94 0.01
CA95 0.01
CA96 0.01
CA97 0.01
CA98 0.01
CA99 0.01
CB00 0.01
CB01 0.01
CB02 0.01
CB03 0.01
CB04 0.01
CB05 0.01
CB06 0.01
CB07 0.01
CB08 0.01
CB09 0.01
CB10 0.01
CB11 0.01
CB12 0.01
CB13 0.01
CB14 0.01
CB15 0.01
CB16 0.01
CB17 0.01
CB18 0.01
CB19 0.01
CB20 0.01
CB21 0.01
CB22 0.01
CB23 0.01
CB24 0.01
CB25 0.01
CB26 0.01
CB27 0.01
CB28 0.01
CB29 0.01
CB30 0.01
CB31 0.01
CB32 0.01
CB33 0.01
CB34 0.01
CB35 0.01
CB36 0.01
CB37 0.01
CB38 0.01
CB39 0.01
CB40 0.01
CB41 0.01
CB42 0.01
CB43 0.01
CB44 0.01
CB45 0.01
CB46 0.01
CB47 0.01
CB48 0.01
CB49 0.01
CB50 0.01
CB51 0.01
CB52 0.01
CB53 0.01
CB54 0.01
CB55 0.01
CB56 0.01
CB57 0.01
CB58 0.01
CB59 0.01
CB60 0.01
CB61 0.01
CB62 0.01
CB63 0.01
CB64 0.01
CB65 0.01
CB66 0.01
CB67 0.01
CB68 0.01
CB69 0.01
CB70 0.01
CB71 0.01
CB72 0.01
CB73 0.01
CB74 0.01
CB75 0.01
CB76 0.01
CB77 0.01
CB78 0.01
CB79 0.01
CB80 0.01
CB81 0.01
CB82 0.01
CB83 0.01
CB84 0.01
CB85 0.01
CB86 0.01
CB87 0.01
CB88 0.01
CB89 0.01
CB90 0.01
CB91 0.01
CB92 0.01
CB93 0.01
CB94 0.01
CB95 0.01
CB96 0.01
CB97 0.01
CB98 0.01
CB99 0.01
CC01 0.01
CC02 0.01
CC03 0.01
CC04 0.01
CC05 0.01
CC06 0.01
CC07 0.01
CC08 0.01
CC09 0.01
CC10 0.01
CC11 0.01
CC12 0.01
CC13 0.01
CC14 0.01
CC15 0.01
CC16 0.01
CC17 0.01
CC18 0.01
CC19 0.01
CC20 0.01
CC21 0.01
CC22 0.01
CC23 0.01
CC24 0.01
CC25 0.01
CC26 0.01
CC27 0.01
CC28 0.01
CC29 0.01
CC30 0.01
CC31 0.01
CC32 0.01
CC33 0.01
CC34 0.01
CC35 0.01
CC36 0.01
CC37 0.01
CC38 0.01
CC39 0.01
CC40 0.01
CC41 0.01
CC42 0.01
CC43 0.01
CC44 0.01
CC45 0.01
CC46 0.01
CC47 0.01
CC48 0.01
CC49 0.01
CC50 0.01
CC51 0.01
CC52 0.01
CC53 0.01
CC54 0.01
CC55 0.01
CC56 0.01
CC57 0.01
CC58 0.01
CC59 0.01
CC60 0.01
CC61 0.01
CC62 0.01
CC63 0.01
CC64 0.01
CC65 0.01
CC66 0.01
CC67 0.01
CC68 0.01
CC69 0.01
CC70 0.01
CC71 0.01
CC72 0.01
CC73 0.01
CC74 0.01
CC75 0.01
CC76 0.01
CC77 0.01
CC78 0.01
CC79 0.01
CC80 0.01
CC81 0.01
CC82 0.01
CC83 0.01
CC84 0.01
CC85 0.01
CC86 0.01
CC87 0.01
CC88 0.01
CC89 0.01
CC90 0.01
CC91 0.01
CC92 0.01
CC93 0.01
CC94 0.01
CC95 0.01
CC96 0.01
CC97 0.01
CC98 0.01
CC99 0.01
CD01 0.01
CD02 0.01
CD03 0.01
CD04 0.01
CD05 0.01
CD06 0.01
CD07 0.01
CD08 0.01
CD09 0.01
CD10 0.01
CD11 0.01
CD12 0.01
CD13 0.01
CD14 0.01
CD15 0.01
CD16 0.01
CD17 0.01
CD18 0.01
CD19 0.01
CD20 0.01
CD21 0.01
CD22 0.01
CD23 0.01
CD24 0.01
CD25 0.01
CD26 0.01
CD27 0.01
CD28 0.01
CD29 0.01
CD30 0.01
CD31 0.01
CD32 0.01
CD33 0.01
CD34 0.01
CD35 0.01
CD36 0.01
CD37 0.01
CD38 0.01
CD39 0.01
CD40 0.01
CD41 0.01
CD42 0.01
CD43 0.01
CD44 0.01
CD45 0.01
CD46 0.01
CD47 0.01
CD48 0.01
CD49 0.01
CD50 0.01
CD51 0.01
CD52 0.01
CD53 0.01
CD54 0.01
CD55 0.01
CD56 0.01
CD57 0.01
CD58 0.01
CD59 0.01
CD60 0.01
CD61 0.01
CD62 0.01
CD63 0.01
CD64 0.01
CD65 0.01
CD66 0.01
CD67 0.01
CD68 0.01
CD69 0.01
CD70 0.01
CD71 0.01
CD72 0.01
CD73 0.01
CD74 0.01
CD75 0.01
CD76 0.01
CD77 0.01
CD78 0.01
CD79 0.01
CD80 0.01
CD81 0.01
CD82 0.01
CD83 0.01
CD84 0.01
CD85 0.01
CD86 0.01
CD87 0.01
CD88 0.01
CD89 0.01
CD90 0.01
CD91 0.01
CD92 0.01
CD93 0.01
CD94 0.01
CD95 0.01
CD96 0.01
CD97 0.01
CD98 0.01
CD99 0.01
CE01 0.01
CE02 0.01
CE03 0.01
CE04 0.01
CE05 0.01
CE06 0.01
CE07 0.01
CE08 0.01
CE09 0.01
CE10 0.01
CE11 0.01
CE12 0.01
CE13 0.01
CE14 0.01
CE15 0.01
CE16 0.01
CE17 0.01
CE18 0.01
CE19 0.01
CE20 0.01
CE21 0.01
CE22 0.01
CE23 0.01
CE24 0.01
CE25 0.01
CE26 0.01
CE27 0.01
CE28 0.01
CE29 0.01
CE30 0.01
CE31 0.01
CE32 0.01
CE33 0.01
CE34 0.01
CE35 0.01
CE36 0.01
CE37 0.01
CE38 0.01
CE39 0.01
CE40 0.01
CE41 0.01
CE42 0.01
CE43 0.01
CE44 0.01
CE45 0.01
CE46 0.01
CE47 0.01
CE48 0.01
CE49 0.01
CE50 0.01
CE51 0.01
CE52 0.01
CE53 0.01
CE54 0.01
CE55 0.01
CE56 0.01
CE57 0.01
CE58 0.01
CE59 0.01
CE60 0.01
CE61 0.01
CE62 0.01
CE63 0.01
CE64 0.01
CE65 0.01
CE66 0.01
CE67 0.01
CE68 0.01
CE69 0.01
CE70 0.01
CE71 0.01
CE72 0.01
CE73 0.01
CE74 0.01
CE75 0.01
CE76 0.01
CE77 0.01
CE78 0.01
CE79 0.01
CE80 0.01
CE81 0.01
CE82 0.01
CE83 0.01
CE84 0.01
CE85 0.01
CE86 0.01
CE87 0.01
CE88 0.01
CE89 0.01
CE90 0.01
CE91 0.01
CE92 0.01
CE93 0.01
CE94 0.01
CE95 0.01
CE96 0.01
CE97 0.01
CE98 0.01
CE99 0.01
CF01 0.01
CF02 0.01
CF03 0.01
CF04 0.01
CF05 0.01
CF06 0.01
CF07 0.01
CF08 0.01
CF09 0.01
CF10 0.01
CF11 0.01
CF12 0.01
CF13 0.01
CF14 0.01
CF15 0.01
CF16 0.01
CF17 0.01
CF18 0.01
CF19 0.01
CF20 0.01
CF21 0.01
CF22 0.01
CF23 0.01
CF24 0.01
CF25 0.01
CF26 0.01
CF27 0.01
CF28 0.01
CF29 0.01
CF30 0.01
CF31 0.01
CF32 0.01
CF33 0.01
CF34 0.01
CF35 0.01
CF36 0.01
CF37 0.01
CF38 0.01
CF39 0.01
CF40 0.01
CF41 0.01
CF42 0.01
CF43 0.01
CF44 0.01
CF45 0.01
CF46 0.01
CF47 0.01
CF48 0.01
CF49 0.01
CF50 0.01
CF51 0.01
CF52 0.01
CF53 0.01
CF54 0.01
CF55 0.01
CF56 0.01
CF57 0.01
CF58 0.01
CF59 0.01
CF60 0.01
CF61 0.01
CF62 0.01
CF63 0.01
CF64 0.01
CF65 0.01
CF66 0.01
CF67 0.01
CF68 0.01
CF69 0.01
CF70 0.01
CF71 0.01
CF72 0.01
CF73 0.01
CF74 0.01
CF75 0.01
CF76 0.01
CF77 0.01
CF78 0.01
CF79 0.01
CF80 0.01
CF81 0.01
CF82 0.01
CF83 0.01
CF84 0.01
CF85 0.01
CF86 0.01
CF87 0.01
CF88 0.01
CF89 0.01
CF90 0.01
CF91 0.01
CF92 0.01
CF93 0.01
CF94 0.01
CF95 0.01
CF96 0.01
CF97 0.01
CF98 0.01
CF99 0.01
CG01 0.01
CG02 0.01
CG03 0.01
CG04 0.01
CG05 0.01
CG06 0.01
CG07 0.01
CG08 0.01
CG09 0.01
CG10 0.01
CG11 0.01
CG12 0.01
CG13 0.01
CG14 0.01
CG15 0.01
CG16 0.01
CG17 0.01
CG18 0.01
CG19 0.01
CG20 0.01
CG21 0.01
CG22 0.01
CG23 0.01
CG24 0.01
CG25 0.01
CG26 0.01
CG27 0.01
CG28 0.01
CG29 0.01
CG30 0.01
CG31 0.01
CG32 0.01
CG33 0.01
CG34 0.01
CG35 0.01
CG36 0.01
CG37 0.01
CG38 0.01
CG39 0.01
CG40 0.01
CG41 0.01
CG42 0.01
CG43 0.01
CG44 0.01
CG45 0.01
CG46 0.01
CG47 0.01
CG48 0.01
CG49 0.01
CG50 0.01
CG51 0.01
CG52 0.01
CG53 0.01
CG54 0.01
CG55 0.01
CG56 0.01
CG57 0.01
CG58 0.01
CG59 0.01
CG60 0.01
CG61 0.01
CG62 0.01
CG63 0.01
CG64 0.01
CG65 0.01
CG66 0.01
CG67 0.01
CG68 0.01
CG69 0.01
CG70 0.01
CG71 0.01
CG72 0.01
CG73 0.01
CG74 0.01
CG75 0.01
CG76 0.01
CG77 0.01
CG78 0.01
CG79 0.01
CG80 0.01
CG81 0.01
CG82 0.01
CG83 0.01
CG84 0.01
CG85 0.01
CG86 0.01
CG87 0.01
CG88 0.01
CG89 0.01
CG90 0.01
CG91 0.01
CG92 0.01
CG93 0.01
CG94 0.01
CG95 0.01
CG96 0.01
CG97 0.01
CG98 0.01
CG99 0.01
CH01 0.01
CH02 0.01
CH03 0.01
CH04 0.01
CH05 0.01
CH06 0.01
CH07 0.01
CH08 0.01
CH09 0.01
CH10 0.01
CH11 0.01
CH12 0.01
CH13 0.01
CH14 0.01
CH15 0.01
CH16 0.01
CH17 0.01
CH18 0.01
CH19 0.01
CH20 0.01
CH21 0.01
CH22 0.01
CH23 0.01
CH24 0.01
CH25 0.01
CH26 0.01
CH27 0.01
CH28 0.01
CH29 0.01
CH30 0.01
CH31 0.01
CH32 0.01
CH33 0.01
CH34 0.01
CH35 0.01
CH36 0.01
CH37 0.01
CH38 0.01
CH39 0.01
CH40 0.01
CH41 0.01
CH42 0.01
CH43 0.01
CH44 0.01
CH45 0.01
CH46 0.01
CH47 0.01
CH48 0.01
CH49 0.01
CH50 0.01
CH51 0.01
CH52 0.01
CH53 0.01
CH54 0.01
CH55 0.01
CH56 0.01
CH57 0.01
CH58 0.01
CH59 0.01
CH60 0.01
CH61 0.01
CH62 0.01
CH63 0.01
CH64 0.01
CH65 0.01
CH66 0.01
CH67 0.01
CH68 0.01
CH69 0.01
CH70 0.01
CH71 0.01
CH72 0.01
CH73 0.01
CH74 0.01
CH75 0.01
CH76 0.01
CH77 0.01
CH78 0.01
CH79 0.01
CH80 0.01
CH81 0.01
CH82 0.01
CH83 0.01
CH84 0.01
CH85 0.01
CH86 0.01
CH87 0.01
CH88 0.01
CH89 0.01
CH90 0.01
CH91 0.01
CH92 0.01
CH93 0.01
CH94 0.01
CH95 0.01
CH96 0.01
CH97 0.01
CH98 0.01
CH99 0.01
CJ01 0.01
CJ02 0.01
CJ03 0.01
CJ04 0.01
CJ05 0.01
CJ06 0.01
CJ07 0.01
CJ08 0.01
CJ09 0.01
CJ10 0.01
CJ11 0.01
CJ12 0.01
CJ13 0.01
CJ14 0.01
CJ15 0.01
CJ16 0.01
CJ17 0.01
CJ18 0.01
CJ19 0.01
CJ20 0.01
CJ21 0.01
CJ22 0.01
CJ23 0.01
CJ24 0.01
CJ25 0.01
CJ26 0.01
CJ27 0.01
CJ28 0.01
CJ29 0.01
CJ30 0.01
CJ31 0.01
CJ32 0.01
CJ33 0.01
CJ34 0.01
CJ35 0.01
CJ36 0.01
CJ37 0.01
CJ38 0.01
CJ39 0.01
CJ40 0.01
CJ41 0.01
CJ42 0.01
CJ43 0.01
CJ44 0.01
CJ45 0.01
CJ46 0.01
CJ47 0.01
CJ48 0.01
CJ49 0.01
CJ50 0.01
CJ51 0.01
CJ52 0.01
CJ53 0.01
CJ54 0.01
CJ55 0.01
CJ56 0.01
CJ57 0.01
CJ58 0.01
CJ59 0.01
CJ60 0.01
CJ61 0.01
CJ62 0.01
CJ63 0.01
CJ64 0.01
CJ65 0.01
CJ66 0.01
CJ67 0.01
CJ68 0.01
CJ69 0.01
CJ70 0.01
CJ71 0.01
CJ72 0.01
CJ73 0.01
CJ74 0.01
CJ75 0.01
CJ76 0.01
CJ77 0.01
CJ78 0.01
CJ79 0.01
CJ80 0.01
CJ81 0.01
CJ82 0.01
CJ83 0.01
CJ84 0.01
CJ85 0.01
CJ86 0.01
CJ87 0.01
CJ88 0.01
CJ89 0.01
CJ90 0.01
CJ91 0.01
CJ92 0.01
CJ93 0.01
CJ94 0.01
CJ95 0.01
CJ96 0.01
CJ97 0.01
CJ98 0.01
CJ99 0.01
CK01 0.01
CK02 0.01
CK03 0.01
CK04 0.01
CK05 0.01
CK06 0.01
CK07 0.01
CK08 0.01
CK09 0.01
CK10 0.01
CK11 0.01
CK12 0.01
CK13 0.01
CK14 0.01
CK15 0.01
CK16 0.01
CK17 0.01
CK18 0.01
CK19 0.01
CK20 0.01
CK21 0.01
CK22 0.01
CK23 0.01
CK24 0.01
CK25 0.01
CK26 0.01
CK27 0.01
CK28 0.01
CK29 0.01
CK30 0.01
CK31 0.01
CK32 0.01
CK33 0.01
CK34 0.01
CK35 0.01
CK36 0.01
CK37 0.01
CK38 0.01
CK39 0.01
CK40 0.01
CK41 0.01
CK42 0.01
CK43 0.01
CK44 0.01
CK45 0.01
CK46 0.01
CK47 0.01
CK48 0.01
CK49 0.01
CK50 0.01
CK51 0.01
CK52 0.01
CK53 0.01
CK54 0.01
CK55 0.01
CK56 0.01
CK57 0.01
CK58 0.01
CK59 0.01
CK60 0.01
CK61 0.01
CK62 0.01
CK63 0.01
CK64 0.01
CK65 0.01
CK66 0.01
CK67 0.01
CK68 0.01
CK69 0.01
CK70 0.01
CK71 0.01
CK72 0.01
CK73 0.01
CK74 0.01
CK75 0.01
CK76 0.01
CK77 0.01
CK78 0.01
CK79 0.01
CK80 0.01
CK81 0.01
CK82 0.01
CK83 0.01
CK84 0.01
CK85 0.01
CK86 0.01
CK87 0.01
CK88 0.01
CK89 0.01
CK90 0.01
CK91 0.01
CK92 0.01
CK93 0.01
CK94 0.01
CK95 0.01
CK96 0.01
CK97 0.01
CK98 0.01
CK99 0.01
CL01 0.01
CL02 0.01
CL03 0.01
CL04 0.01
CL05 0.01
CL06 0.01
CL07 0.01
CL08 0.01
CL09 0.01
CL10 0.01
CL11 0.01
CL12 0.01
CL13 0.01
CL14 0.01
CL15 0.01
CL16 0.01
CL17 0.01
CL18 0.01
CL19 0.01
CL20 0.01
CL21 0.01
CL22 0.01
CL23 0.01
CL24 0.01
CL25 0.01
CL26 0.01
CL27 0.01
CL28 0.01
CL29 0.01
CL30 0.01
CL31 0.01
CL32 0.01
CL33 0.01
CL34 0.01
CL35 0.01
CL36 0.01
CL37 0.01
CL38 0.01
CL39 0.01
CL40 0.01
CL41 0.01
CL42 0.01
CL43 0.01
CL44 0.01
CL45 0.01
CL46 0.01
CL47 0.01
CL48 0.01
CL49 0.01
CL50 0.01
CL51 0.01
CL52 0.01
CL53 0.01
CL54 0.01
CL55 0.01
CL56 0.01
CL57 0.01
CL58 0.01
CL59 0.01
CL60 0.01
CL61 0.01
CL62 0.01
CL63 0.01
CL64 0.01
CL65 0.01
CL66 0.01
CL67 0.01
CL68 0.01
CL69 0.01
CL70 0.01
CL71 0.01
CL72 0.01
CL73 0.01
CL74 0.01
CL75 0.01
CL76 0.01
CL77 0.01
CL78 0.01
CL79 0.01
CL80 0.01
CL81 0.01
CL82 0.01
CL83 0.01
CL84 0.01
CL85 0.01
CL86 0.01
CL87 0.01
CL88 0.01
CL89 0.01
CL90 0.01
CL91 0.01
CL92 0.01
CL93 0.01
CL94 0.01
CL95 0.01
CL96 0.01
CL97 0.01
CL98 0.01
CL99 0.01
CM01 0.01
CM02 0.01
CM03 0.01
CM04 0.01
CM05 0.01
CM06 0.01
CM07 0.01
CM08 0.01
CM09 0.01
CM10 0.01
CM11 0.01
CM12 0.01
CM13 0.01
CM14 0.01
CM15 0.01
CM16 0.01
CM17 0.01
CM18 0.01
CM19 0.01
CM20 0.01
CM21 0.01
CM22 0.01
CM23 0.01
CM24 0.01
CM25 0.01
CM26 0.01
CM27 0.01
CM28 0.01
CM29 0.01
CM30 0.01
CM31 0.01
CM32 0.01
CM33 0.01
CM34 0.01
CM35 0.01
CM36 0.01
CM37 0.01
CM38 0.01
CM39 0.01
CM40 0.01
CM41 0.01
CM42 0.01
CM43 0.01
CM44 0.01
CM45 0.01
CM46 0.01
CM47 0.01
CM48 0.01
CM49 0.01
CM50 0.01
CM51 0.01
CM52 0.01
CM53 0.01
CM54 0.01
CM55 0.01
CM56 0.01
CM57 0.01
CM58 0.01
CM59 0.01
CM60 0.01
CM61 0.01
CM62 0.01
CM63 0.01
CM64 0.01
CM65 0.01
CM66 0.01
CM67 0.01
CM68 0.01
CM69 0.01
CM70 0.01
CM71 0.01
CM72 0.01
CM73 0.01
CM74 0.01
CM75 0.01
CM76 0.01
CM77 0.01
CM78 0.01
CM79 0.01
CM80 0.01
CM81 0.01
CM82 0.01
CM83 0.01
CM84 0.01
CM85 0.01
CM86 0.01
CM87 0.01
CM88 0.01
CM89 0.01
CM90 0.01
CM91 0.01
CM92 0.01
CM93 0.01
CM94 0.01
CM95 0.01
CM96 0.01
CM97 0.01
CM98 0.01
CM99 0.01
CN01 0.01
CN02 0.01
CN03 0.01
CN04 0.01
CN05 0.01
CN06 0.01
CN07 0.01
CN08 0.01
CN09 0.01
CN10 0.01
CN11 0.01
CN12 0.01
CN13 0.01
CN14 0.01
CN15 0.01
CN16 0.01
CN17 0.01
CN18 0.01
CN19 0.01
CN20 0.01
CN21 0.01
CN22 0.01
CN23 0.01
CN24 0.01
CN25 0.01
CN26 0.01
CN27 0.01
CN28 0.01
CN29 0.01
CN30 0.01
CN31 0.01
CN32 0.01
CN33 0.01
CN34 0.01
CN35 0.01
CN36 0.01
CN37 0.01
CN38 0.01
CN39 0.01
CN40 0.01
CN41 0.01
CN42 0.01
CN43 0.01
CN44 0.01
CN45 0.01
CN46 0.01
CN47 0.01
CN48 0.01
CN49 0.01
CN50 0.01
CN51 0.01
CN52 0.01
CN53 0.01
CN54 0.01
CN55 0.01
CN56 0.01
CN57 0.01
CN58 0.01
CN59 0.01
CN60 0.01
CN61 0.01
CN62 0.01
CN63 0.01
CN64 0.01
CN65 0.01
CN66 0.01
CN67 0.01
CN68 0.01
CN69 0.01
CN70 0.01
CN71 0.01
CN72 0.01
CN73 0.01
CN74 0.01
CN75 0.01
CN76 0.01
CN77 0.01
CN78 0.01
CN79 0.01
CN80 0.01
CN81 0.01
CN82 0.01
CN83 0.01
CN84 0.01
CN85 0.01
CN86 0.01
CN87 0.01
CN88 0.01
CN89 0.01
CN90 0.01
CN91 0.01
CN92 0.01
CN93 0.01
CN94 0.01
CN95 0.01
CN96 0.01
CN97 0.01
CN98 0.01
CN99 0.01
CP01 0.01
CP02 0.01
CP03 0.01
CP04 0.01
CP05 0.01
CP06 0.01
CP07 0.01
CP08 0.01
CP09 0.01
CP10 0.01
CP11 0.01
CP12 0.01
CP13 0.01
CP14 0.01
CP15 0.01
CP16 0.01
CP17 0.01
CP18 0.01
CP19 0.01
CP20 0.01
CP21 0.01
CP22 0.01
CP23 0.01
CP24 0.01
CP25 0.01
CP26 0.01
CP27 0.01
CP28 0.01
CP29 0.01
CP30 0.01
CP31 0.01
CP32 0.01
CP33 0.01
CP34 0.01
CP35 0.01
CP36 0.01
CP37 0.01
CP38 0.01
CP39 0.01
CP40 0.01
CP41 0.01
CP42 0.01
CP43 0.01
CP44 0.01
CP45 0.01
CP46 0.01
CP47 0.01
CP48 0.01
CP49 0.01
CP50 0.01
CP51 0.01
CP52 0.01
CP53 0.01
CP54 0.01
CP55 0.01
CP56 0.01
CP57 0.01
CP58 0.01
CP59 0.01
CP60 0.01
CP61 0.01
CP62 0.01
CP63 0.01
CP64 0.01
CP65 0.01
CP66 0.01
CP67 0.01
CP68 0.01
CP69 0.01
CP70 0.01
CP71 0.01
CP72 0.01
CP73 0.01
CP74 0.01
CP75 0.01
CP76 0.01
CP77 0.01
CP78 0.01
CP79 0.01
CP80 0.01
CP81 0.01
CP82 0.01
CP83 0.01
CP84 0.01
CP85 0.01
CP86 0.01
CP87 0.01
CP88 0.01
CP89 0.01
CP90 0.01
CP91 0.01
CP92 0.01
CP93 0.01
CP94 0.01
CP95 0.01
CP96 0.01
CP97 0.01
CP98 0.01
CP99 0.01
CQ01 0.01
CQ02 0.01
CQ03 0.01
CQ04 0.01
CQ05 0.01
CQ06 0.01
CQ07 0.01
CQ08 0.01
CQ09 0.01
CQ10 0.01
CQ11 0.01
CQ12 0.01
CQ13 0.01
CQ14 0.01
CQ15 0.01
CQ16 0.01
CQ17 0.01
CQ18 0.01
CQ19 0.01
CQ20 0.01
CQ21 0.01
CQ22 0.01
CQ23 0.01
CQ24 0.01
CQ25 0.01
CQ26 0.01
CQ27 0.01
CQ28 0.01
CQ29 0.01
CQ30 0.01
CQ31 0.01
CQ32 0.01
CQ33 0.01
CQ34 0.01
CQ35 0.01
CQ36 0.01
CQ37 0.01
CQ38 0.01
CQ39 0.01
CQ40 0.01
CQ41 0.01
CQ42 0.01
CQ43 0.01
CQ44 0.01
CQ45 0.01
CQ46 0.01
CQ47 0.01
CQ48 0.01
CQ49 0.01
CQ50 0.01
CQ51 0.01
CQ52 0.01
CQ53 0.01
CQ54 0.01
CQ55 0.01
CQ56 0.01
CQ57 0.01
CQ58 0.01
CQ59 0.01
CQ60 0.01
CQ61 0.01
CQ62 0.01
CQ63 0.01
CQ64 0.01
CQ65 0.01
CQ66 0.01
CQ67 0.01
CQ68 0.01
CQ69 0.01
CQ70 0.01
CQ71 0.01
CQ72 0.01
CQ73 0.01
CQ74 0.01
CQ75 0.01
CQ76 0.01
CQ77 0.01
CQ78 0.01
CQ79 0.01
CQ80 0.01
CQ81 0.01
CQ82 0.01
CQ83 0.01
CQ84 0.01
CQ85 0.01
CQ86 0.01
CQ87 0.01
CQ88 0.01
CQ89 0.01
CQ90 0.01
CQ91 0.01
CQ92 0.01
CQ93 0.01
CQ94 0.01
CQ95 0.01
CQ96 0.01
CQ97 0.01
CQ98 0.01
CQ99 0.01
CR01 0.01
CR02 0.01
CR03 0.01
CR04 0.01
CR05 0.01
CR06 0.01
CR07 0.01
CR08 0.01
CR09 0.01
CR10 0.01
CR11 0.01
CR12 0.01
CR13 0.01
CR14 0.01
CR15 0.01
CR16 0.01
CR17 0.01
CR18 0.01
CR19 0.01
CR20 0.01
CR21 0.01
CR22 0.01
CR23 0.01
CR24 0.01
CR25 0.01
CR26 0.01
CR27 0.01
CR28 0.01
CR29 0.01
CR30 0.01
CR31 0.01
CR32 0.01
CR33 0.01
CR34 0.01
CR35 0.01
CR36 0.01
CR37 0.01
CR38 0.01
CR39 0.01
CR40 0.01
CR41 0.01
CR42 0.01
CR43 0.01
CR44 0.01
CR45 0.01
CR46 0.01
CR47 0.01
CR48 0.01
CR49 0.01
CR50 0.01
CR51 0.01
CR52 0.01
CR53 0.01
CR54 0.01
CR55 0.01
CR56 0.01
CR57 0.01
CR58 0.01
CR59 0.01
CR60 0.01
CR61 0.01
CR62 0.01
CR63 0.01
CR64 0.01
CR65 0.01
CR66 0.01
CR67 0.01
CR68 0.01
CR69 0.01
CR70 0.01
CR71 0.01
CR72 0.01
CR73 0.01
CR74 0.01
CR75 0.01
CR76 0.01
CR77 0.01
CR78 0.01
CR79 0.01
CR80 0.01
CR81 0.01
CR82 0.01
CR83 0.01
CR84 0.01
CR85 0.01
CR86 0.01
CR87 0.01
CR88 0.01
CR89 0.01
CR90 0.01
CR91 0.01
CR92 0.01
CR93 0.01
CR94 0.01
CR95 0.01
CR96 0.01
CR97 0.01
CR98 0.01
CR99 0.01
CS01 0.01
CS02 0.01
CS03 0.01
CS04 0.01
CS05 0.01
CS06 0.01
CS07 0.01
CS08 0.01
CS09 0.01
CS10 0.01
CS11 0.01
CS12 0.01
CS13 0.01
CS14 0.01
CS15 0.01
CS16 0.01
CS17 0.01
CS18 0.01
CS19 0.01
CS20 0.01
CS21 0.01
CS22 0.01
CS23 0.01
CS24 0.01
CS25 0.01
CS26 0.01
CS27 0.01
CS28 0.01
CS29 0.01
CS30 0.01
CS31 0.01
CS32 0.01
CS33 0.01
CS34 0.01
CS35 0.01
CS36 0.01
CS37 0.01
CS38 0.01
CS39 0.01
CS40 0.01
CS41 0.01
CS42 0.01
CS43 0.01
CS44 0.01
CS45 0.01
CS46 0.01
CS47 0.01
CS48 0.01
CS49 0.01
CS50 0.01
CS51 0.01
CS52 0.01
CS53 0.01
CS54 0.01
CS55 0.01
CS56 0.01
CS57 0.01
CS58 0.01
CS59 0.01
CS60 0.01
CS61 0.01
CS62 0.01
CS63 0.01
CS64 0.01
CS65 0.01
CS66 0.01
CS67 0.01
CS68 0.01
CS69 0.01
CS70 0.01
CS71 0.01
CS72 0.01
CS73 0.01
CS74 0.01
CS75 0.01
CS76 0.01
CS77 0.01
CS78 0.01
CS79 0.01
CS80 0.01
CS81 0.01
CS82 0.01
CS83 0.01
CS84 0.01
CS85 0.01
CS86 0.01
CS87 0.01
CS88 0.01
CS89 0.01
CS90 0.01
CS91 0.01
CS92 0.01
CS93 0.01
CS94 0.01
CS95 0.01
CS96 0.01
CS97 0.01
CS98 0.01
CS99 0.01
CT01 0.01
CT02 0.01
CT03 0.01
CT04 0.01
CT05 0.01
CT06 0.01
CT07 0.01
CT08 0.01
CT09 0.01
CT10 0.01
CT11 0.01
CT12 0.01
CT13 0.01
CT14 0.01
CT15 0.01
CT16 0.01
CT17 0.01
CT18 0.01
CT19 0.01
CT20 0.01
CT21 0.01
CT22 0.01
CT23 0.01
CT24 0.01
CT25 0.01
CT26 0.01
CT27 0.01
CT28 0.01
CT29 0.01
CT30 0.01
CT31 0.01
CT32 0.01
CT33 0.01
CT34 0.01
CT35 0.01
CT36 0.01
CT37 0.01
CT38 0.01
CT39 0.01
CT40 0.01
CT41 0.01
CT42 0.01
CT43 0.01
CT44 0.01
CT45 0.01
CT46 0.01
CT47 0.01
CT48 0.01
CT49 0.01
CT50 0.01
CT51 0.01
CT52 0.01
CT53 0.01
CT54 0.01
CT55 0.01

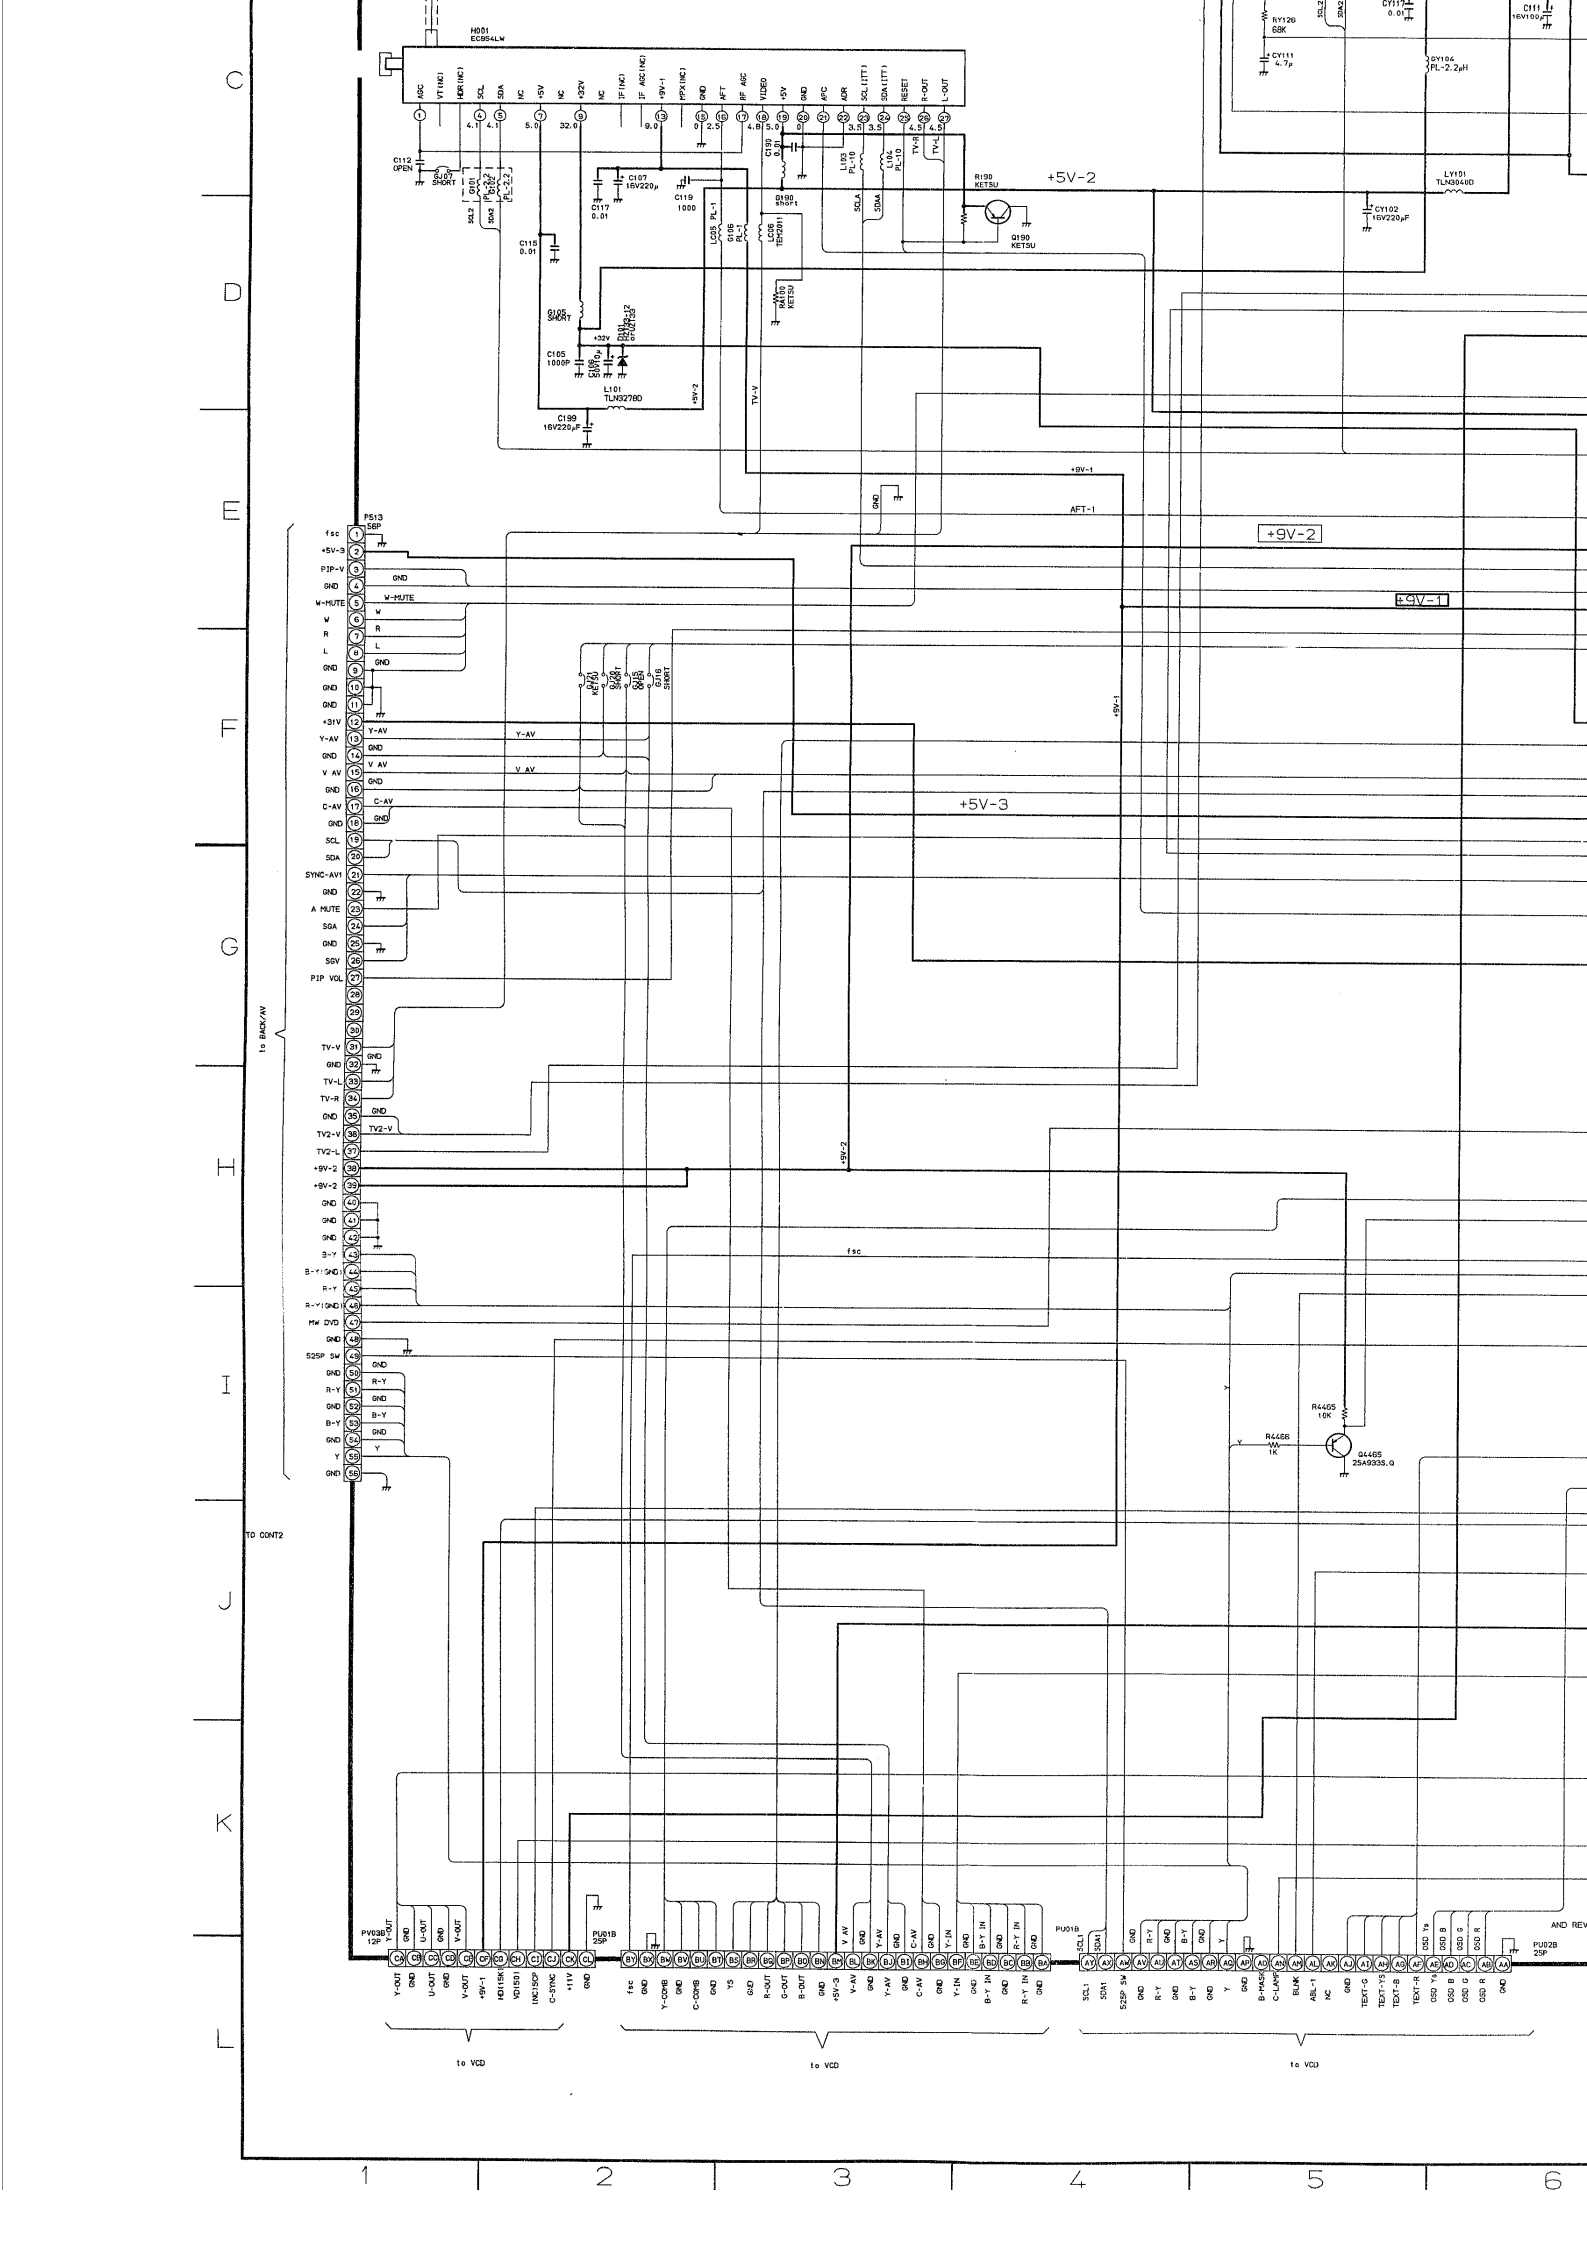
H001 EC654LW
C112 OPEN
S001 SHORT
C107 16V220μ
C119 1000
C117 0.01
C115 0.01
C105 1000P
L101 TLN3276D
C199 16V220μF
R190 KETSU
Q190 KETSU
+5V-2
+32V
+9V-1
+9V-2
+5V-3
AFT-1
GND
LY101 TLN3040D
CY102 16V220μF
P513 58P
to BACK/AV
TO CONT2
fsc
W-MUTE
Y-AV
V AV
C-AV
TV-V
TV-L
TV-R
TV2-V
TV2-L
+9V-2
+9V-1
+5V-3
B-Y
R-Y
MW DVD
525P SW
A MUTE
SCL
SDA
SYNC-AV1
PIP VOL
SGV
R4465 10K
R4466 1K
Q4465 2SA933S,Q
PU02B 12P
PU01B 25P
PU01P
PU02B 25P
to VCD
to VCD
to VCD
AND REV

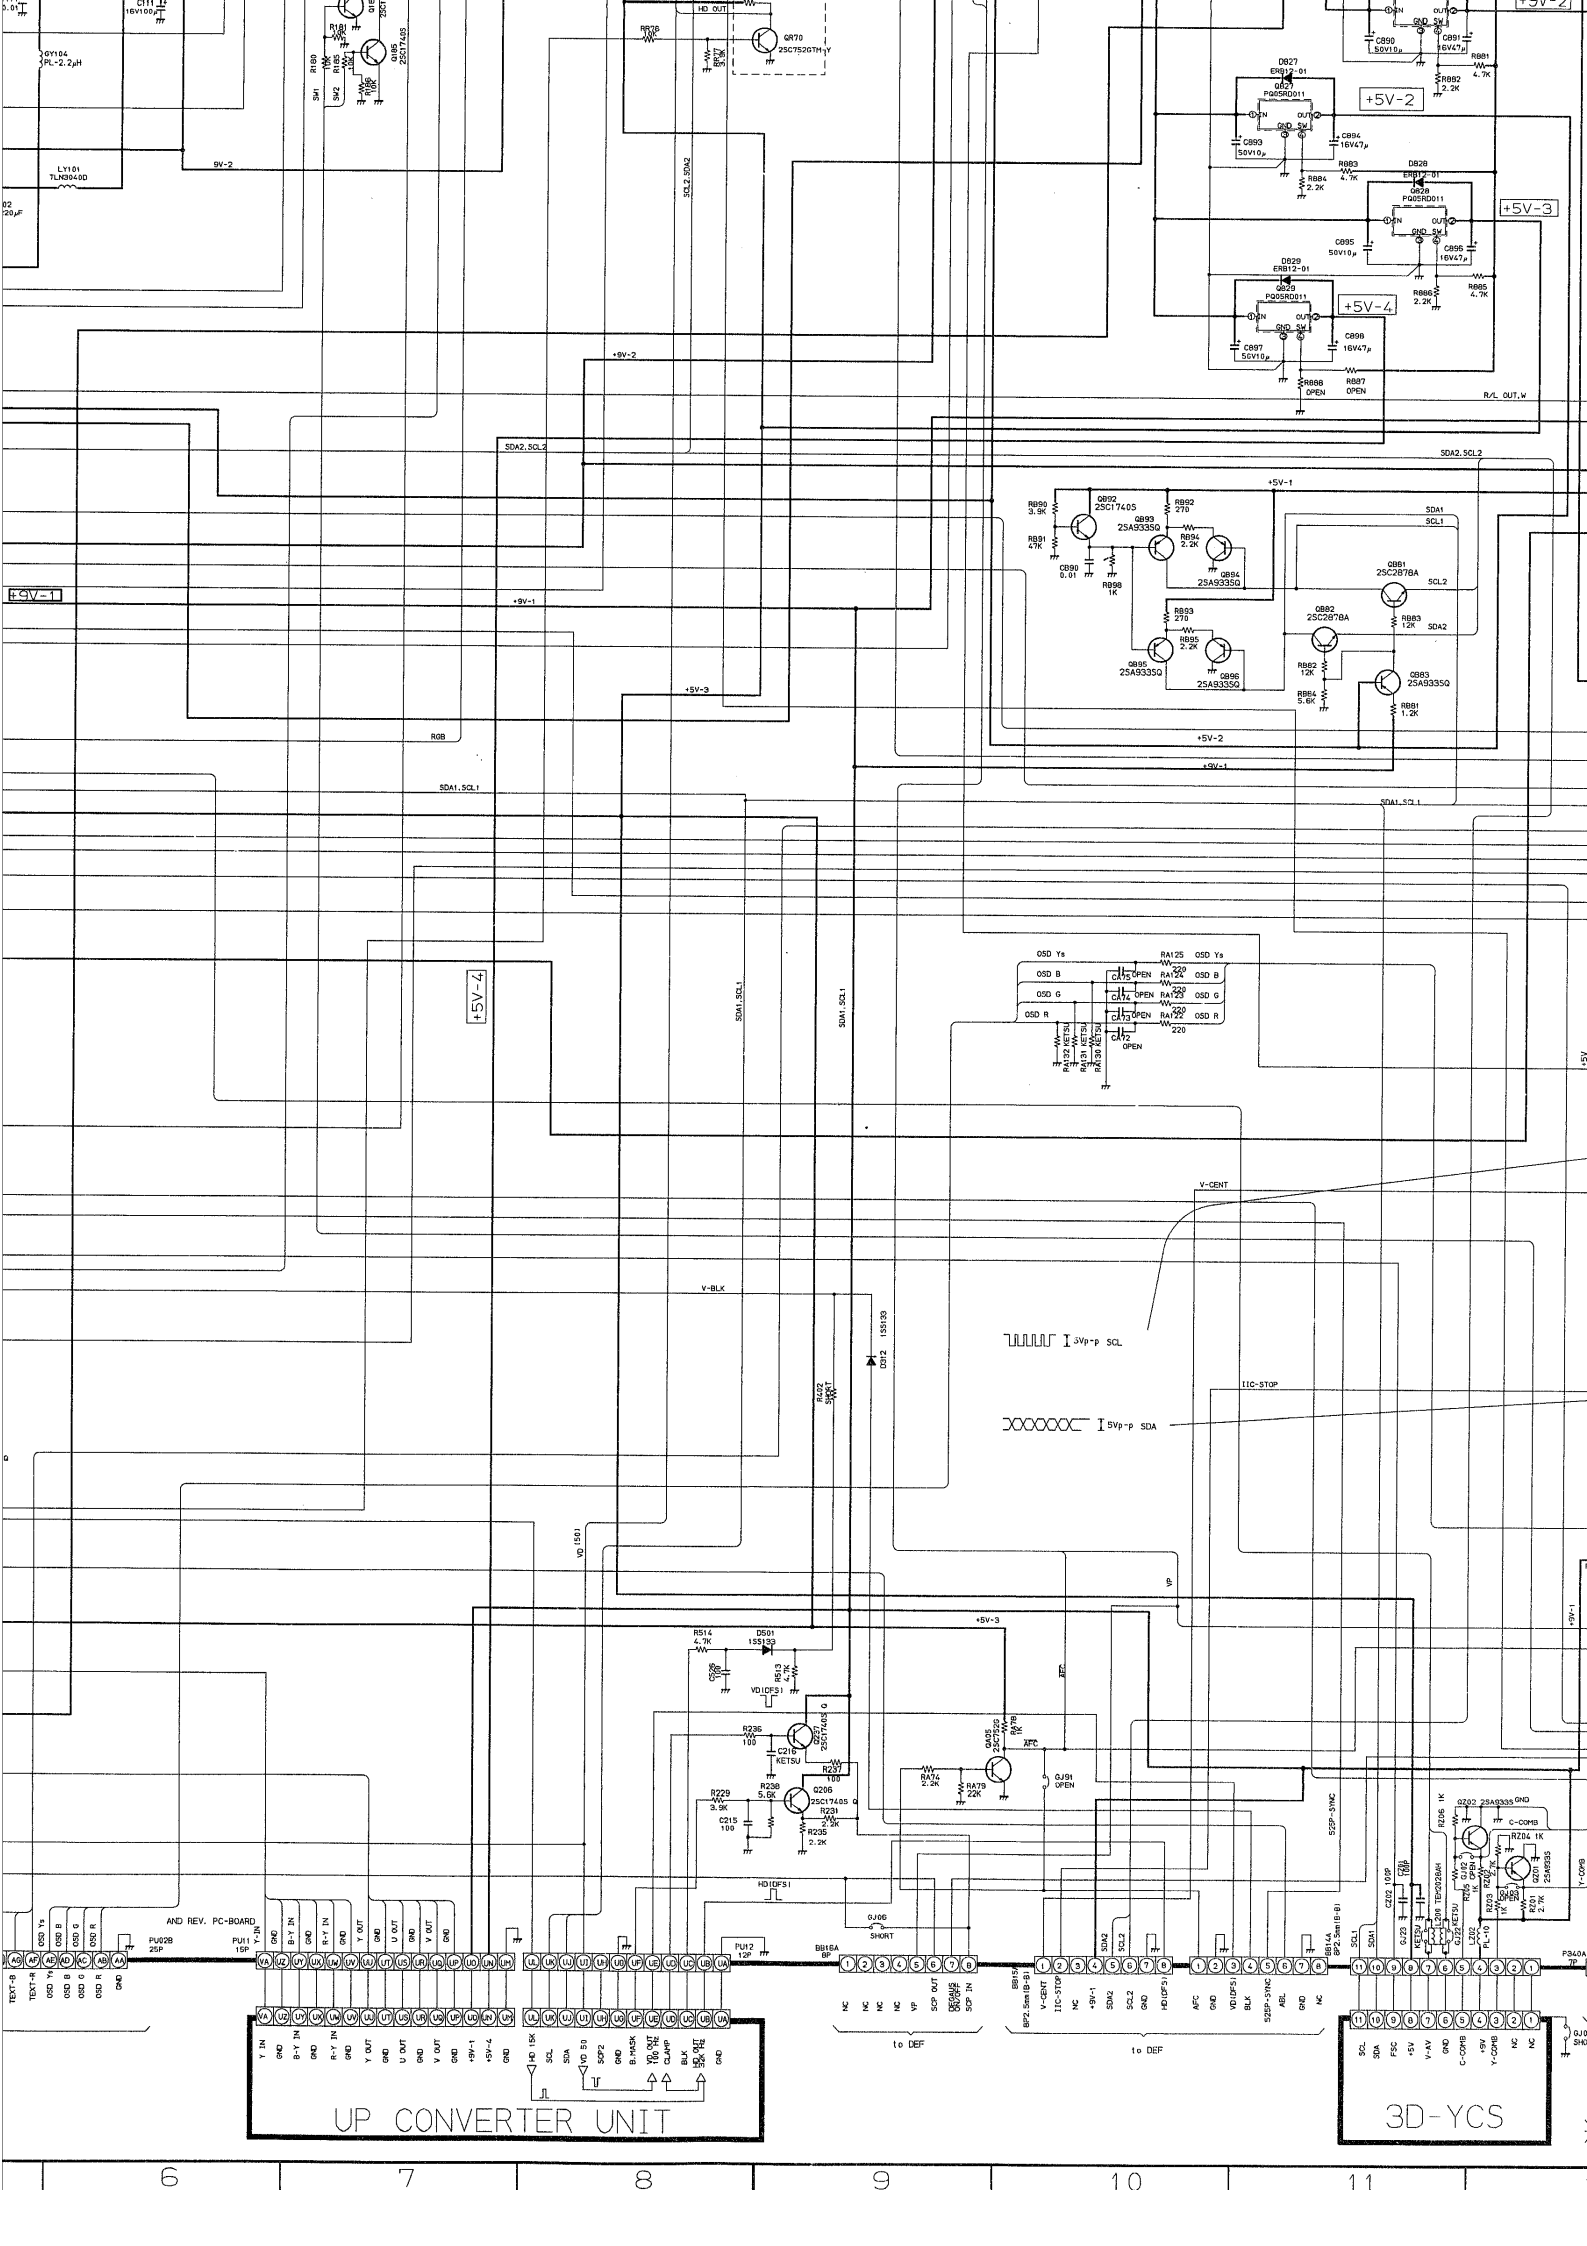
+5V-2
+5V-3
+5V-4
+5V-1
9V-2
SDA2,SCL2
SDA1,SCL1
RGB
R/L OUT,W
V-CENT
V-BLK
I2C-STOP
5Vp-p SCL
5Vp-p SDA
OSD Ys
OSD B
OSD G
OSD R
AND REV. PC-BOARD
UP CONVERTER UNIT
3D-YCS
to DEF
to DEF
6
7
8
9
10
11

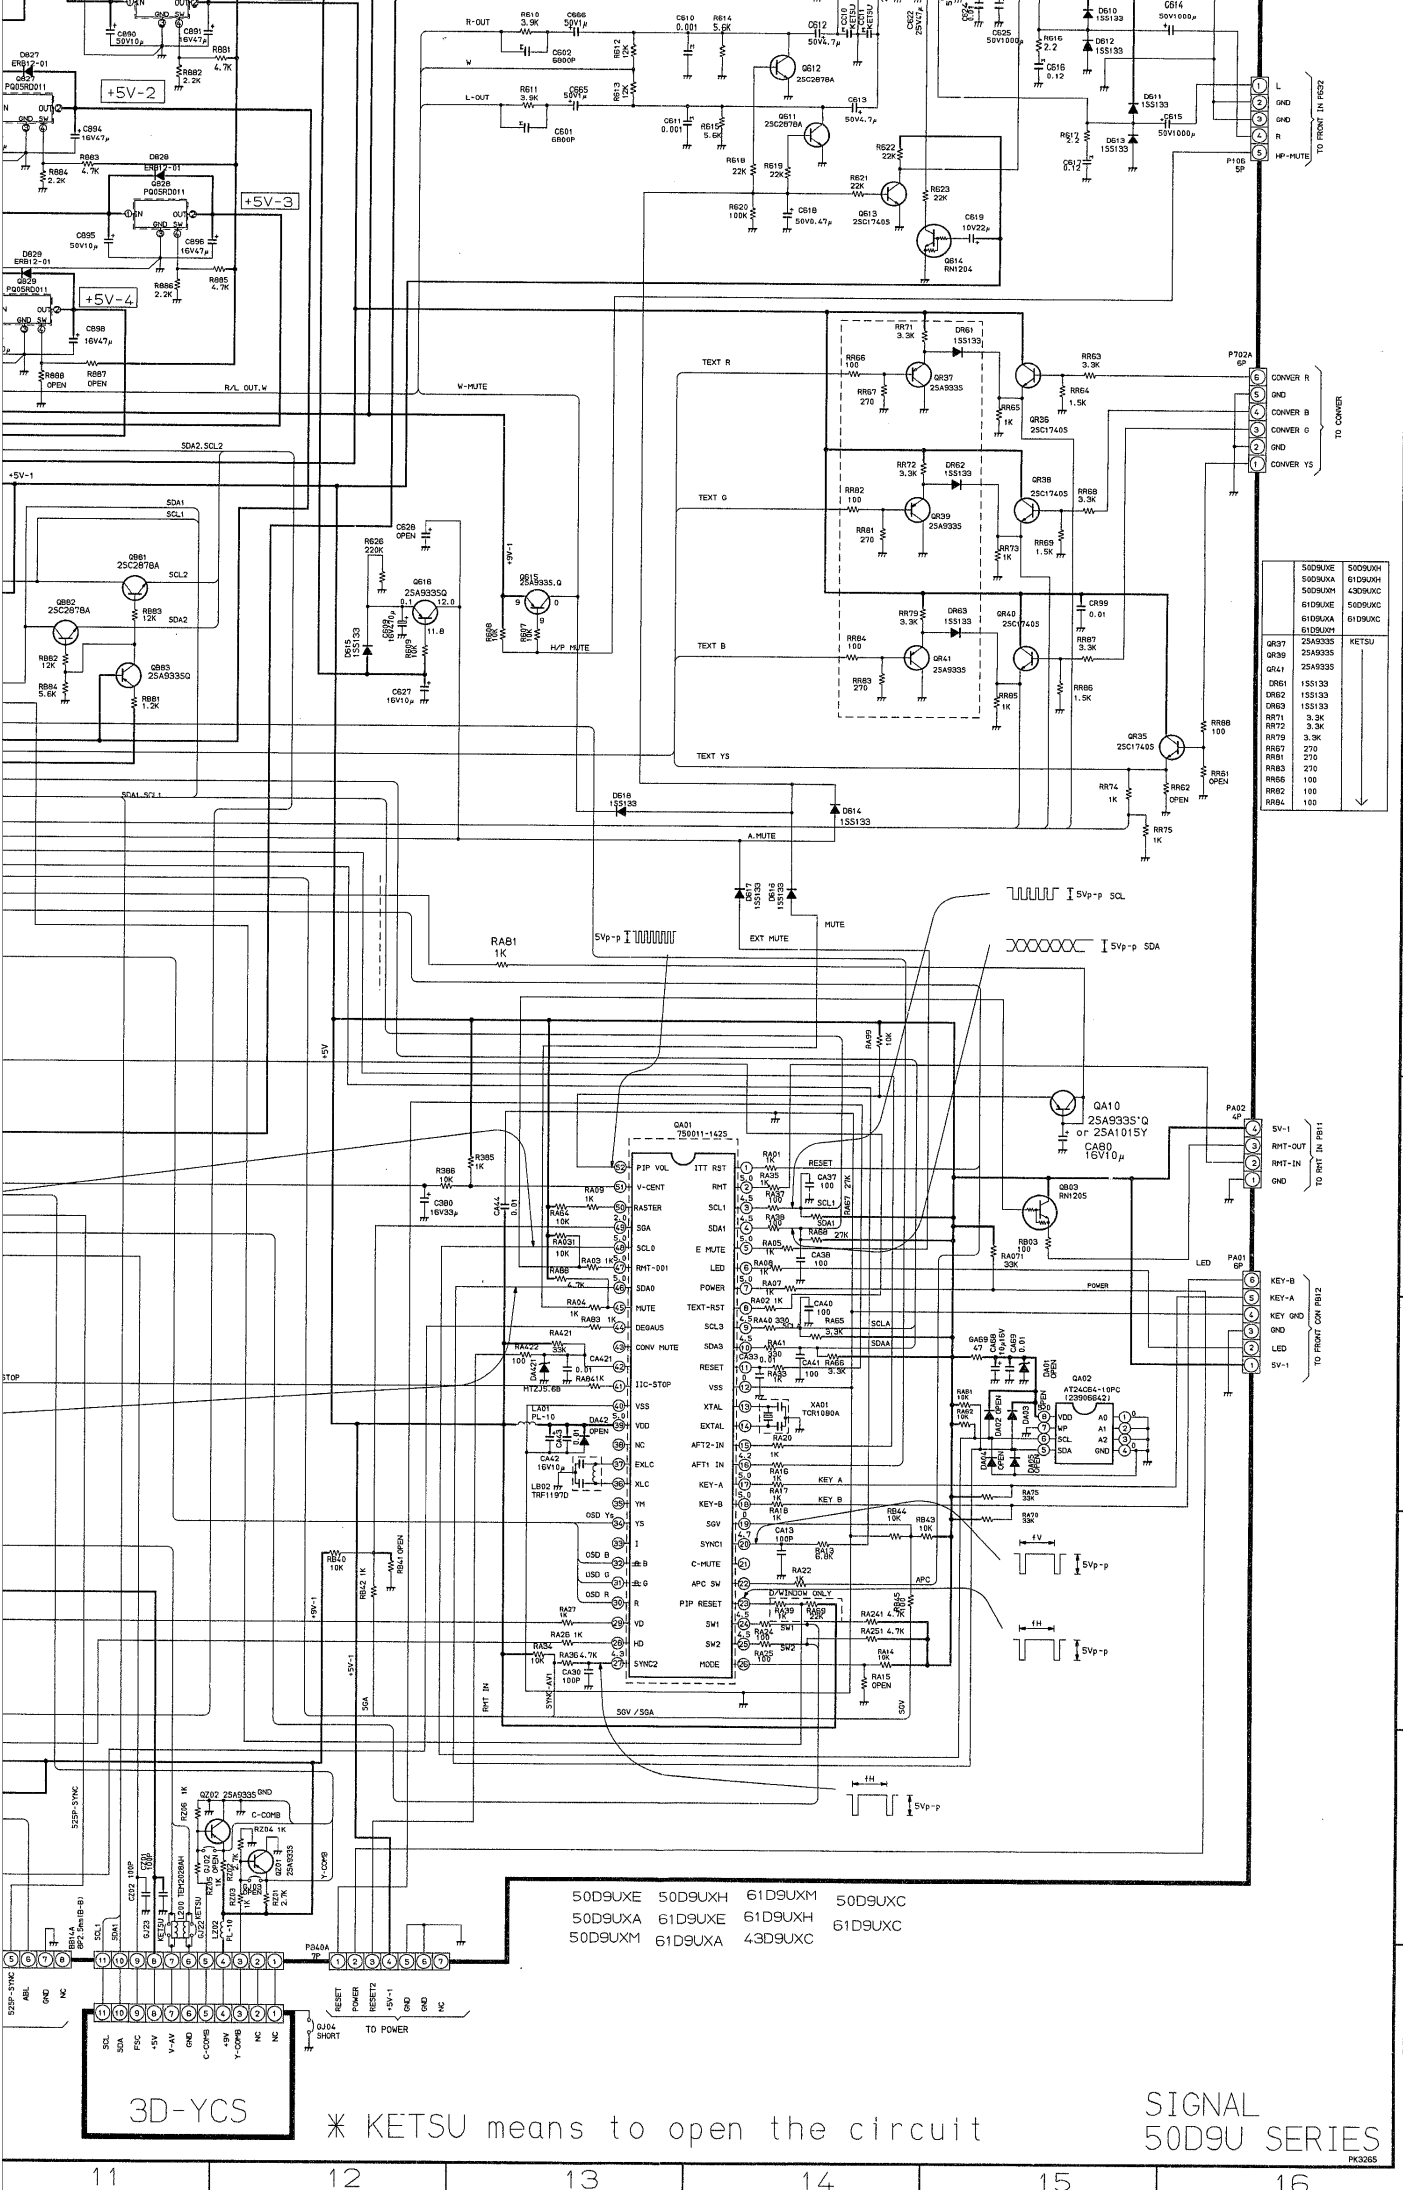
+5V-2
+5V-3
+5V-4
TEXT R
TEXT G
TEXT B
TEXT YS
W-MUTE
H/P MUTE
A.MUTE
EXT MUTE
MUTE
SDA2.SCL2
SDA1.SCL1
TO CONVER
TO FRONT IN PS32
TO RMT IN PB11
TO FRONT CON PB12
TO POWER
3D-YCS
50D9UXE 50D9UXH 61D9UXM 50D9UXC
50D9UXA 61D9UXE 61D9UXH 61D9UXC
50D9UXM 61D9UXA 43D9UXC
* KETSU means to open the circuit
SIGNAL
50D9U SERIES
PK3265

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (2/7)
50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal. Voltages reading may vary ±20%.
2. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
3. Waveforms are taken using a standard colour bar signal.
4. Make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position. Set other controls for best picture.

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⏚ : Solder links.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

40200009

PB9731G	PB9731F	PB9731D	PB9731	PB9733
61D9UXC	50D9UXC	43D9UXC	50D9UXE 50D9UXH 50D9UXA 50D9UXM	61D9UXE 61D9UXH 61D9UXA 61D9UXM

U401
DEFLECTION

* KETSU means to open the circuit.

43D9UXC 61D9UXE 50D9UXE
50D9UXC 61D9UXA 50D9UXA
61D9UXC 61D9UXM 50D9UXM
61D9UXH 50D9UXH

DEFLECTION
50D9U SERIES

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (2/7)

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to ch
   volts, colour bar signal. Voltages reading may va
2. All waveforms are taken using a wide band oscillos
3. Waveforms are taken using a standard colour bar
4. Make sure that CONTRAST and COLOUR contr
   BRIGHTNESS control is almost in maximum positi
   picture.

40200009

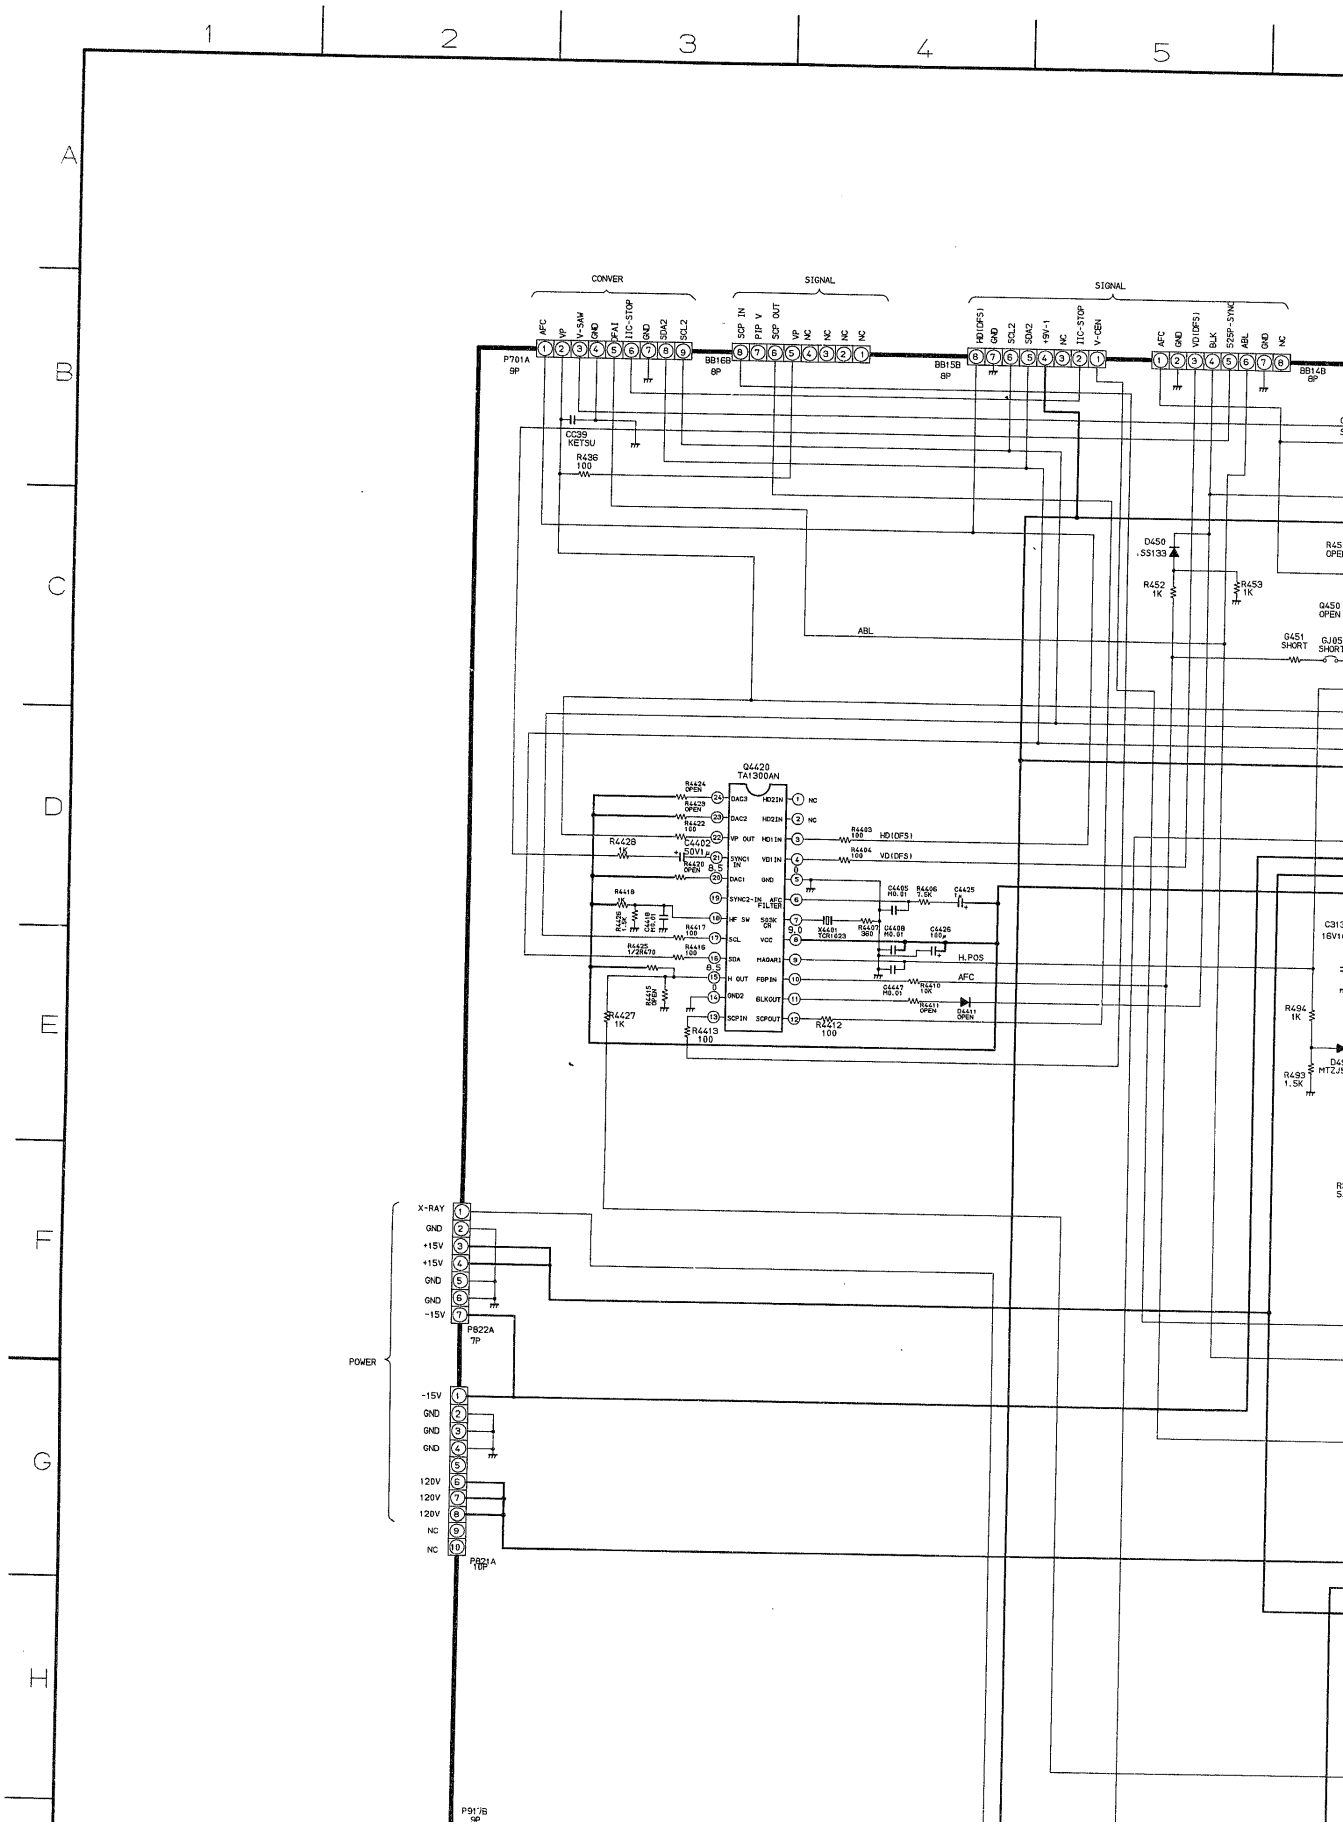

VEFORMS

shown to chassis ground, line voltage 220
ling may vary ±20%.
and oscilloscope and a low capacity probe.
d colour bar signal.
LOUR controls are in mid position and
imum position. Set other controls for best

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⬬ : Solder links.

EXPRESSIO

VALUE OF F

1. Resistance is
2. Unless other
sed in μF an
3. Unless other
sed in μH, ar

PB9731G	PB9731F	PB9731D
61D9UXC	50D9UXC	43D9UXC

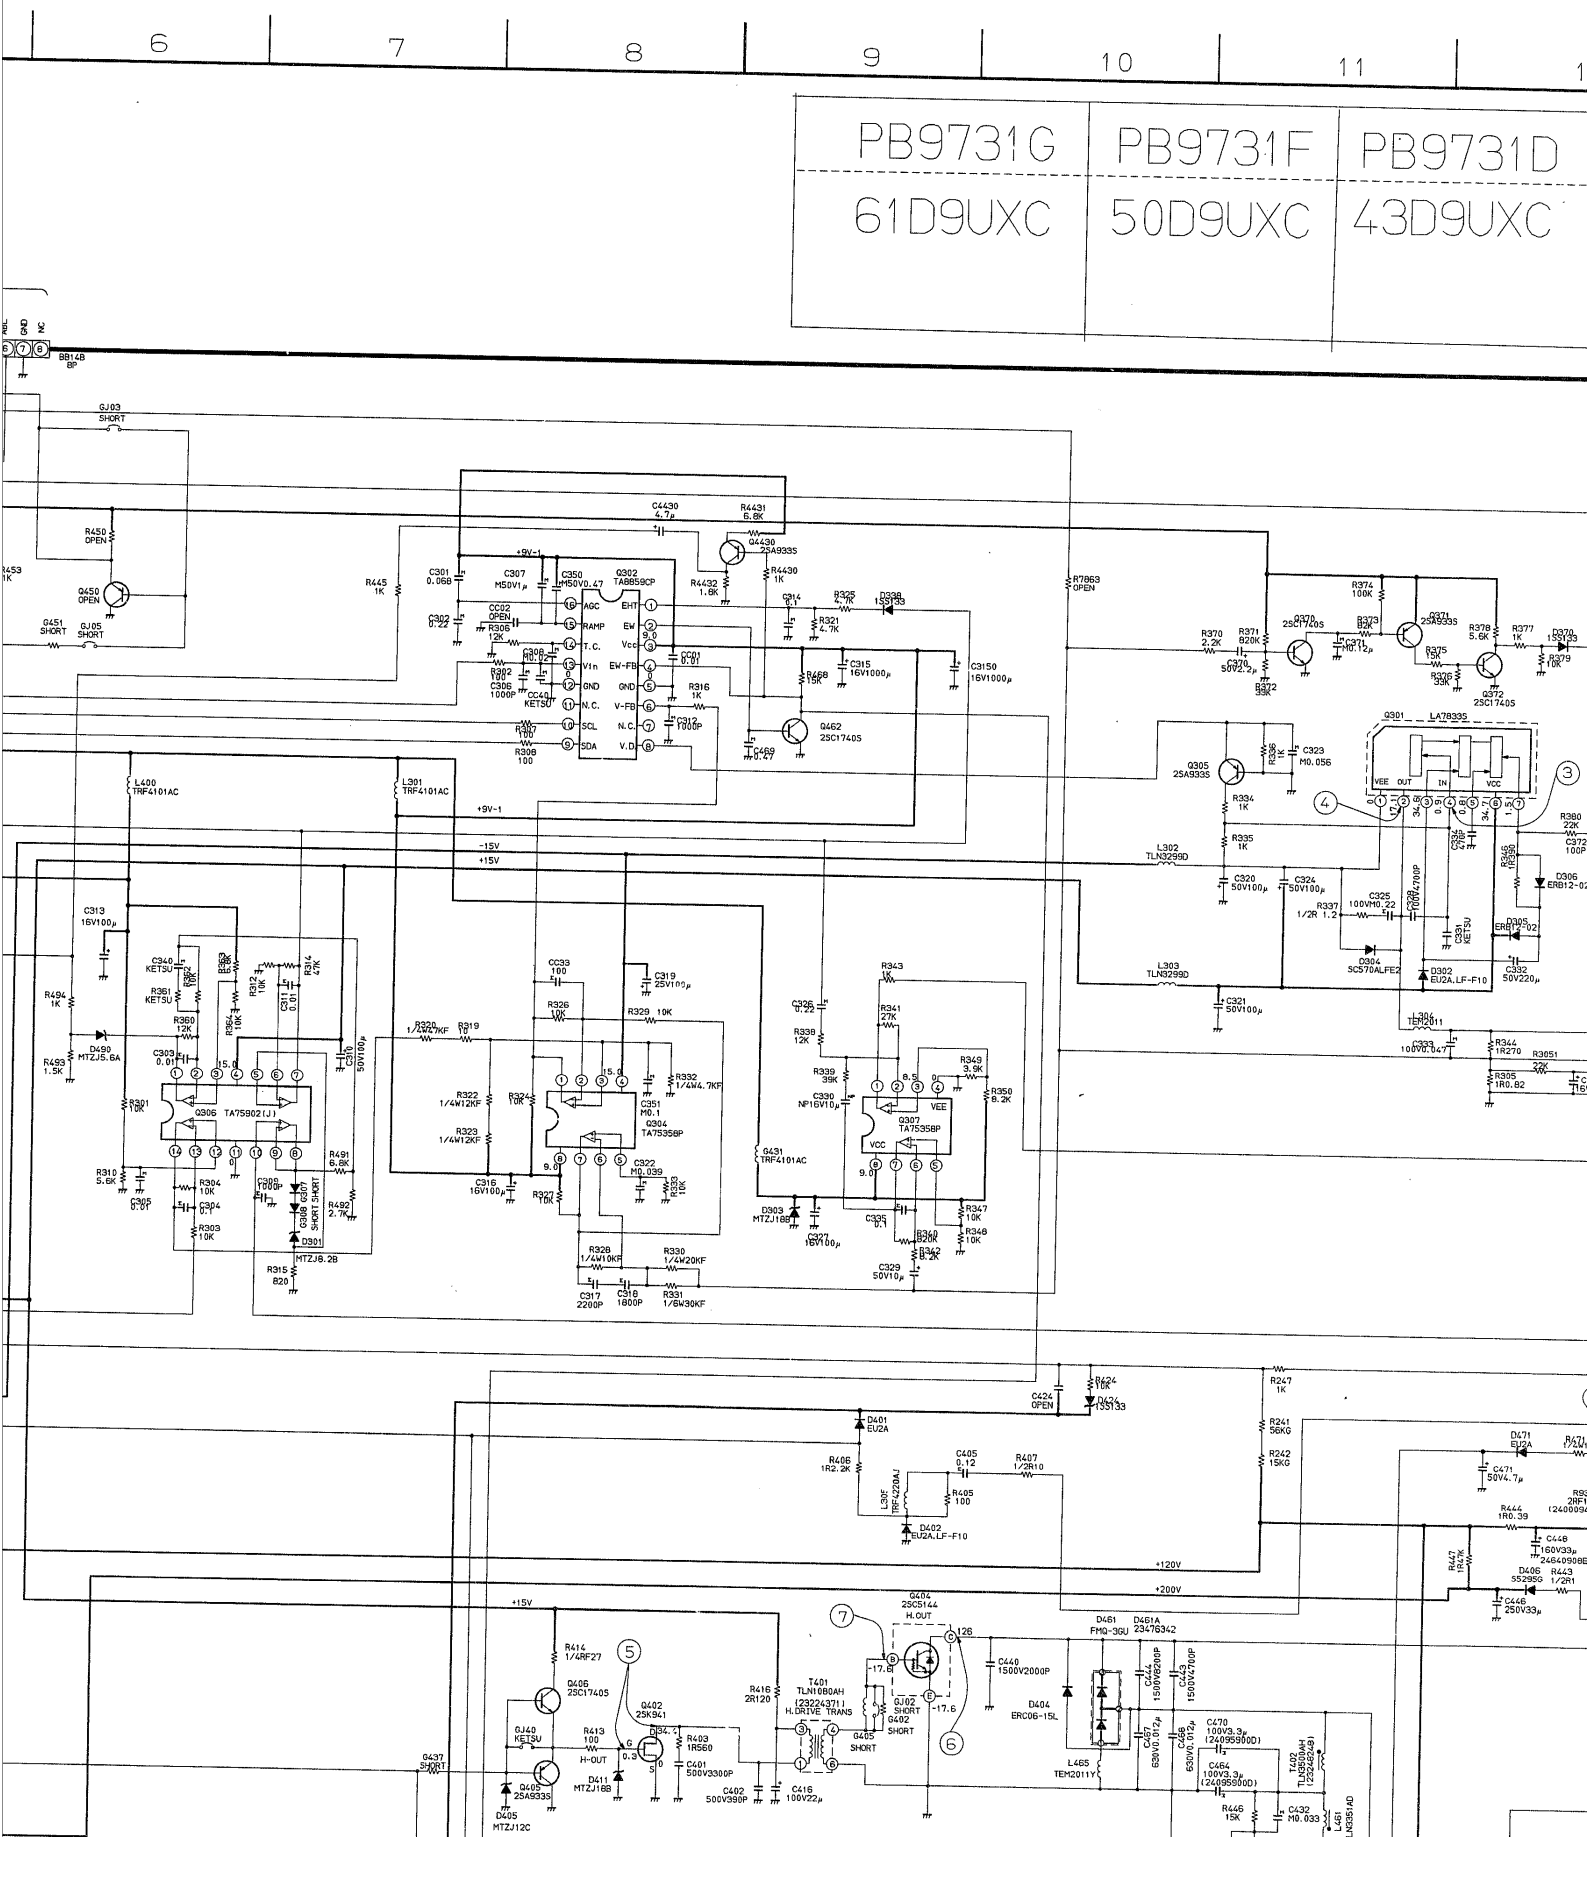

atic dia-

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

11	12	13	14	15	16
731F	PB9731D	PB9731		PB9733	
9UXC	43D9UXC	50D9UXE	50D9UXH	61D9UXE	61D9UXH
		50D9UXA		61D9UXA	
		50D9UXM		61D9UXM	

U401
DEFLECTION

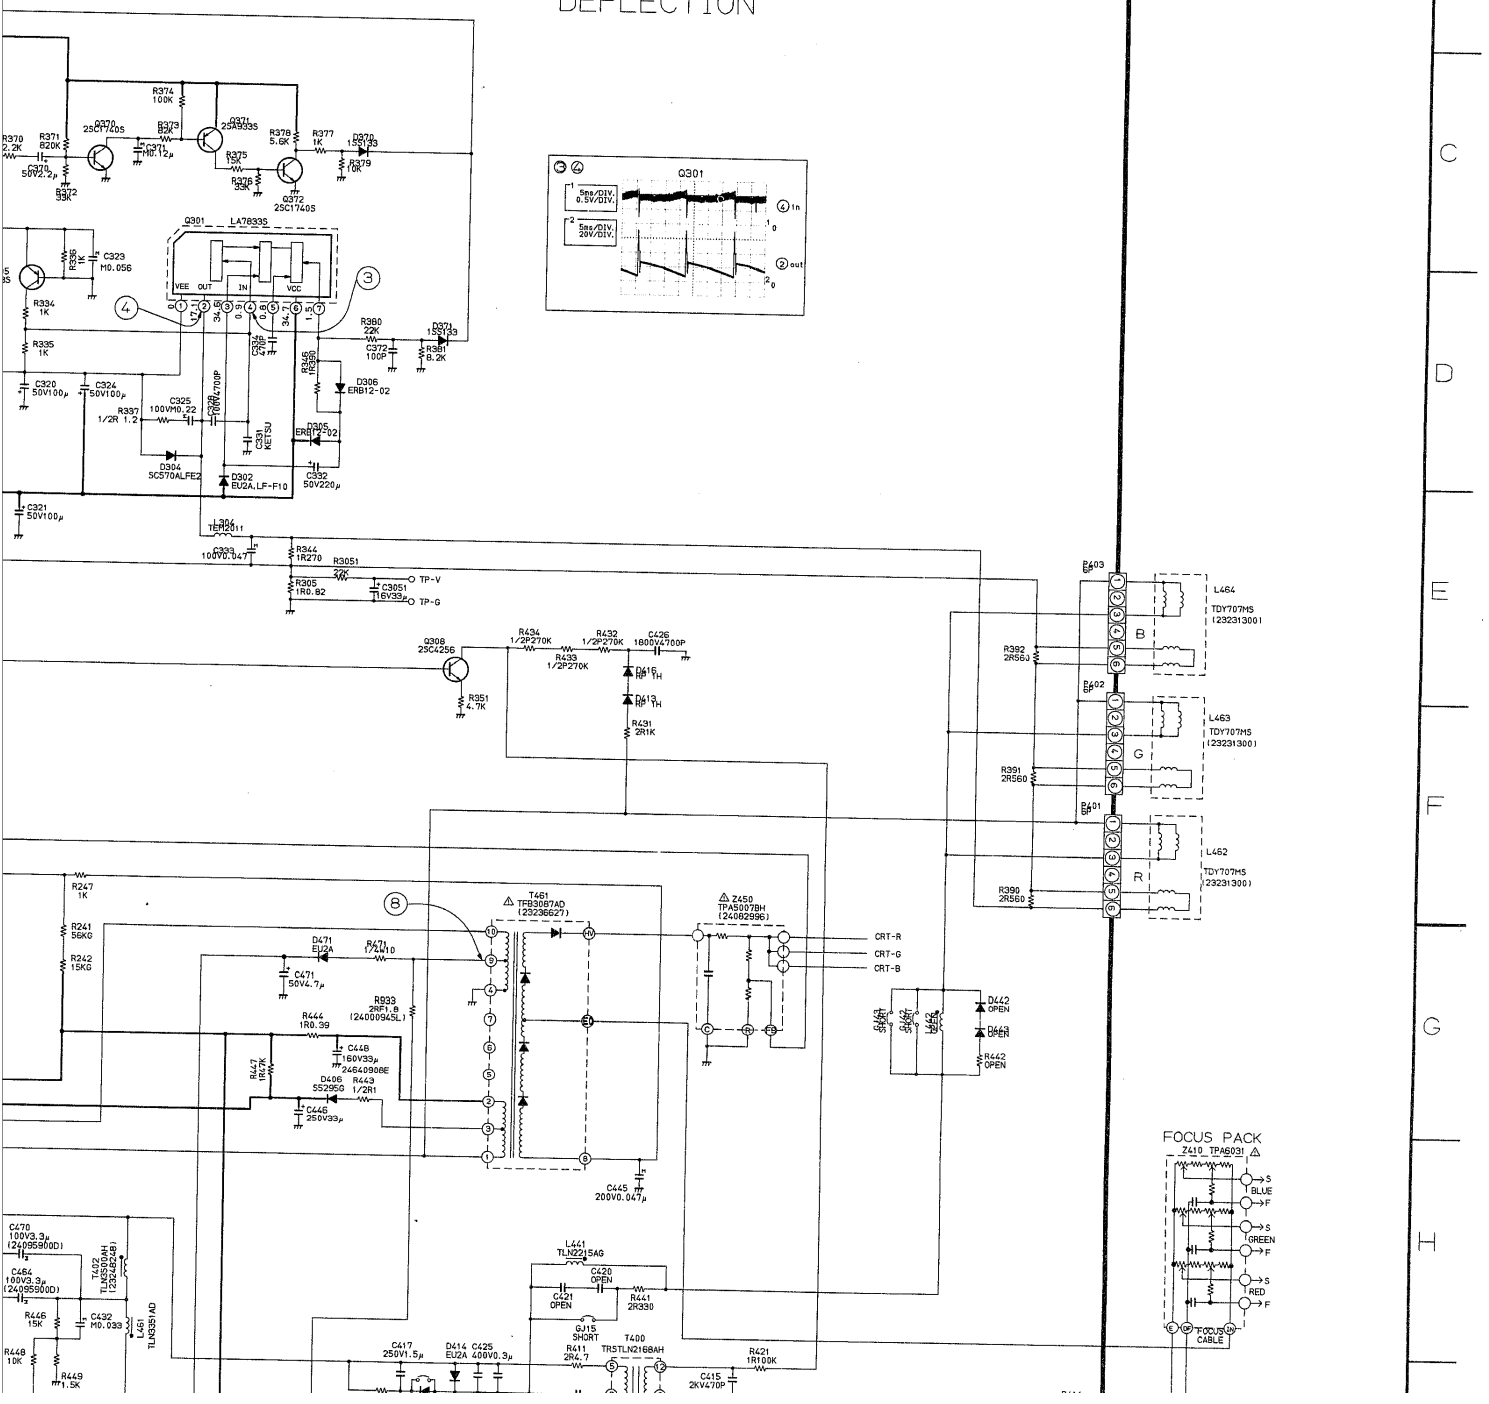

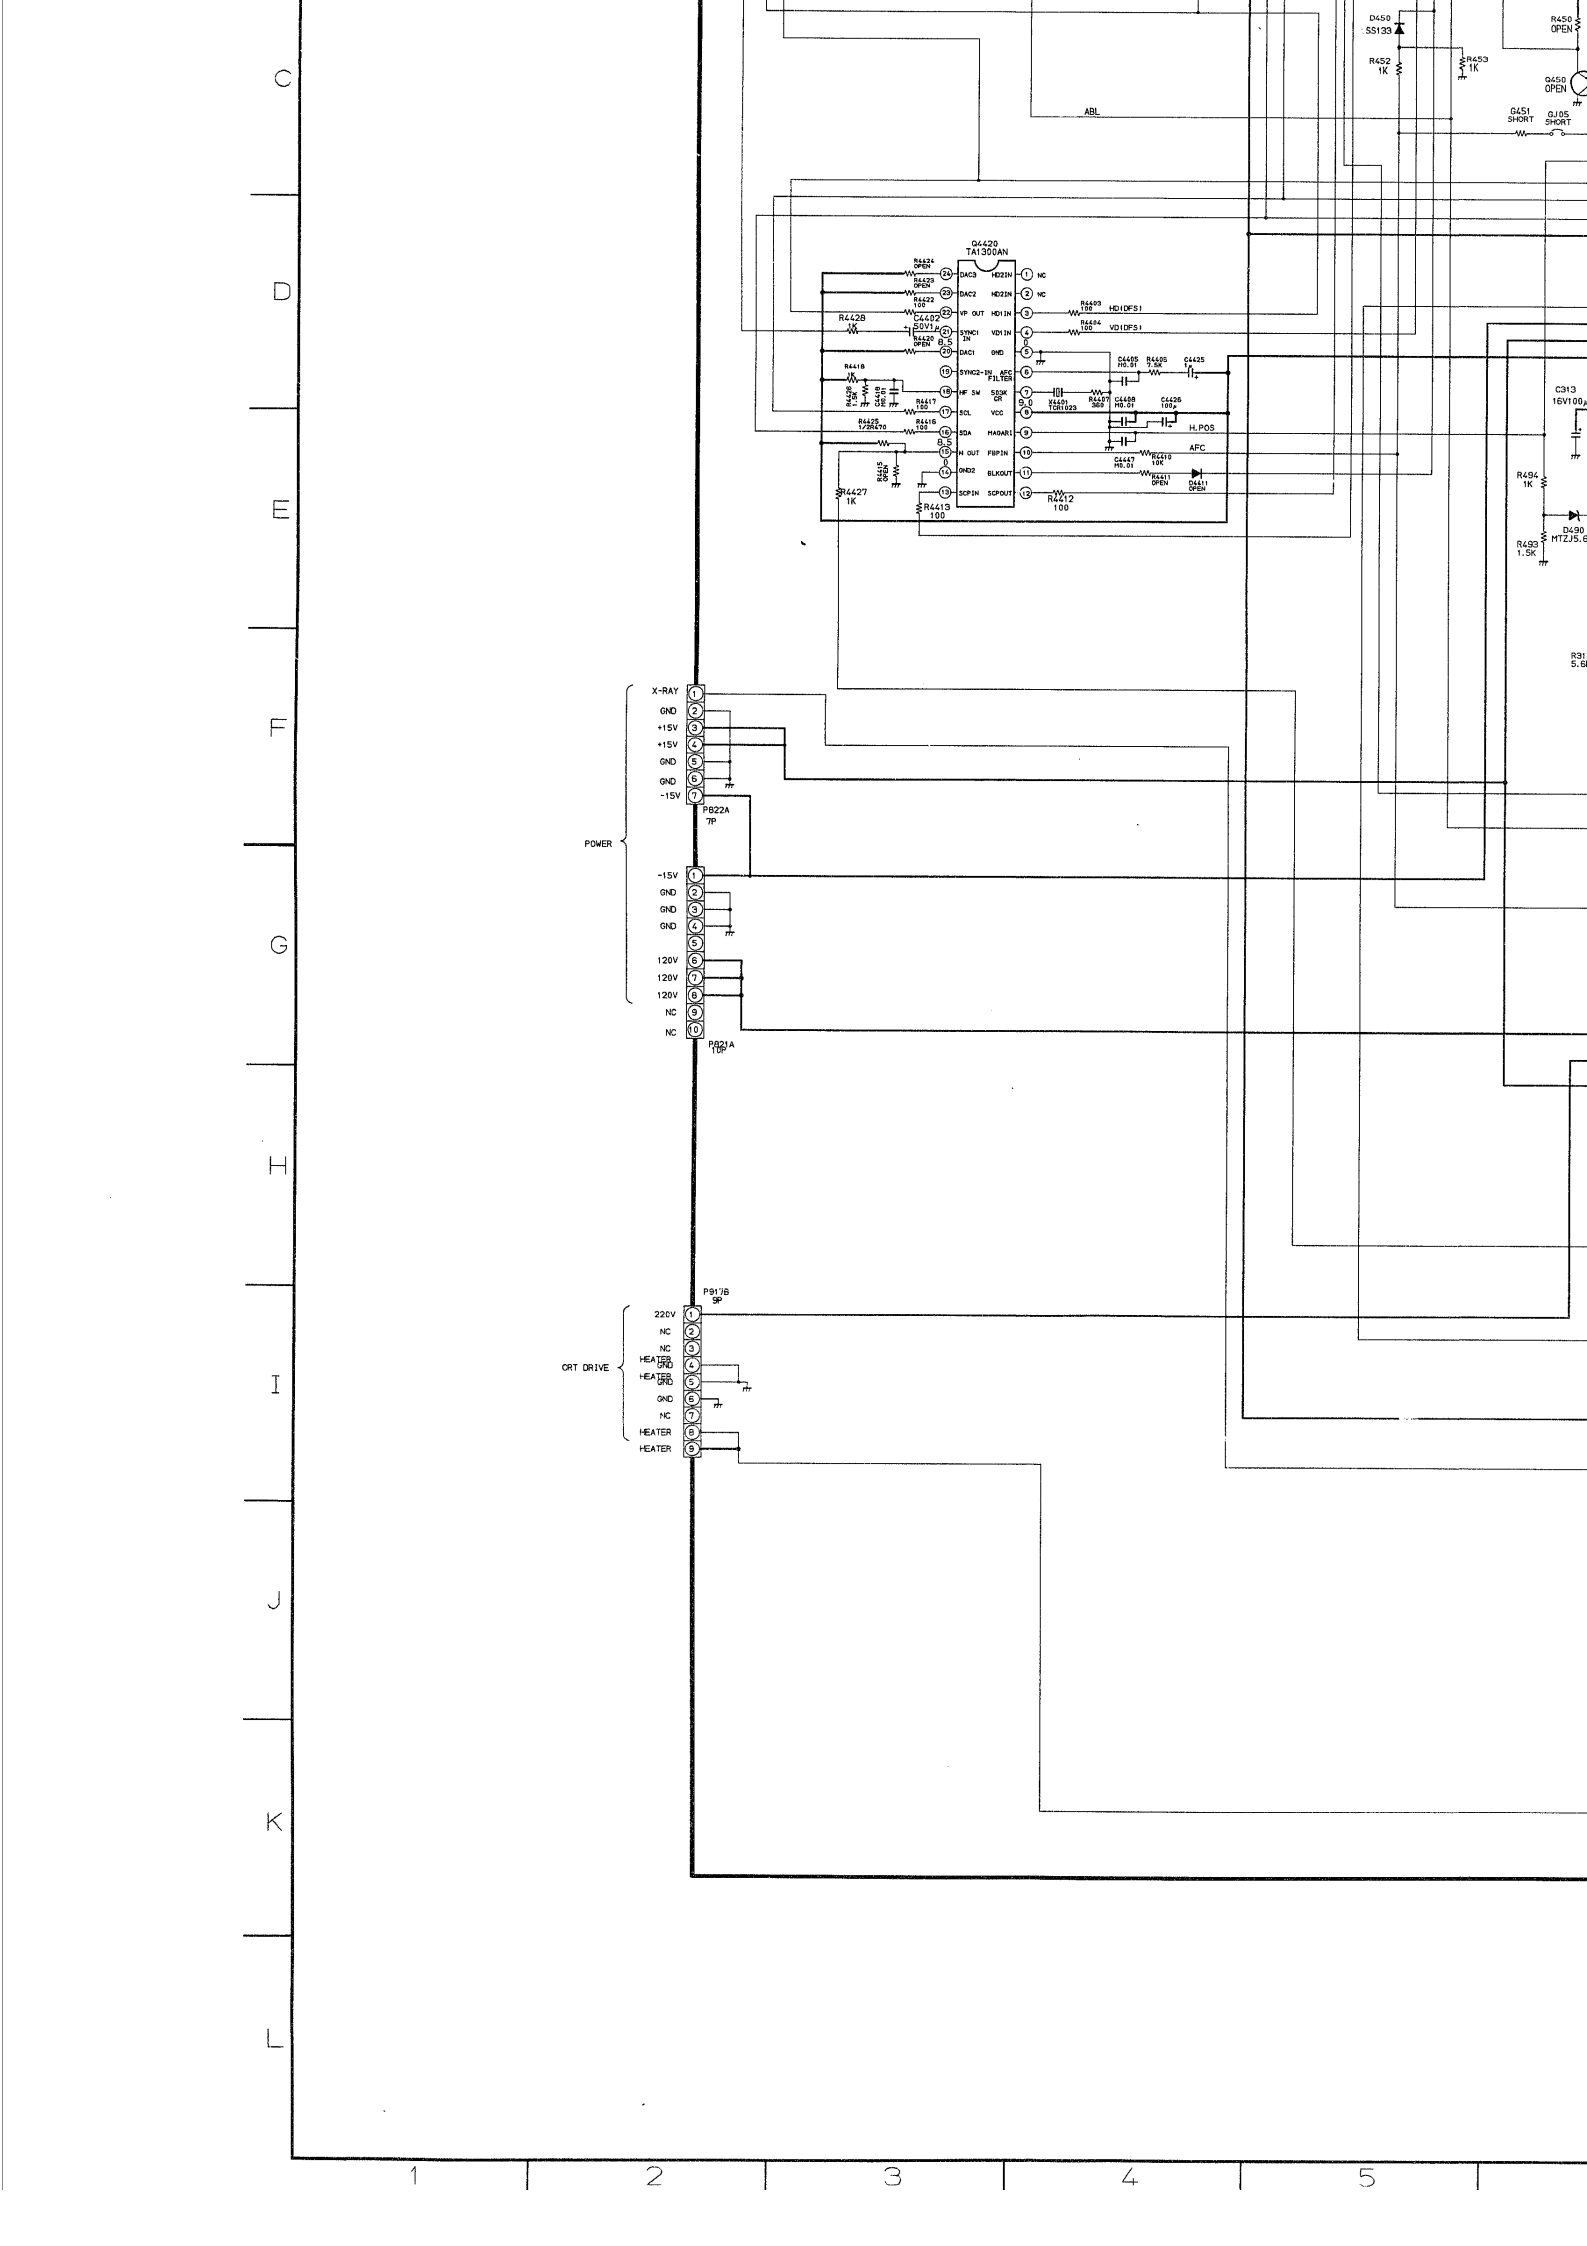
D450
SS133
R452
1K
R453
1K
R450
OPEN
Q450
OPEN
G451
SHORT
GJ05
SHORT
ABL
Q4420
TA1300AN
R4424
OPEN
R4423
OPEN
R4422
100
C4402
50V1
R4428
R4420
OPEN
R4418
R4419
C4419
R4417
180
R4416
100
R4415
OPEN
R4427
1K
R4413
100
R4412
100
R4403
100
HD1DFS1
R4404
100
VD1DFS1
C4405
R4405
C4425
C4407
C4408
C4426
H.POS
AFC
C4447
R4410
10K
R4411
OPEN
D4411
OPEN
C313
16V100
R494
1K
D490
MTZJ5.6
R493
1.5K
X-RAY
GND
+15V
+15V
GND
GND
-15V
P822A
7P
POWER
-15V
GND
GND
GND
120V
120V
120V
NC
NC
P821A
10P
P917B
9P
220V
NC
NC
HEATER GND
HEATER GND
GND
NC
HEATER
HEATER
CRT DRIVE
C
D
E
F
G
H
I
J
K
L
1
2
3
4
5

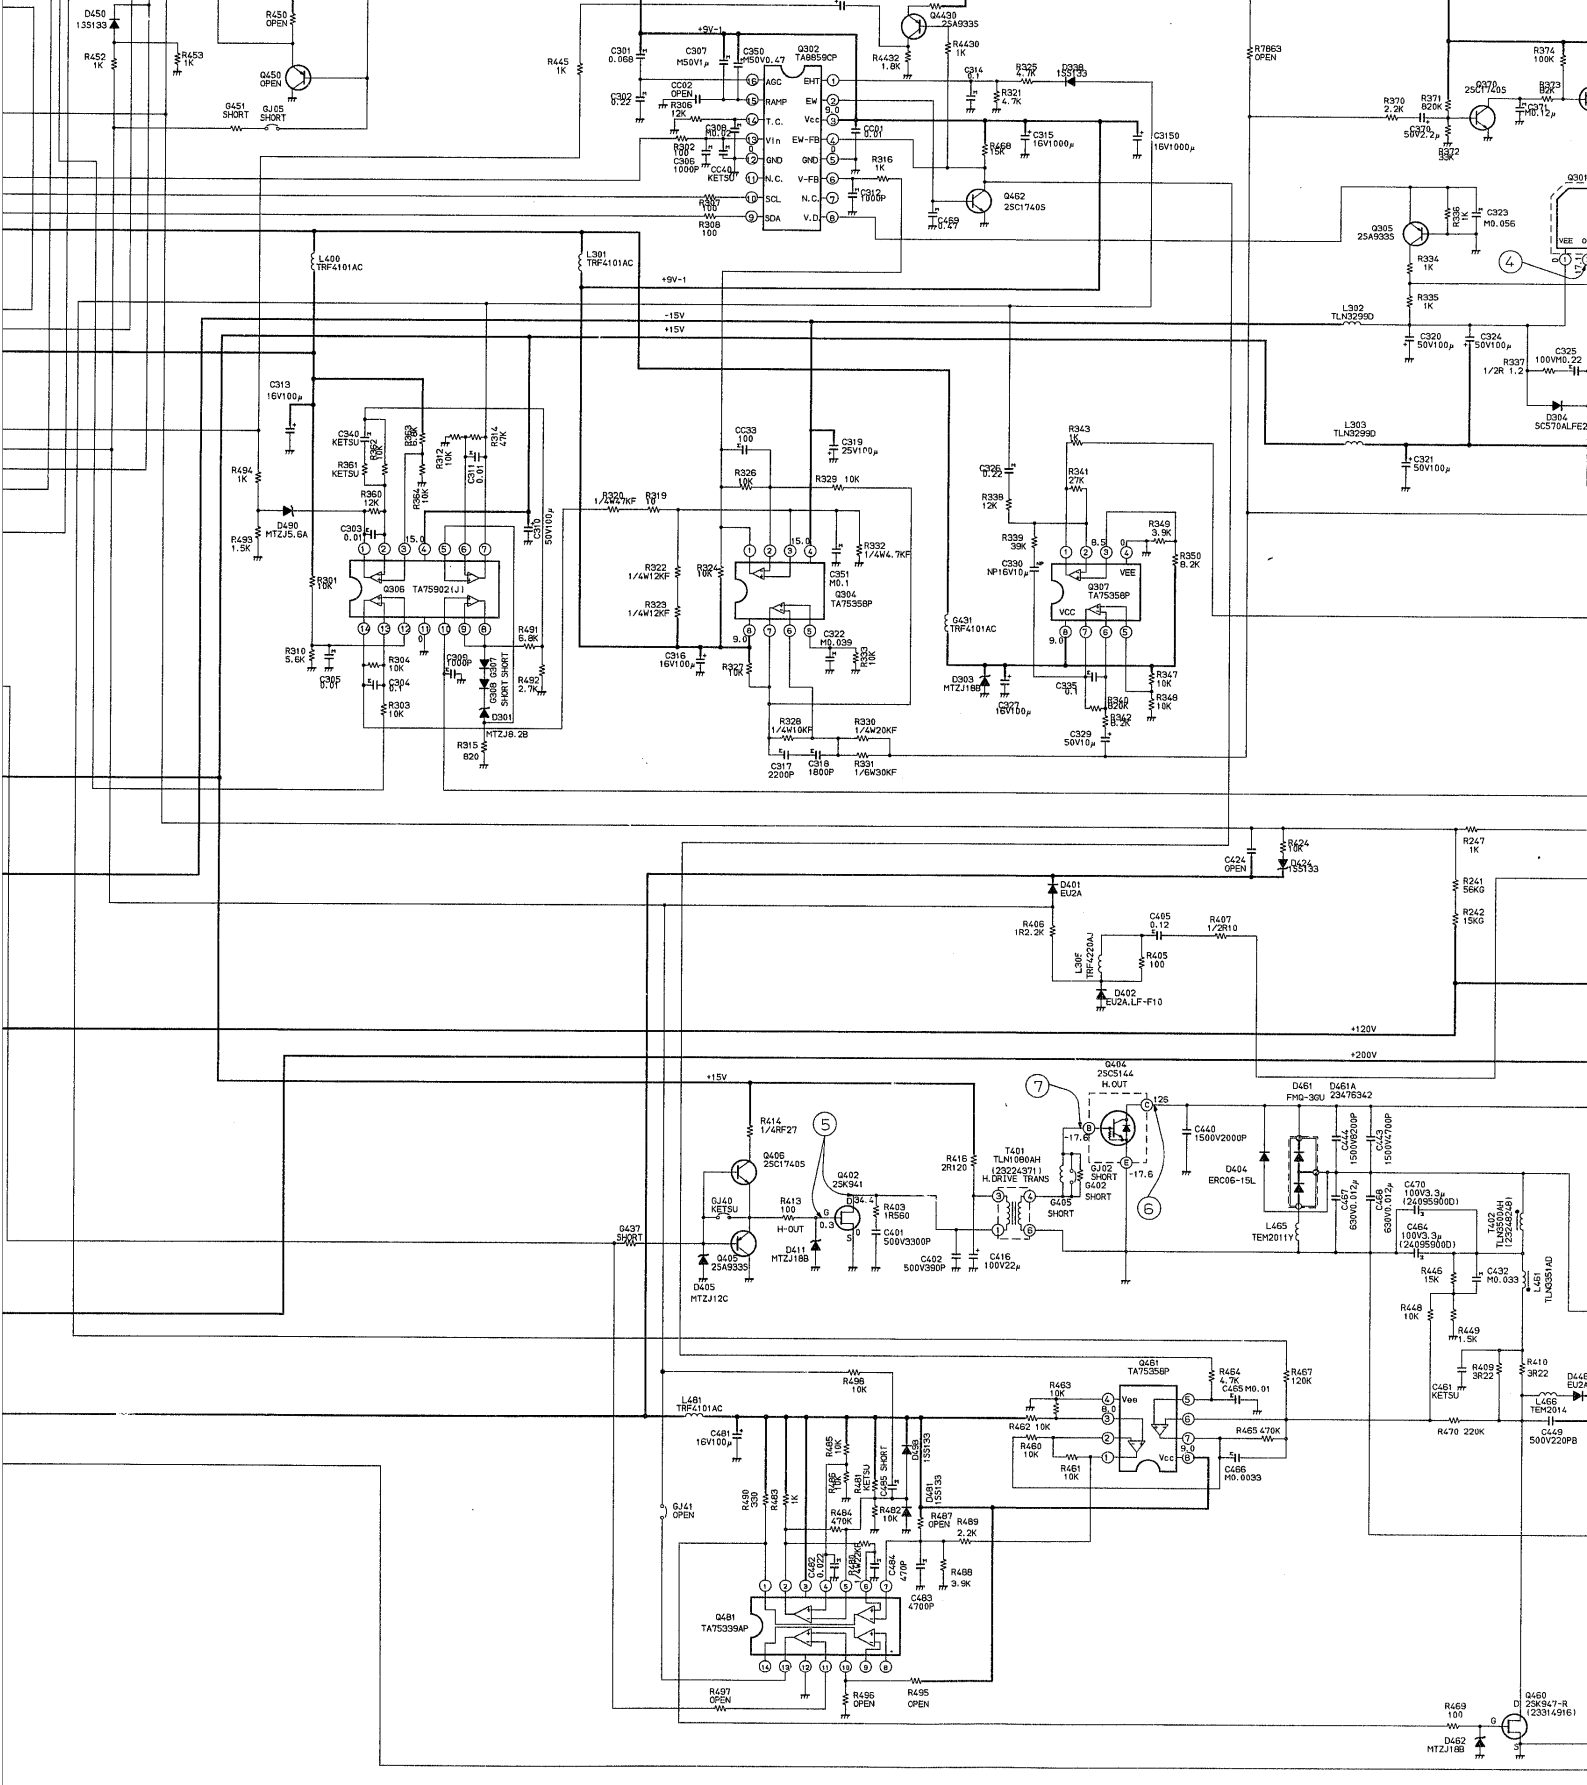
+9V-1
-15V
+15V
+120V
+200V
H-OUT
Q306 TA75902(J)
Q304 TA75358P
Q307 TA75358P
Q484 2SC5144 H.OUT
Q481 TA75339AP
Q481 TA75358P
T401 TLN1080AH (23224371) H.DRIVE TRANS
L400 TRF4101AC
L301 TRF4101AC
L481 TRF4101AC
L303 TLN3299D
L302 TLN3299D
L305 TRF4220AJ
L465 TEM2011Y
L461 TLN3581AD
T402 T25S2004H (24095900D)
D402 EU2A,LF-F10
D404 ERC06-15L
D461 FMQ-3GU
D461A 23476342
D303 MTZJ18B
D462 MTZJ18B
D405 MTZJ12C
D411 MTZJ18B
D490 MTZJ5.6A
D301 MTZJ8.2B
D303 SC570ALFE2
D460 2SK947-R (2331491G)
Q460 2SK947-R (2331491G)
Q462 2SC1740S
Q469 2SC1740S
Q405 2SA933S
Q430 2SA933S
Q305 2SA933S
Q406 2SC1740S
Q450 OPEN
Q451 SHORT
GJ05 SHORT
GJ01 OPEN
GJ02 SHORT
GJ40 KETSU
G437 SHORT
G402 SHORT
G307 SHORT
G308 SHORT
D450 1SS133
D452 1K
D453 1K
D401 EU2A
D424 1SS133
D491 1SS133
D498 1SS133
D338 1SS133
C424 OPEN
R450 OPEN
R7863 OPEN
R497 OPEN
R496 OPEN
R495 OPEN
R489 2.2K
R488 3.9K
R487 OPEN
R494 1K
R493 1.5K
R492 2.7K
R491 6.8K
R315 820
R310 5.6K
R303 10K
R304 10K
R301 10K
R360 12K
R361 KETSU
R362 10K
R363 10K
R364 10K
R312 10K
R314 47K
R320 1/4W47KF
R319 10
R322 1/4W12KF
R323 1/4W12KF
R324 10K
R326 10K
R327 10K
R328 1/4W10KF
R329 10K
R330 1/4W20KF
R331 1/6W30KF
R332 1/4W4.7KF
R333 10K
R343 1K
R341 27K
R338 12K
R339 39K
R349 3.9K
R350 8.2K
R347 10K
R348 10K
R340 820R
R342 8.2K
R247 1K
R241 56KG
R242 15KG
R424 10K
R406 1R2.2K
R407 1/2R10
R405 100
R414 1/4RF27
R413 100
R418 2R120
R403 1R560
R401 500V3300P
R402 500V390P
R416 1/4RF27
R469 100
R470 220K
R471 10K
R472 10K
R473 10K
R474 10K
R475 10K
R476 10K
R477 10K
R478 10K
R479 10K
R480 10K
R481 10K
R482 10K
R483 10K
R484 470K
R485 470K
R486 470K
R465 470K
R467 120K
R466 470K
R464 4.7K
R462 10K
R460 10K
R461 10K
R446 15K
R448 10K
R449 1.5K
R409 3R22
R410 3R22
R371 820K
R370 2.2K
R372 33K
R373 82K
R374 100K
R334 1K
R335 1K
R316 1K
R445 1K
R4432 1.8K
R4430 1K
R321 4.7K
R325 4.7K
R468 10K
C307 M50V1μ
C350 M50V0.47
C301 0.068
C302 0.22
C306 1000P
C308 0.22
C309 0.01
C501 0.01
C312 1000P
C314 (0.1)
C315 16V1000μ
C3150 16V1000μ
C469 0.27
C313 16V100μ
C340 KETSU
C303 0.01
C311 0.01
C310 50V100μ
C305 0.01
C304 0.1
C306 1000P
C316 16V100μ
C317 2200P
C318 1800P
C319 25V100μ
C322 M0.039
C351 M0.1
C325 0.22
C330 NP16V10μ
C335 0.1
C327 16V100μ
C329 50V10μ
C320 50V100μ
C324 50V100μ
C325 100VM0.22
C321 50V100μ
C337 M0.12
C323 M0.056
C424 OPEN
C465 0.12
C440 1500V2000P
C423 1500V2700P
C470 100V3.3μ (24095900D)
C464 100V3.3μ (24095900D)
C468 630V0.012μ
C467 630V0.012μ
C432 M0.033
C466 M0.0033
C461 KETSU
C460 TEM2014
C449 50V220PB
C481 16V100μ
C482 0.022
C484 470P
C483 4700P
R6 1K
R5 1K
R4 1K
R3 1K
R2 1K
R1 1K
VEE
Vcc
Vee
* KETSU means to open the cir
43D9UXC
50D9UXC
61D9UXC
61D9U
61D9U
61D9U
61D9U
5
6
7
8
9
10
11

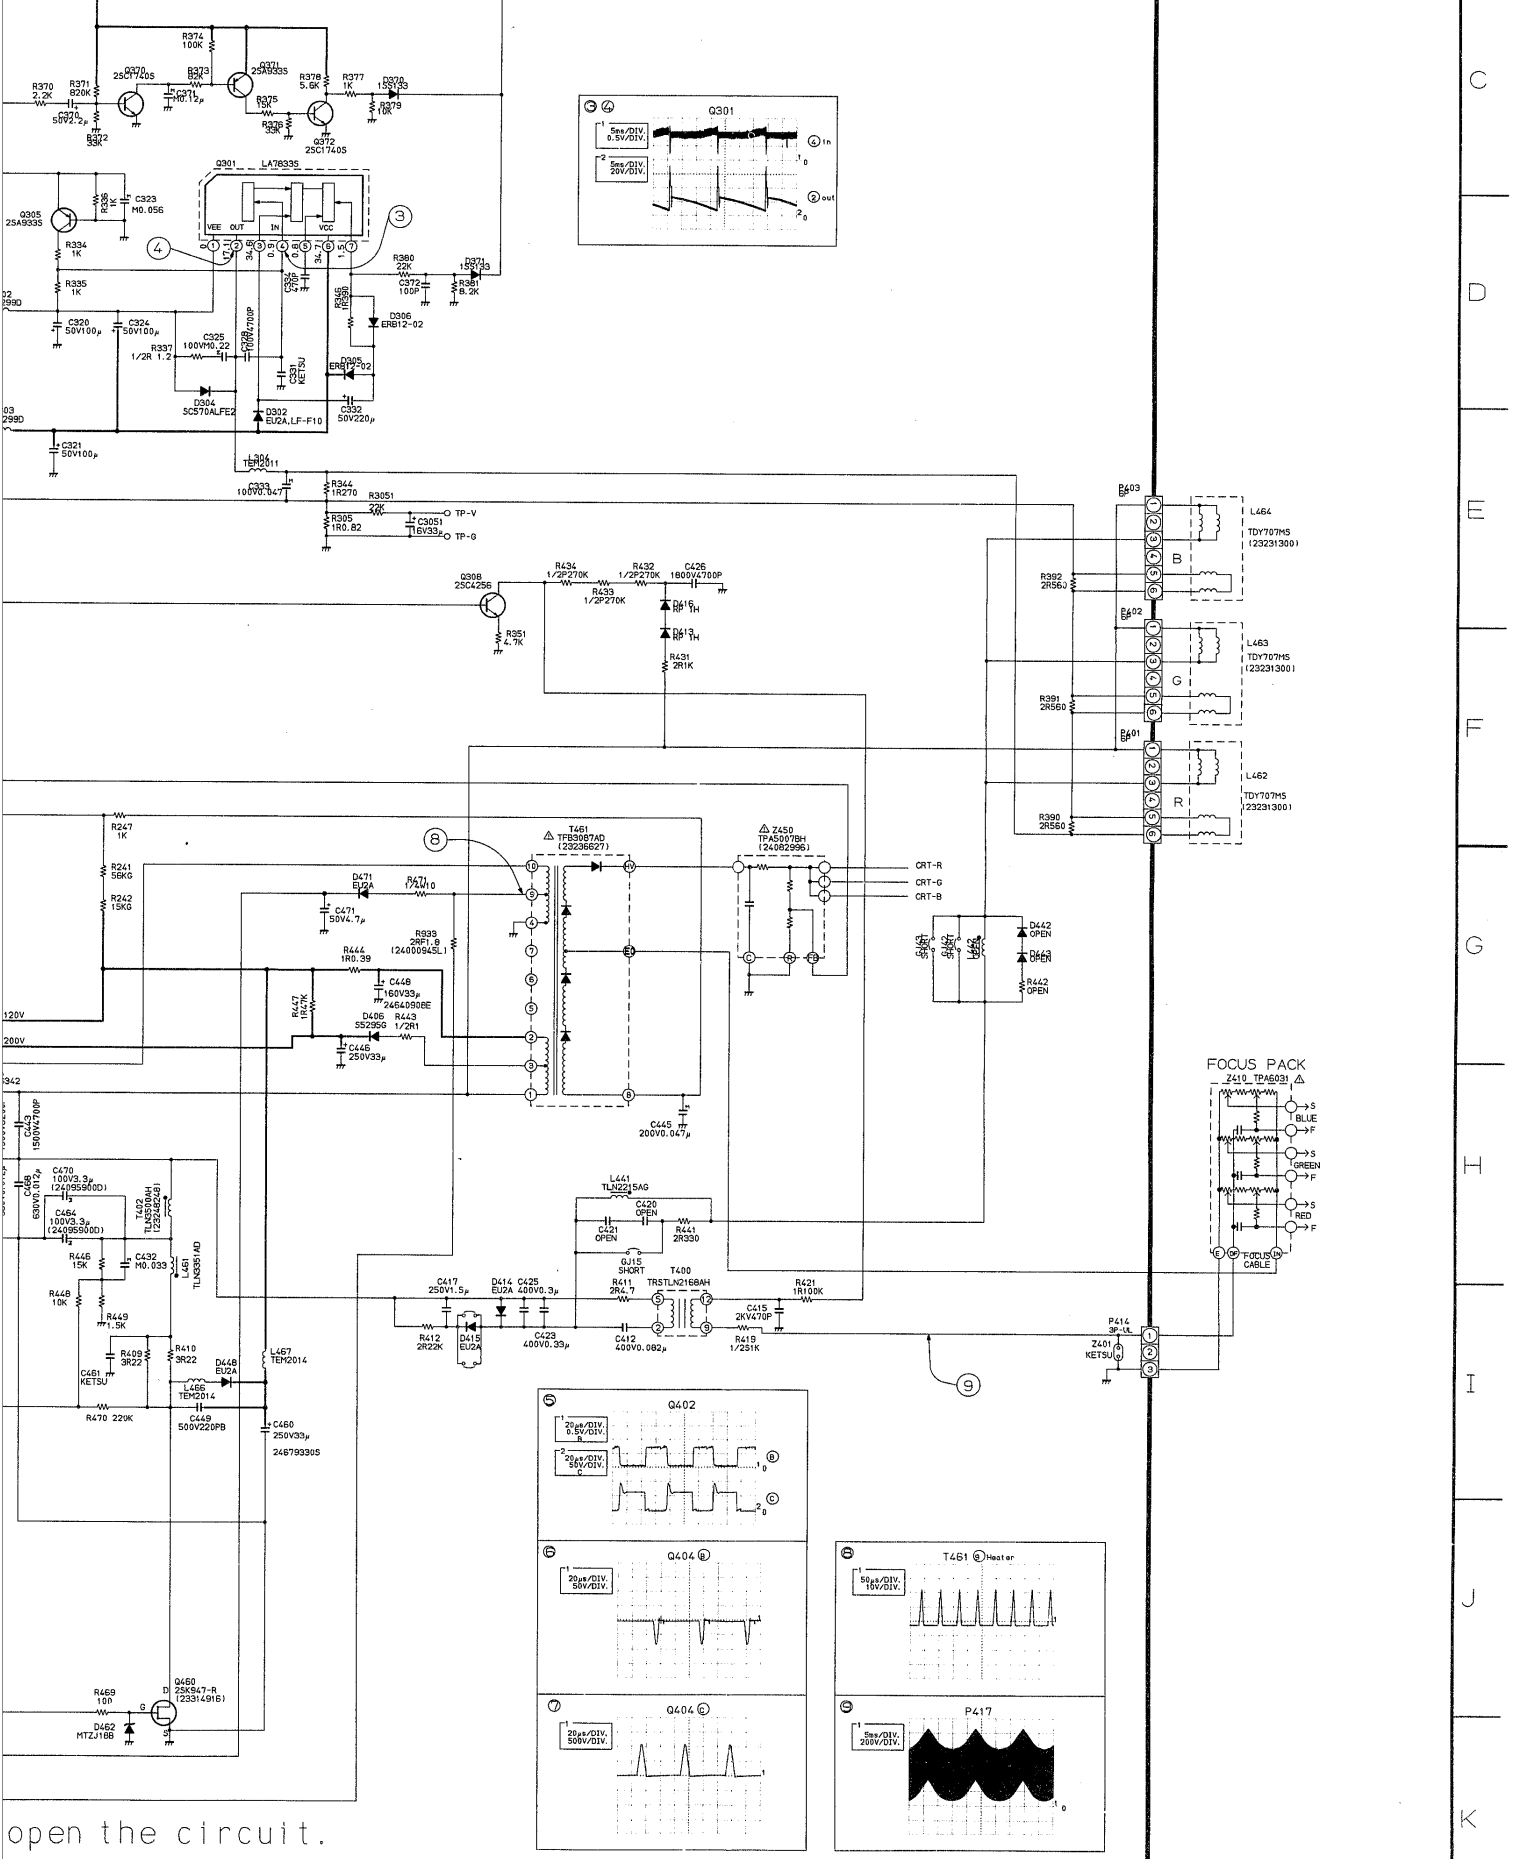

open the circuit.

C	61D9UXE	50D9UXE
C	61D9UXA	50D9UXA
C	61D9UXM	50D9UXM
	61D9UXH	50D9UXH

DEFLECTION
50D9U SERIES

PK3268

SCHEMATIC DIAGRAM **MODEL : 50D9UXE / 50D9UXH (3/7)**

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal. Voltages reading may vary ±20%.
2. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
3. Waveforms are taken using a standard colour bar signal.
4. Make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position. Set other controls for best picture.

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ● : Solder links.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

40200009

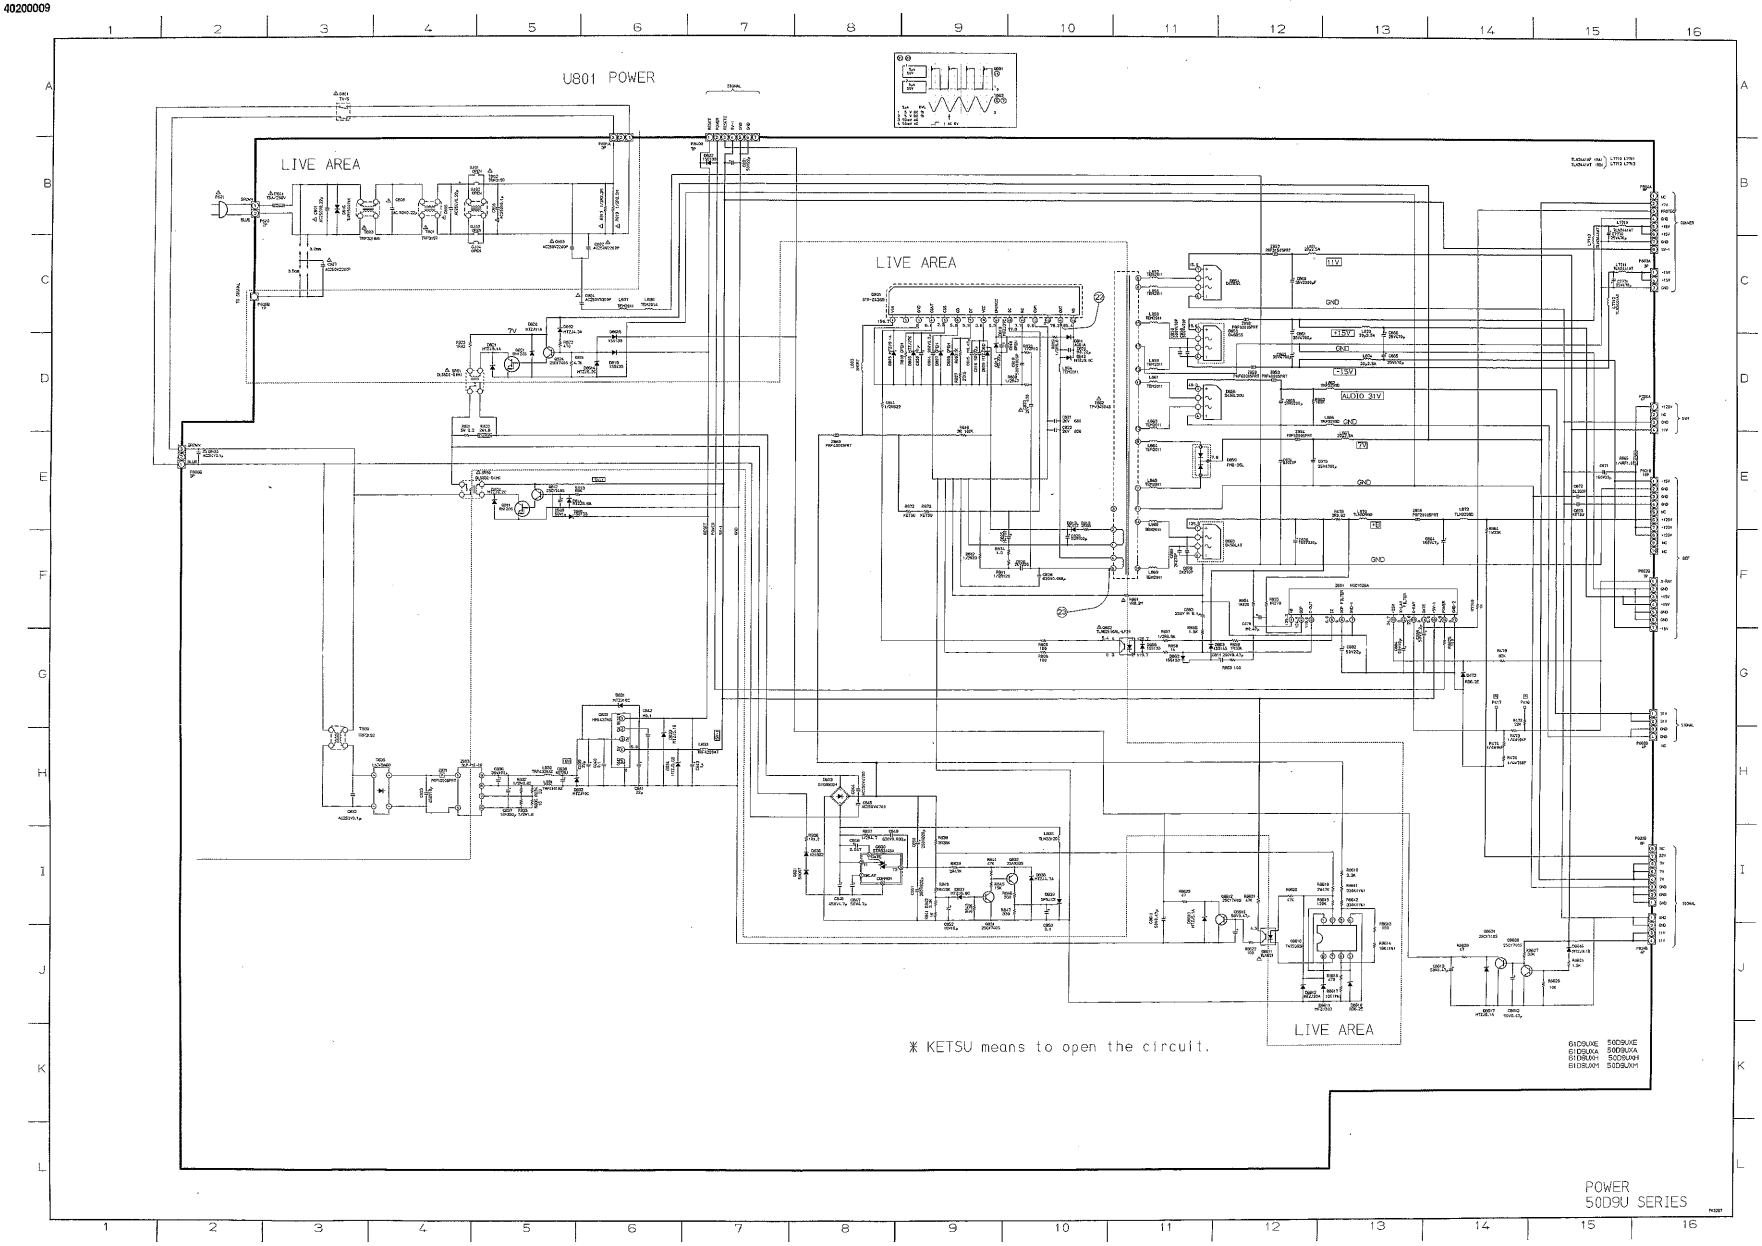

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (3/7)

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to ch
volts, colour bar signal. Voltages reading may va
2. All waveforms are taken using a wide band oscillos
3. Waveforms are taken using a standard colour bar
4. Make sure that CONTRAST and COLOUR contr
BRIGHTNESS control is almost in maximum positi
picture.

40200009

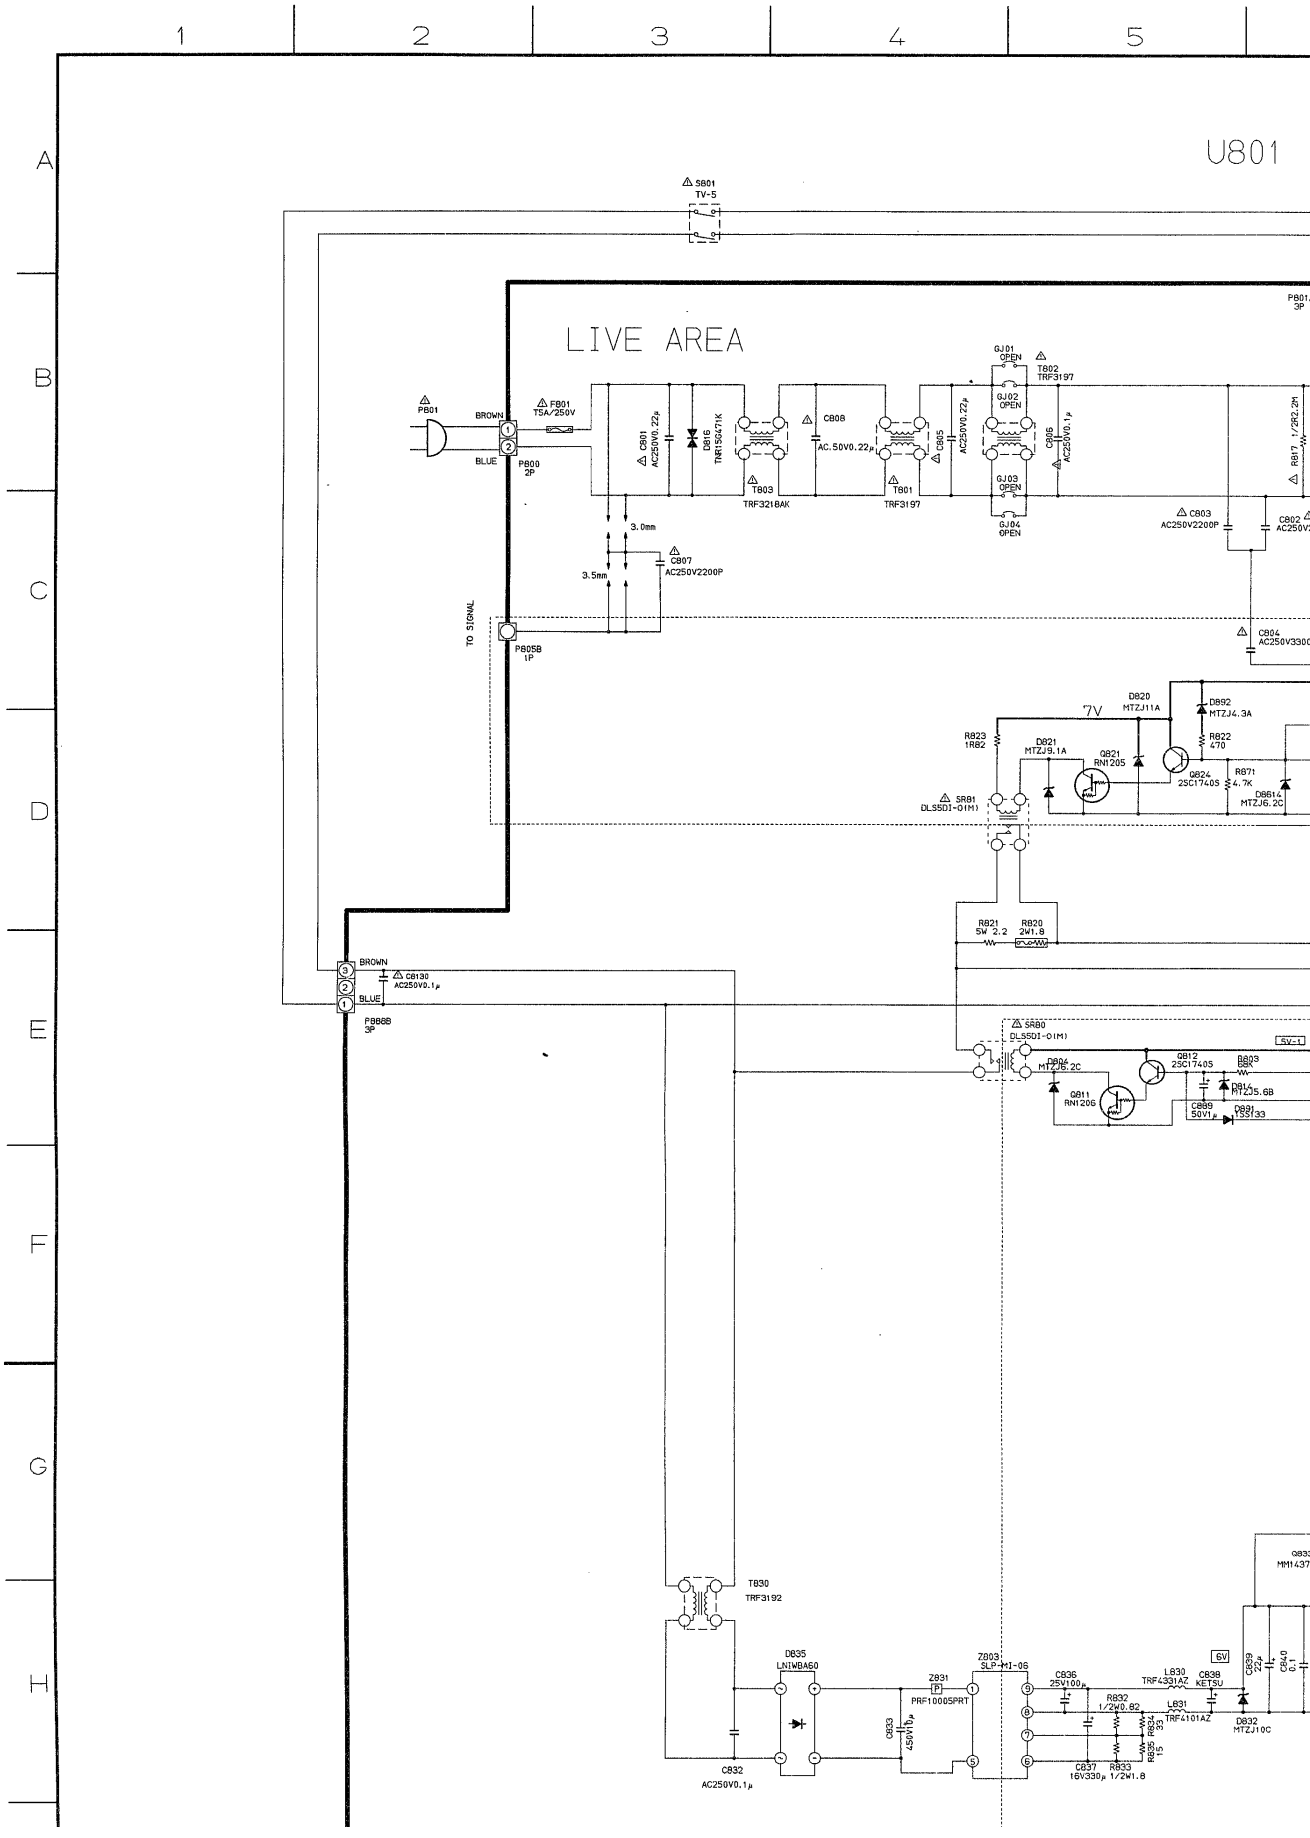

TAGES AND WAVEFORMS

VM from point shown to chassis ground, line voltage 220
l. Voltages reading may vary ±20%.
n using a wide band oscilloscope and a low capacity probe.
using a standard colour bar signal.
TRAST and COLOUR controls are in mid position and
s almost in maximum position. Set other controls for best

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⬬ : Solder links.

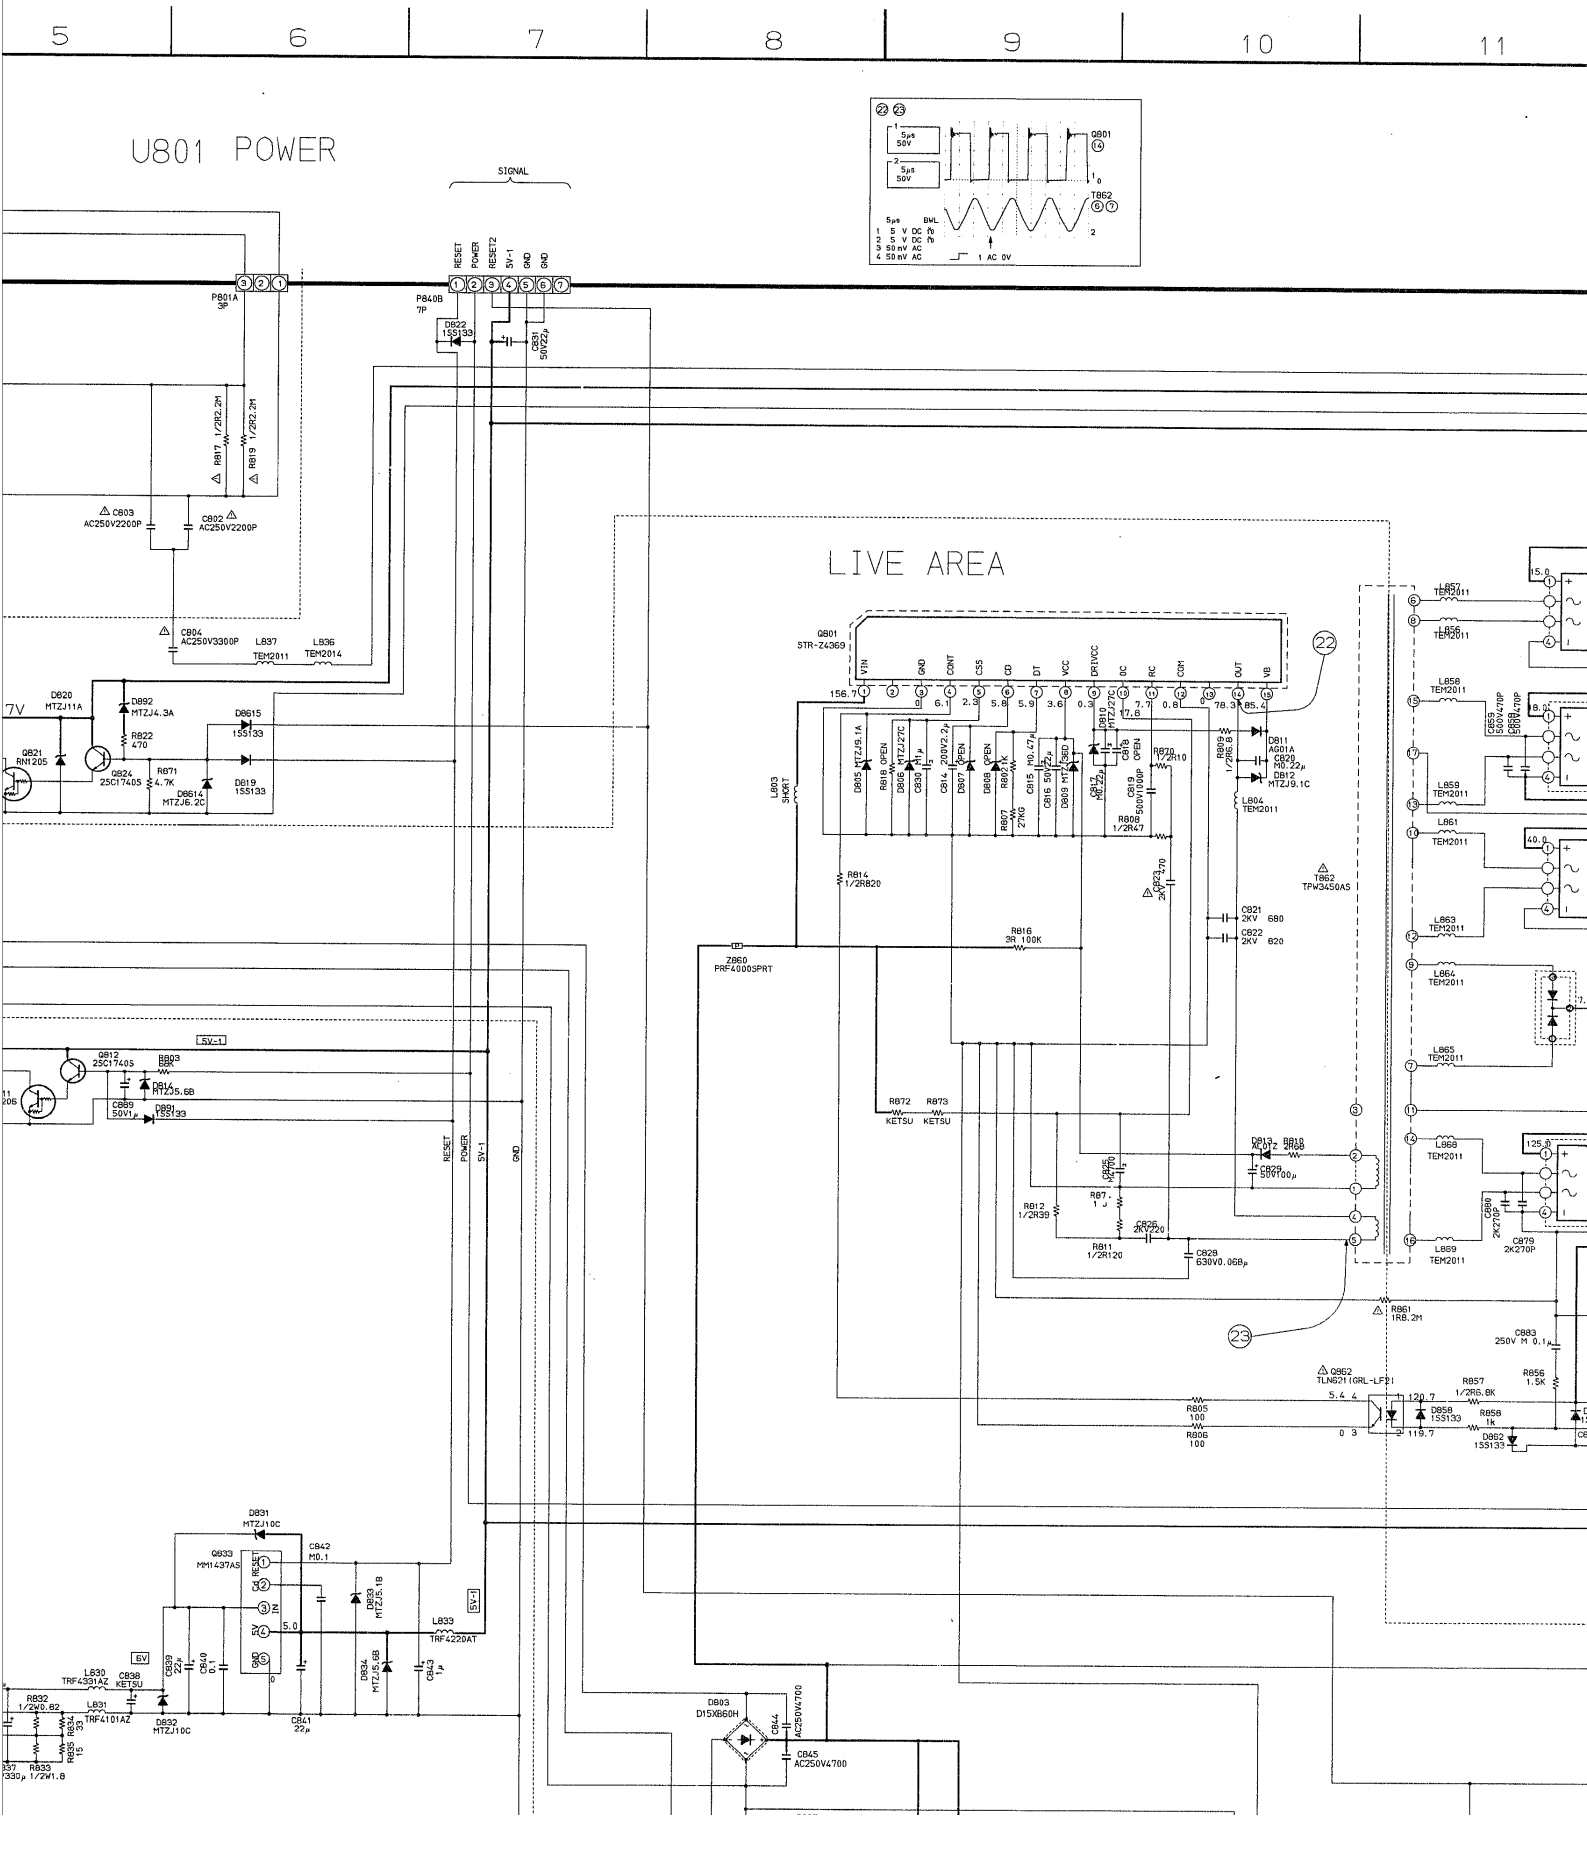

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

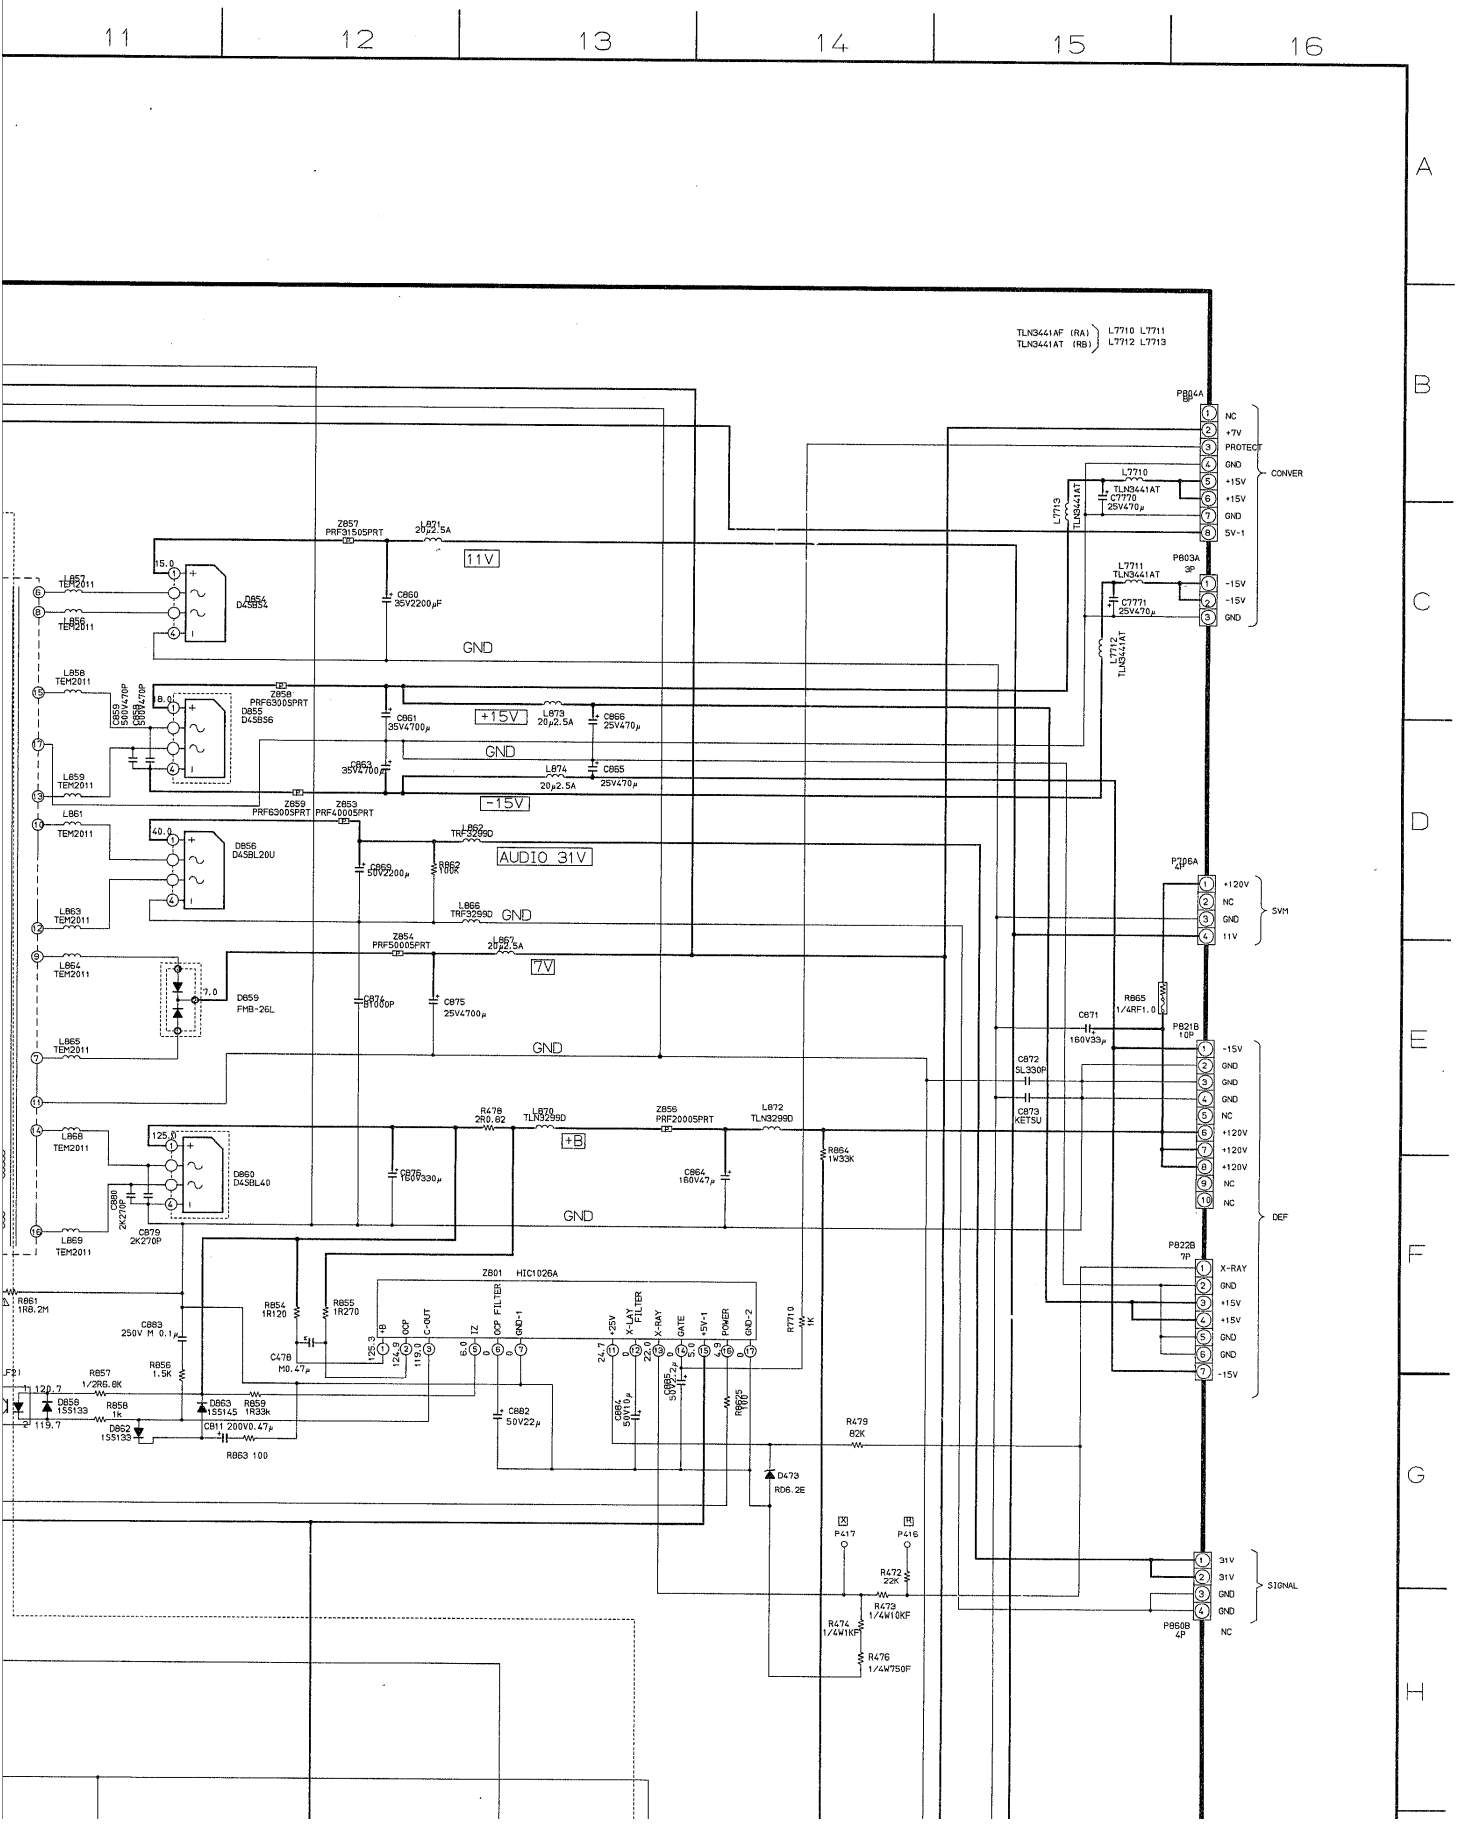

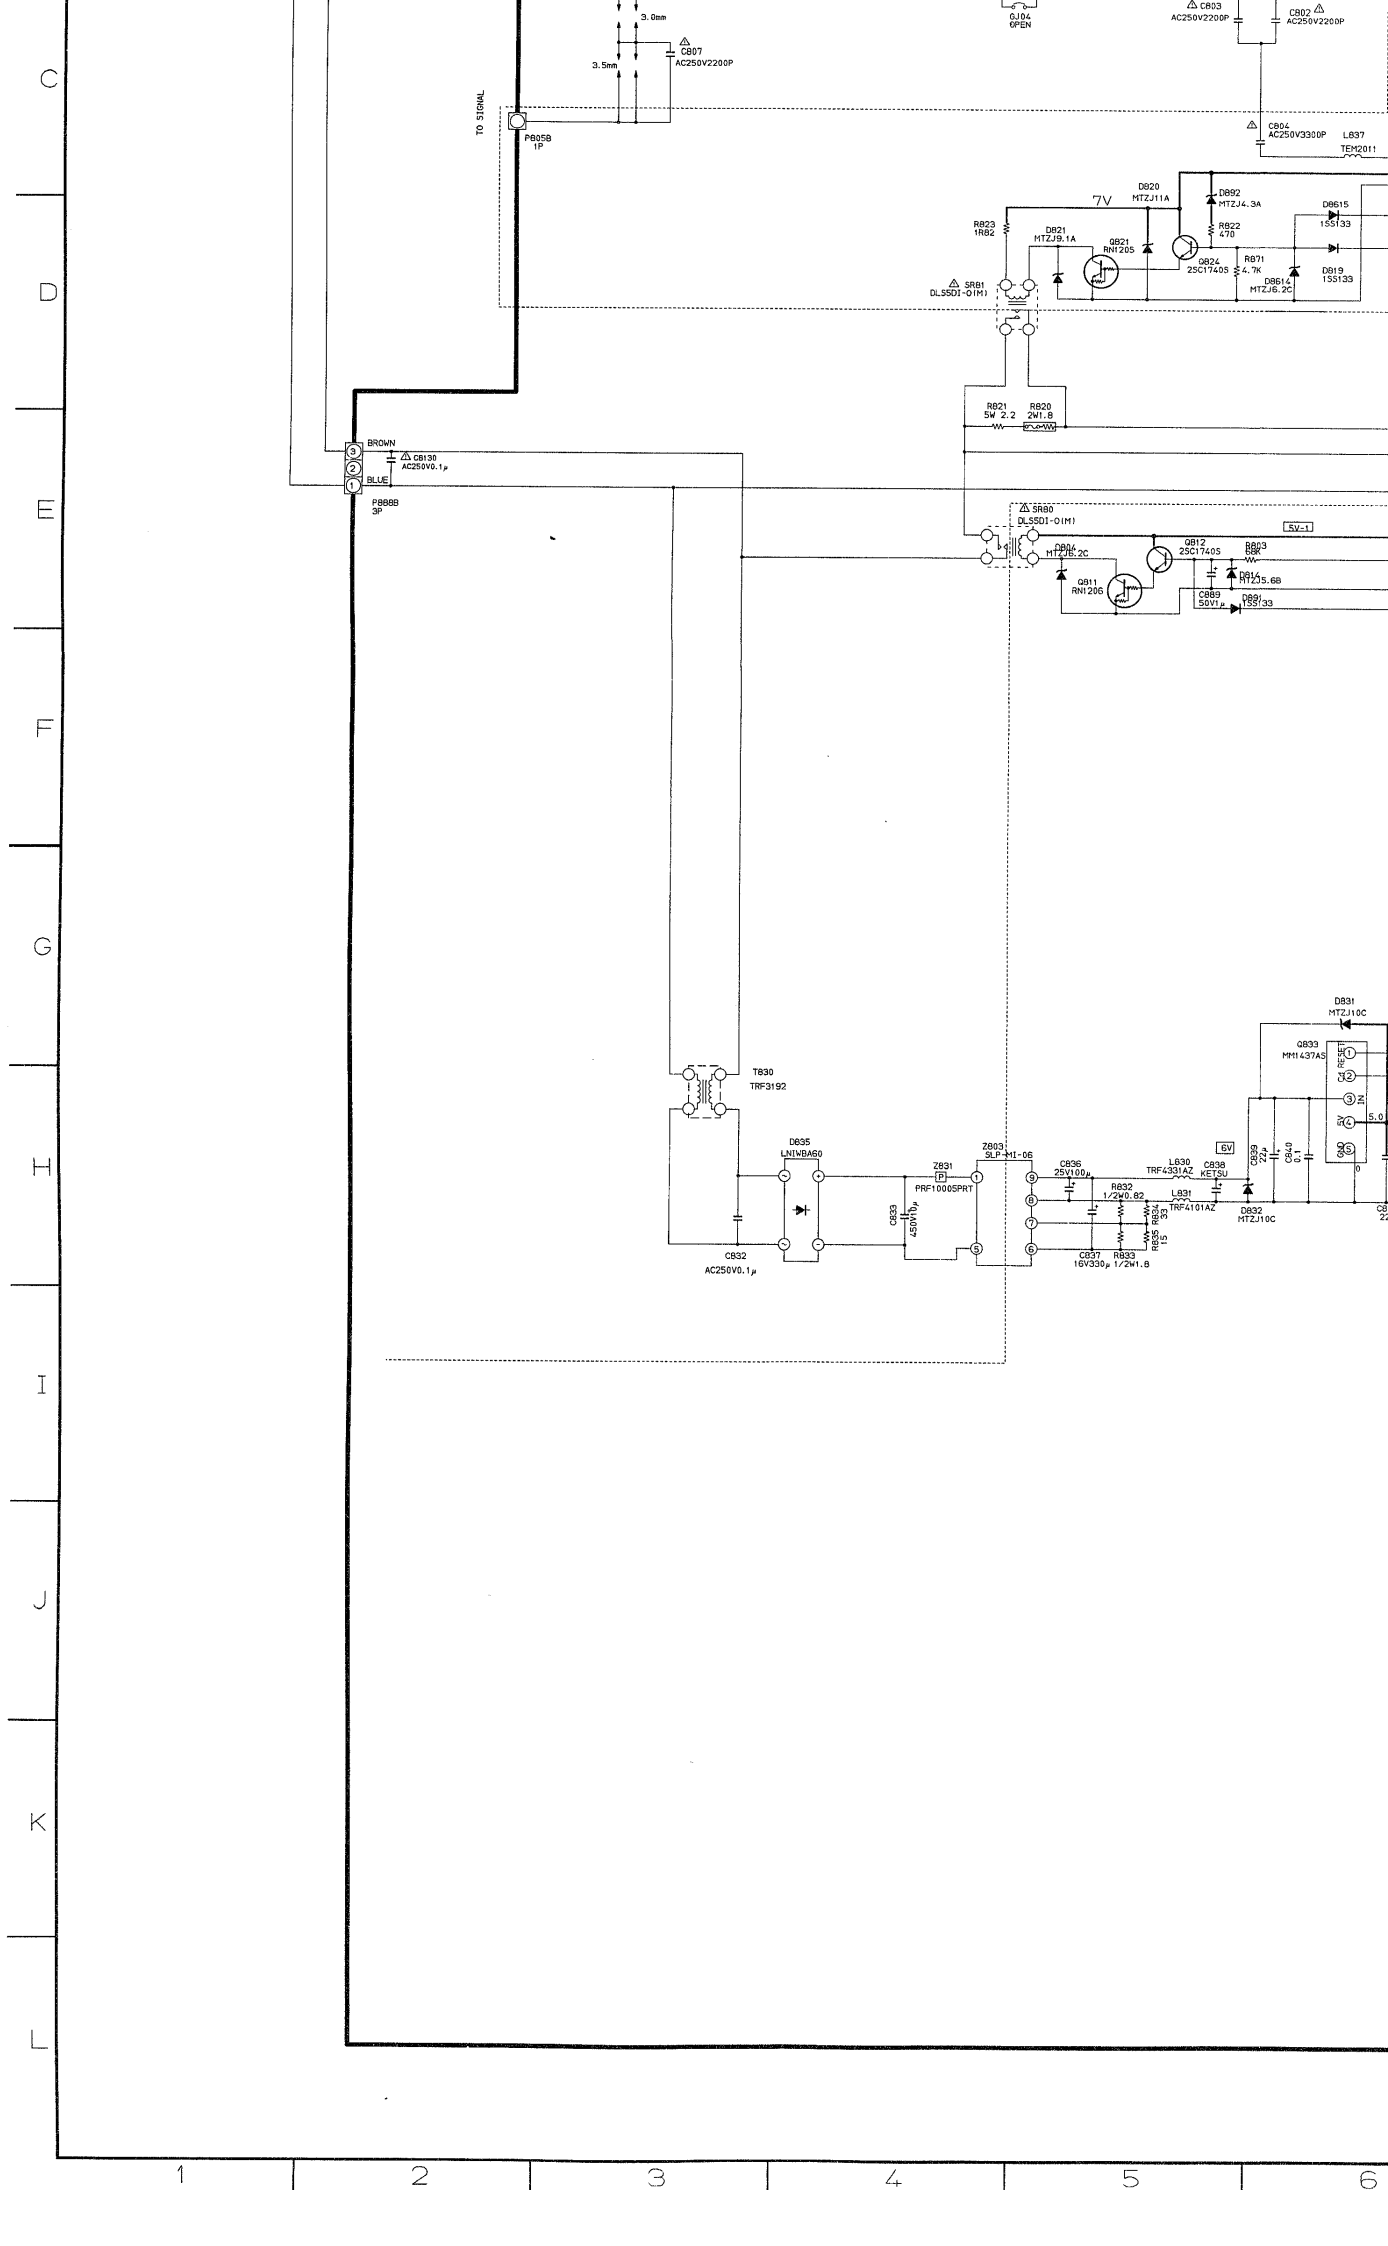
C
D
E
F
G
H
I
J
K
1
2
3
4
5
6
3.0mm
3.5mm
C807
AC250V2200P
TO SIGNAL
P605B
1P
C803
AC250V2200P
GJ04
6PEN
C802
AC250V2200P
C804
AC250V3300P
L837
TEM2011
D820
MTZJ11A
7V
D892
MTZJ4.3A
D615
1SS133
R823
1R82
D821
MTZJ9.1A
Q821
RN1205
R822
470
Q824
2SC1740S
R871
4.7K
D614
MTZJ6.2C
D619
1SS133
SRB1
DL55D1-01M1
R821
5W 2.2
R820
2W1.8
BROWN
BLUE
C8130
AC250V0.1μ
P888B
3P
SRB0
DL55D1-01M1
5V-1
Q814
MTZJ5.2C
Q812
2SC1740S
R803
680
Q811
RN1205
R814
MTZJ5.6B
C889
50V1μ
D891
1SS133
T830
TRF3192
D835
LN1WBA60
Z831
PRF1000SPRT
C833
450V10μ
C832
AC250V0.1μ
Z803
SLP-M1-06
C836
25V100μ
R832
1/2W0.82
R834
33
R835
15
C837
16V330μ
R833
1/2W1.8
L830
TRF4331AZ
C838
KE75U
6V
L831
TRF4101AZ
D832
MTZJ10C
C839
22μ
C840
0.1μ
D831
MTZJ10C
Q833
MM1437AS
RESET
CK
IN
5V
GND
5.0

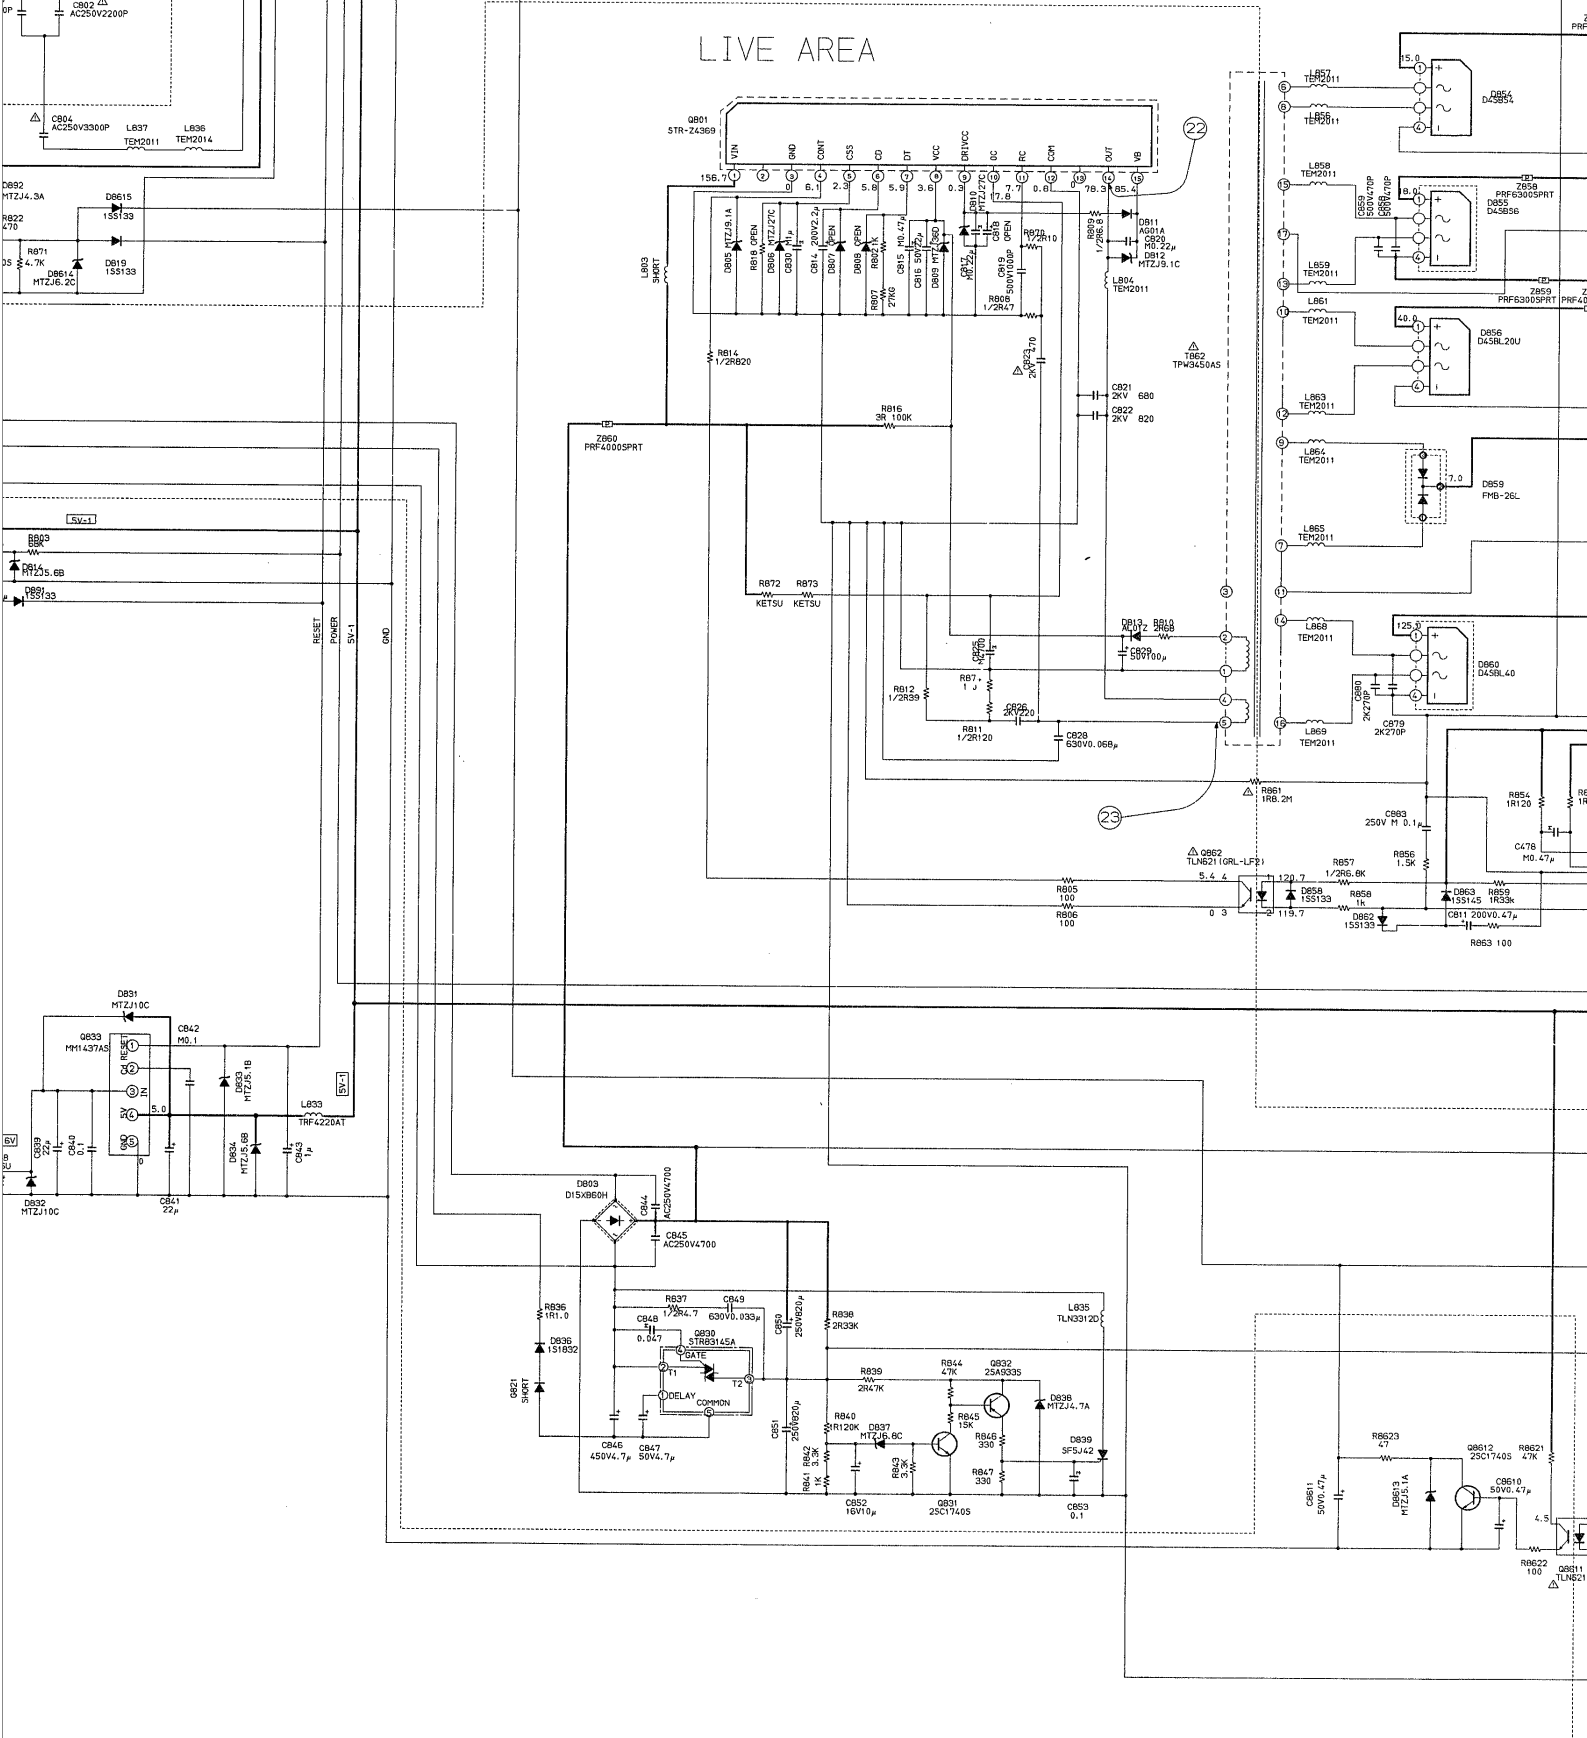

* KETSU means to open the circuit.

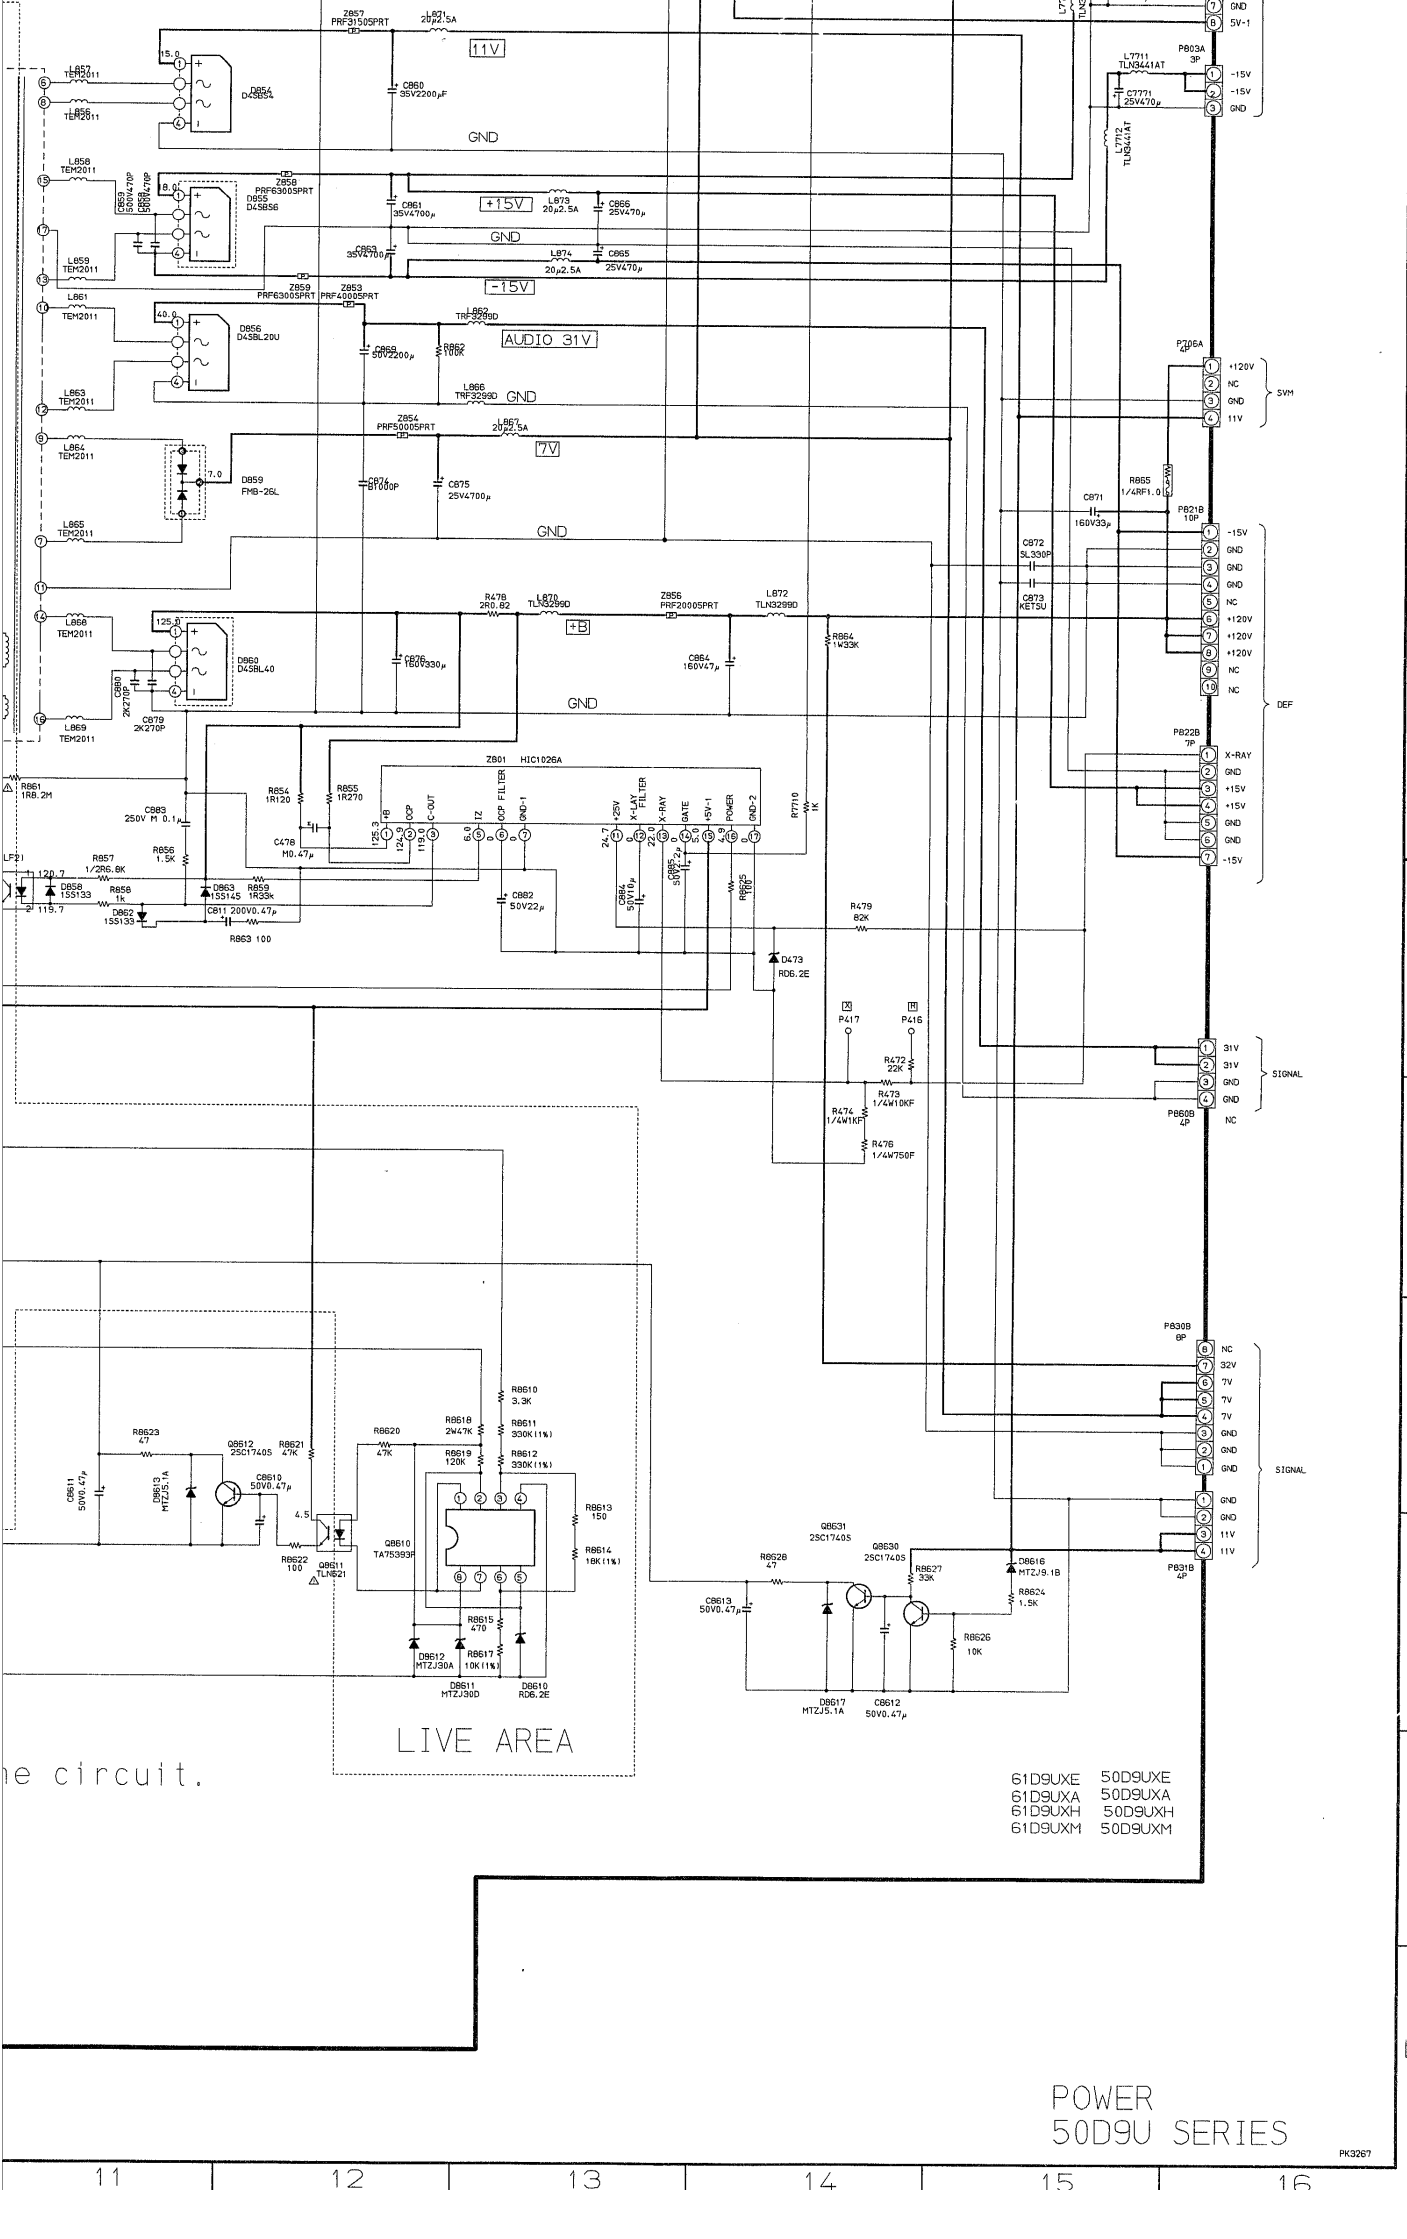
11V
GND
+15V
-15V
AUDIO 31V
7V
+B
SVM
DEF
SIGNAL
SIGNAL
LIVE AREA
61D9UXE 50D9UXE
61D9UXA 50D9UXA
61D9UXH 50D9UXH
61D9UXM 50D9UXM
POWER
50D9U SERIES
PK3267

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (4/7)
50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the pa...s list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal. Voltages reading may vary ±20%.
2. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
3. Waveforms are taken using a standard colour bar signal.
4. Make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position. Set other controls for best picture.

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ● : Solder links.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

40200009

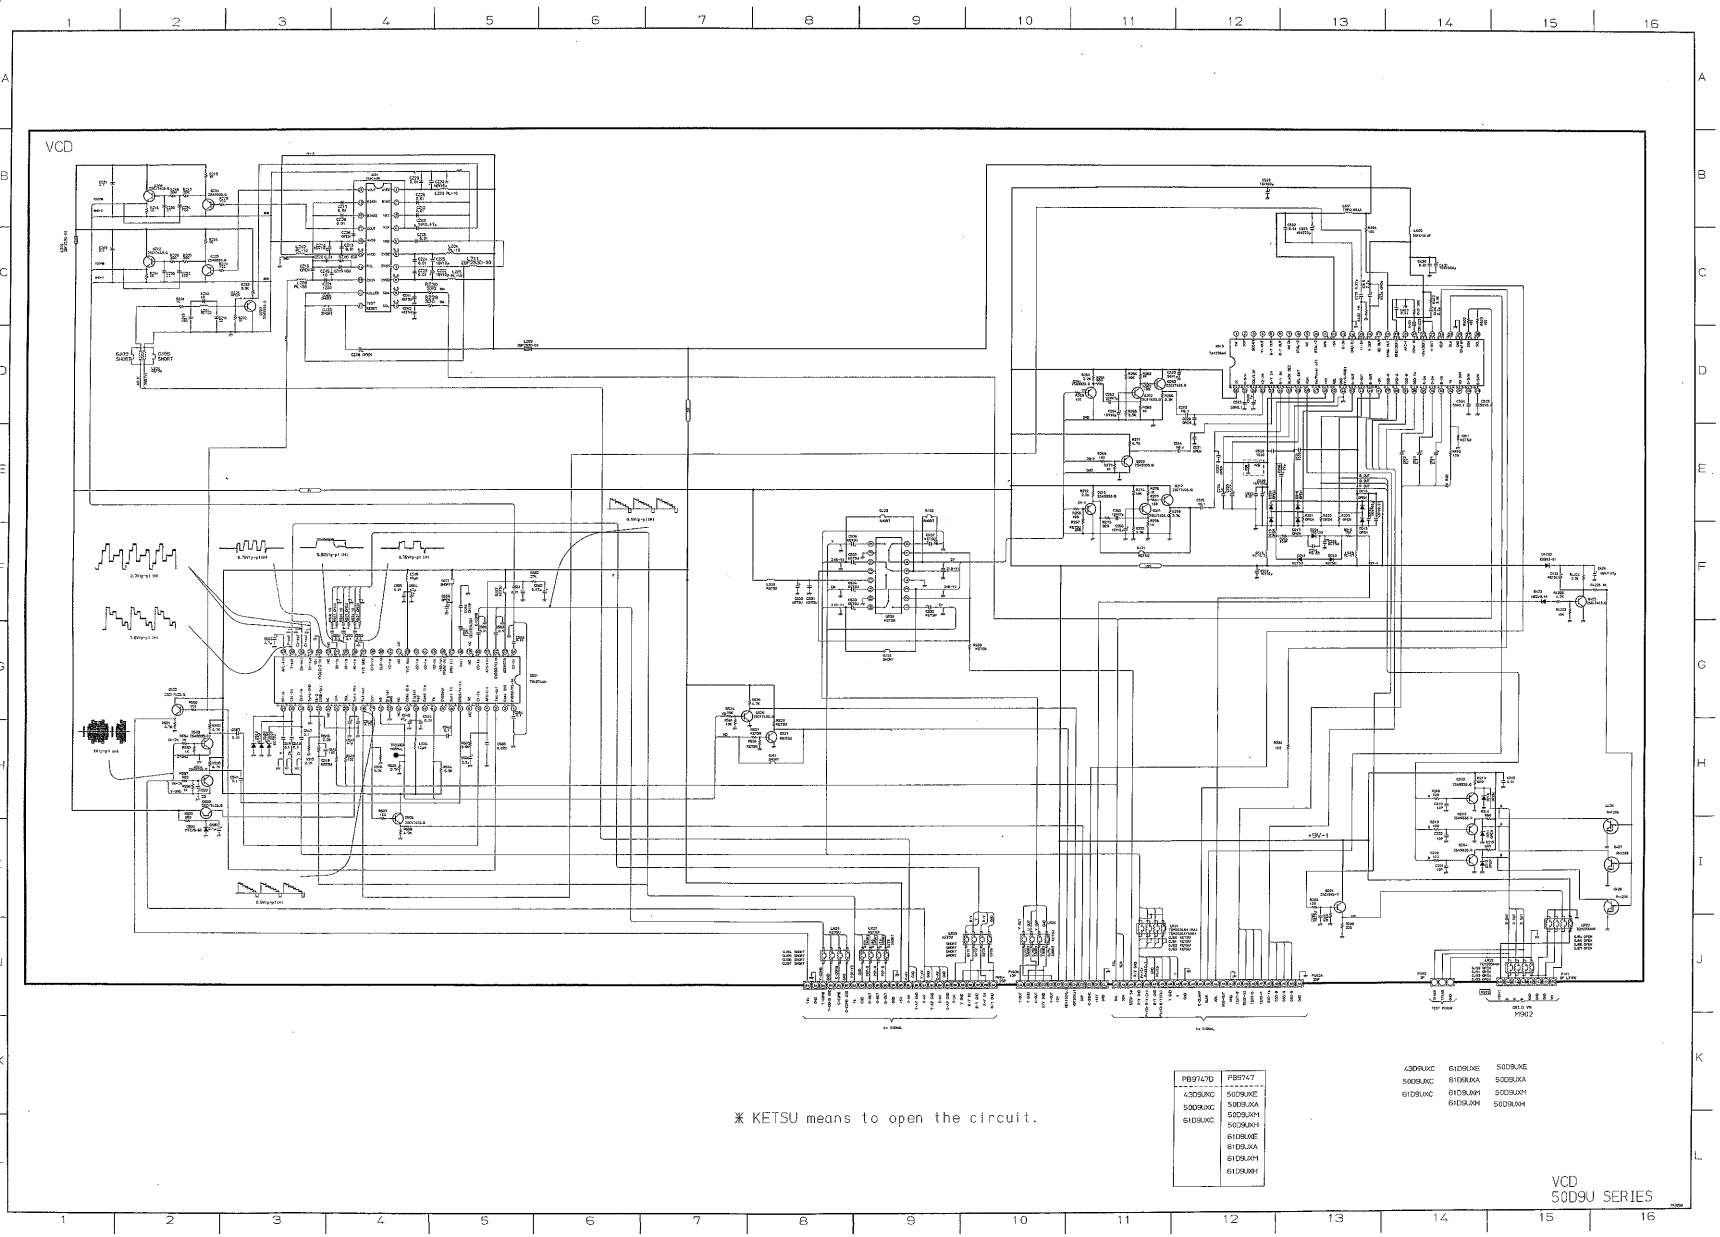

PB9747D	PB9747
43D9UXC	50D9UXE
50D9UXC	50D9UXA
61D9UXC	50D9UXM
	50D9UXH
	61D9UXE
	61D9UXA
	61D9UXM
	61D9UXH

43D9UXC	61D9UXE	50D9UXE
50D9UXC	61D9UXA	50D9UXA
61D9UXC	61D9UXM	50D9UXM
	61D9UXH	50D9UXH

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (4/7)

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORM

1. Voltages read with VTVM from point shown to volts, colour bar signal. Voltages reading may
2. All waveforms are taken using a wide band oscill
3. Waveforms are taken using a standard colour b
4. Make sure that CONTRAST and COLOUR co BRIGHTNESS control is almost in maximum pos picture.

40200009

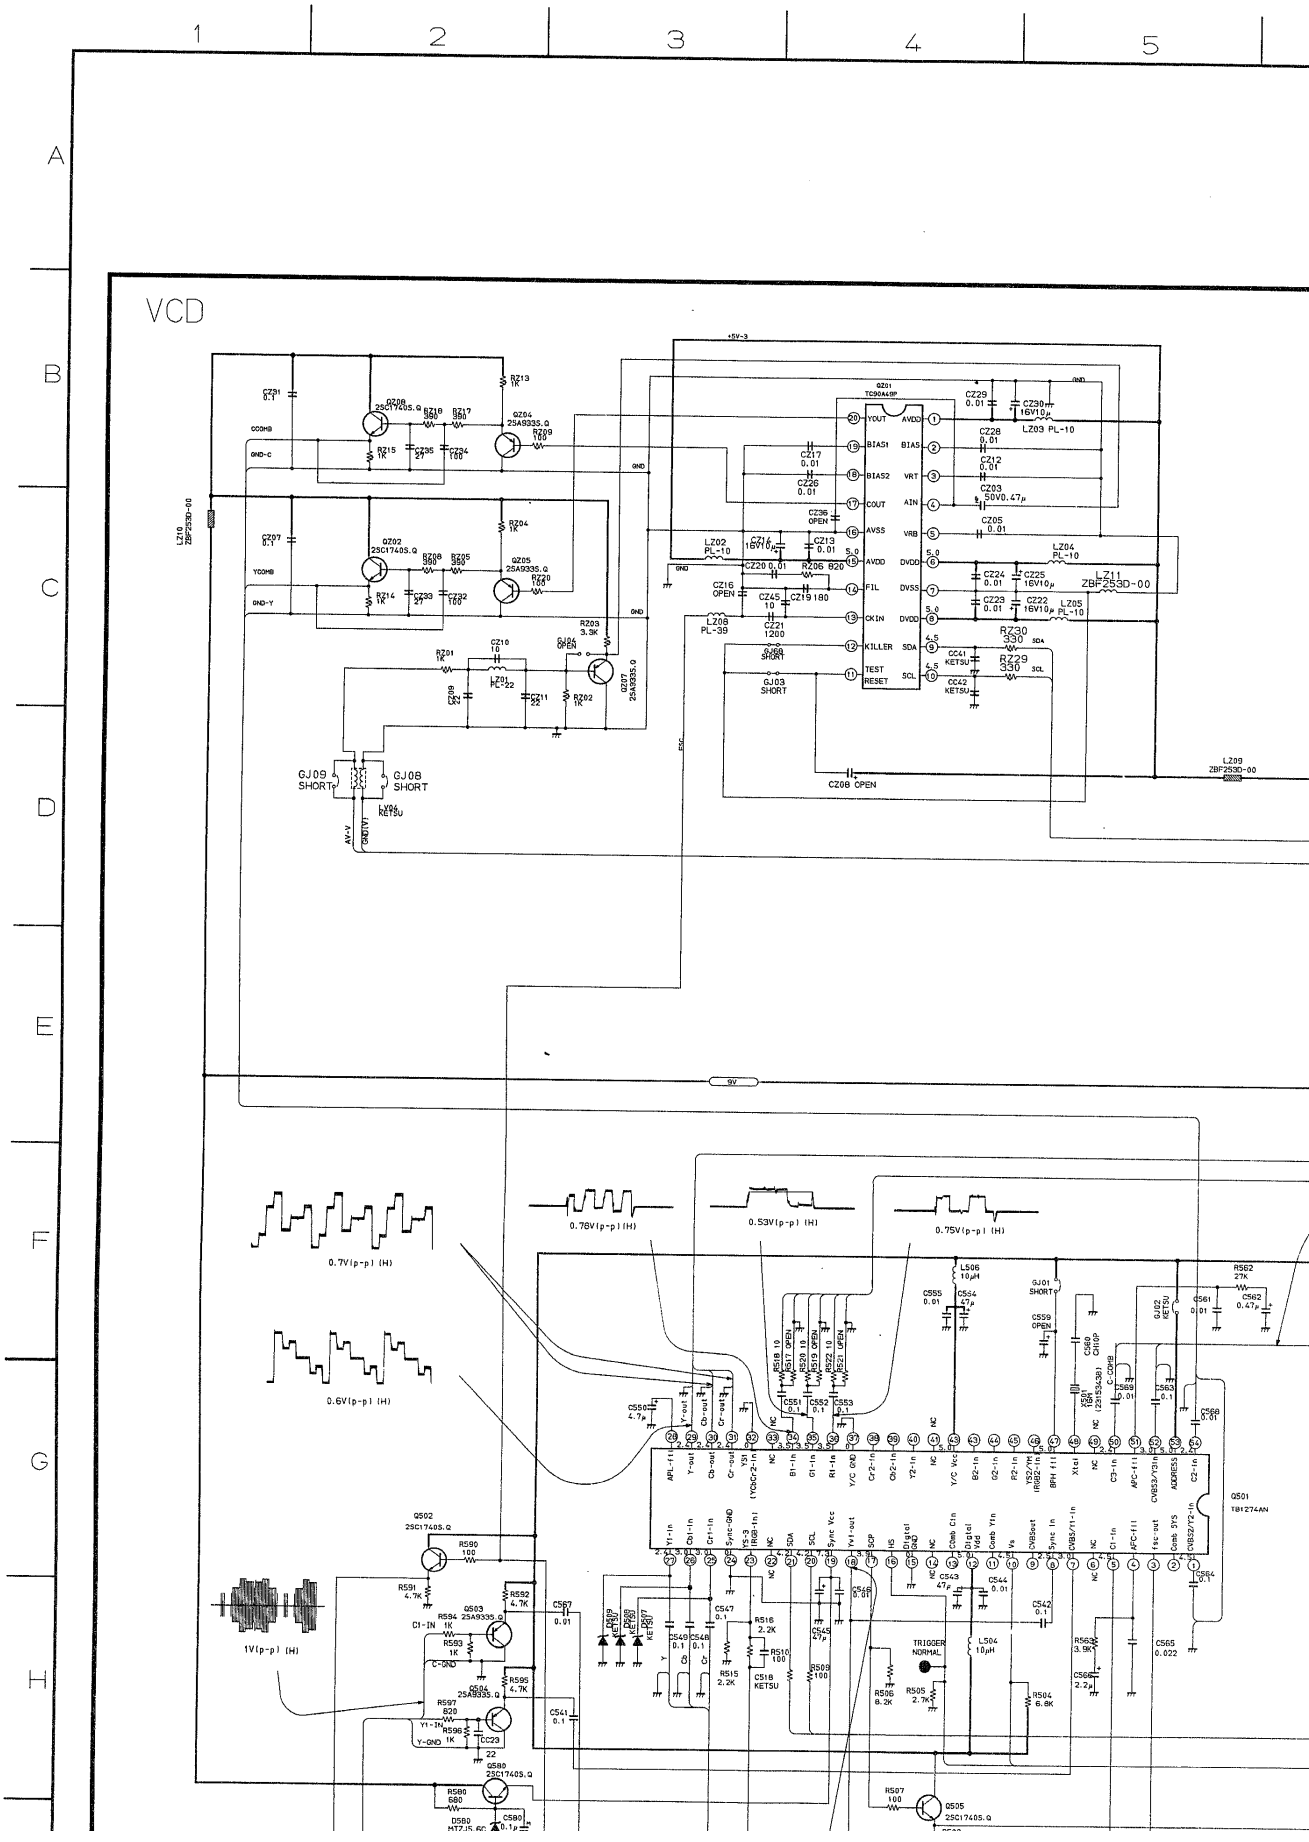

D WAVEFORMS

point shown to chassis ground, line voltage 220
s reading may vary ±20%.
vide band oscilloscope and a low capacity probe.
andard colour bar signal.
d COLOUR controls are in mid position and
n maximum position. Set other controls for best

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⬬ : Solder links.

EXPRE

VALUE

1. Resist
2. Unless
   sed in
3. Unless
   sed in

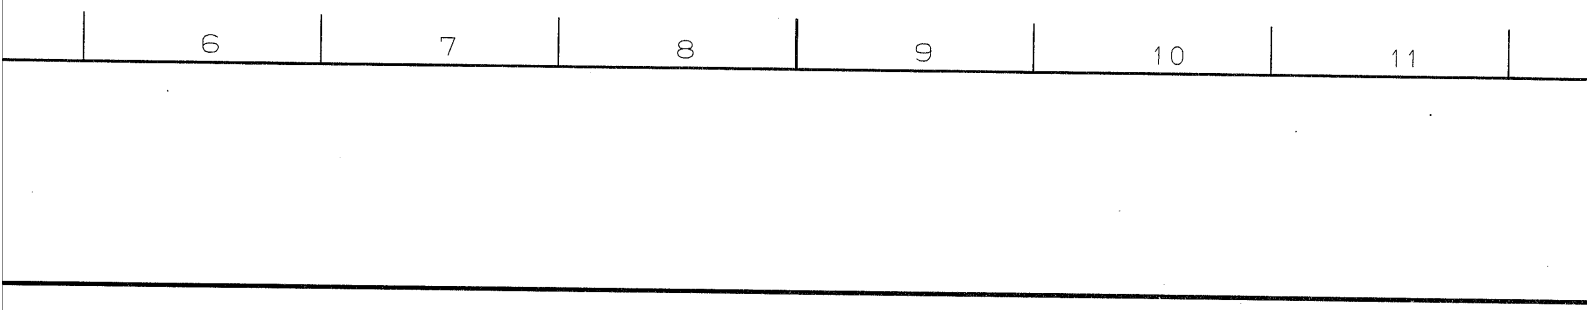

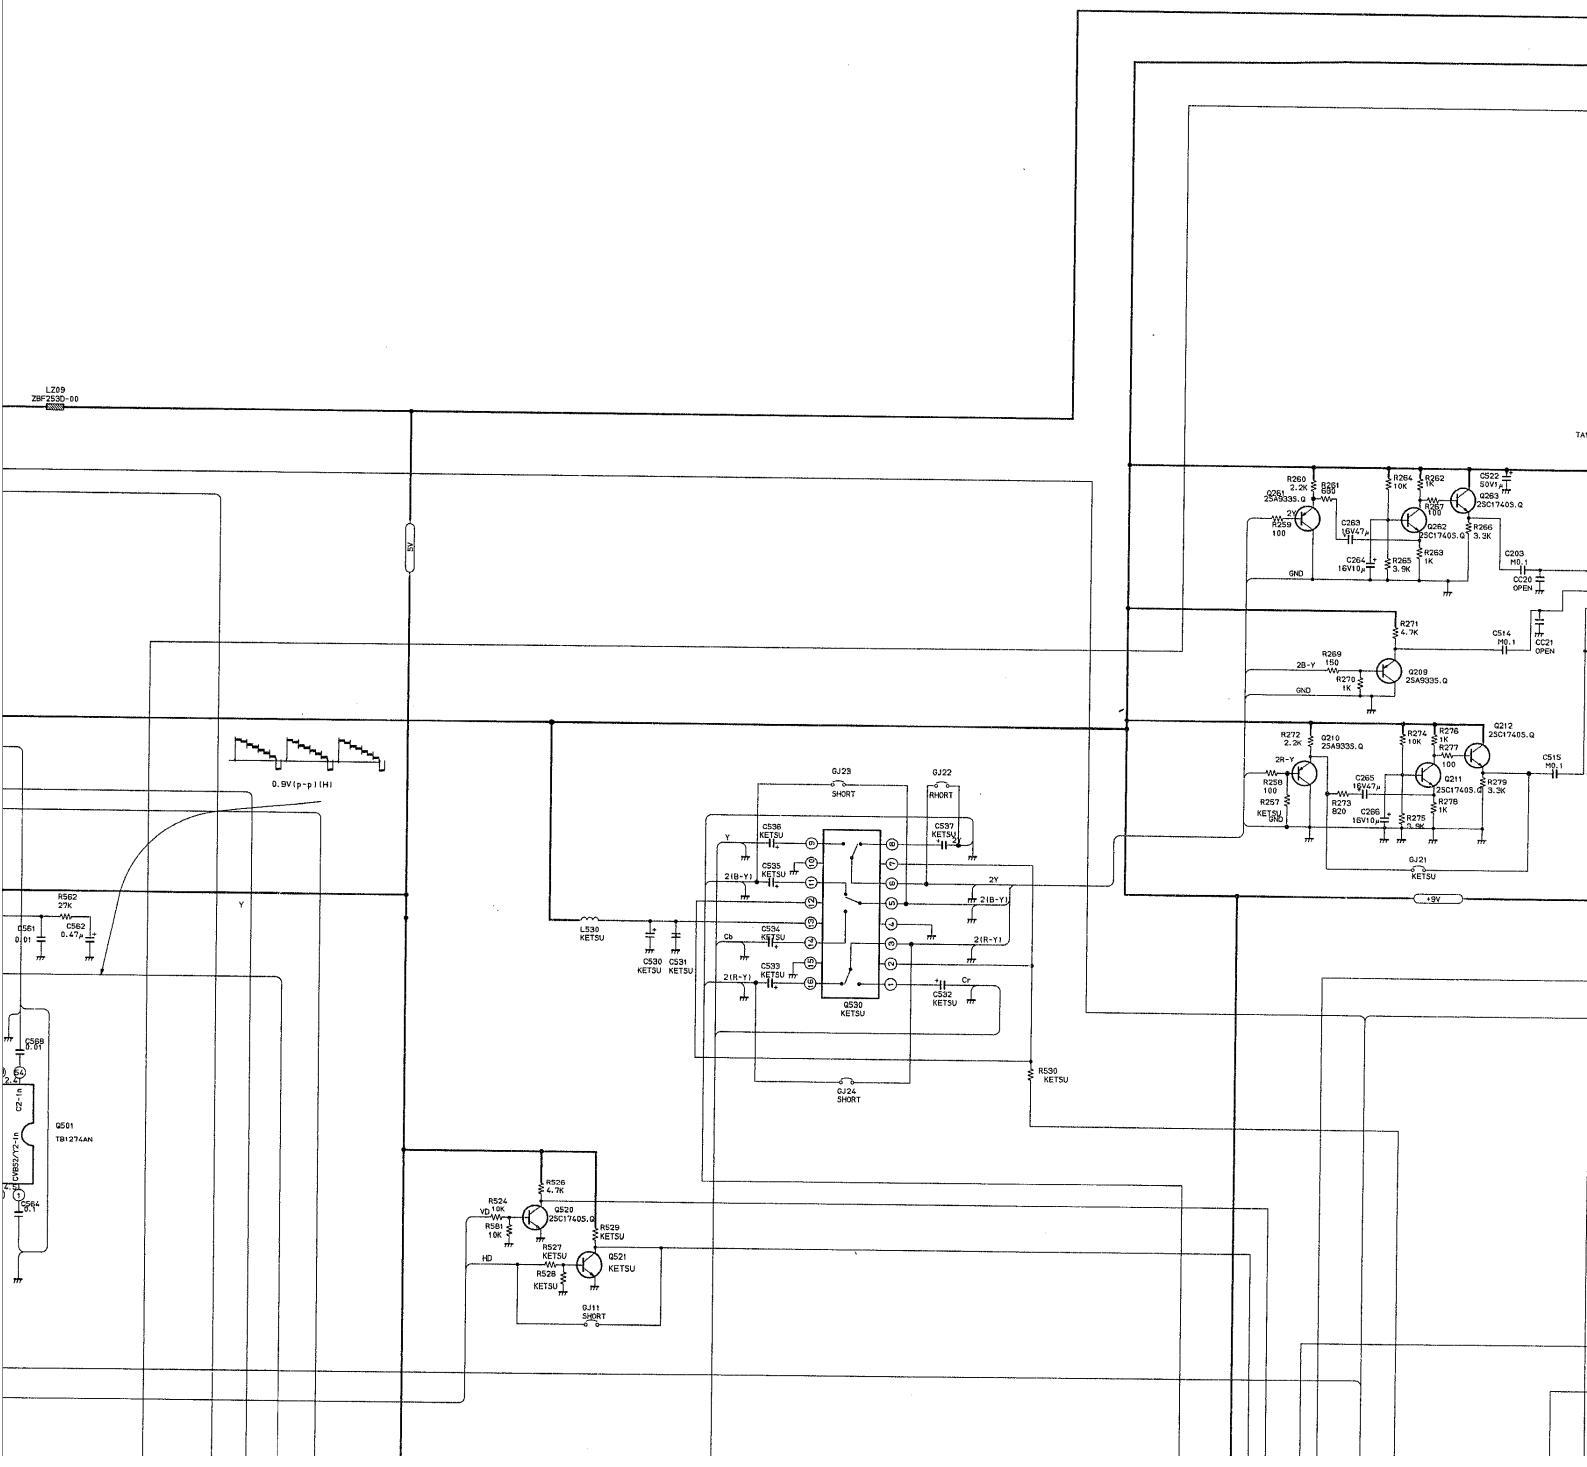

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

c dia-

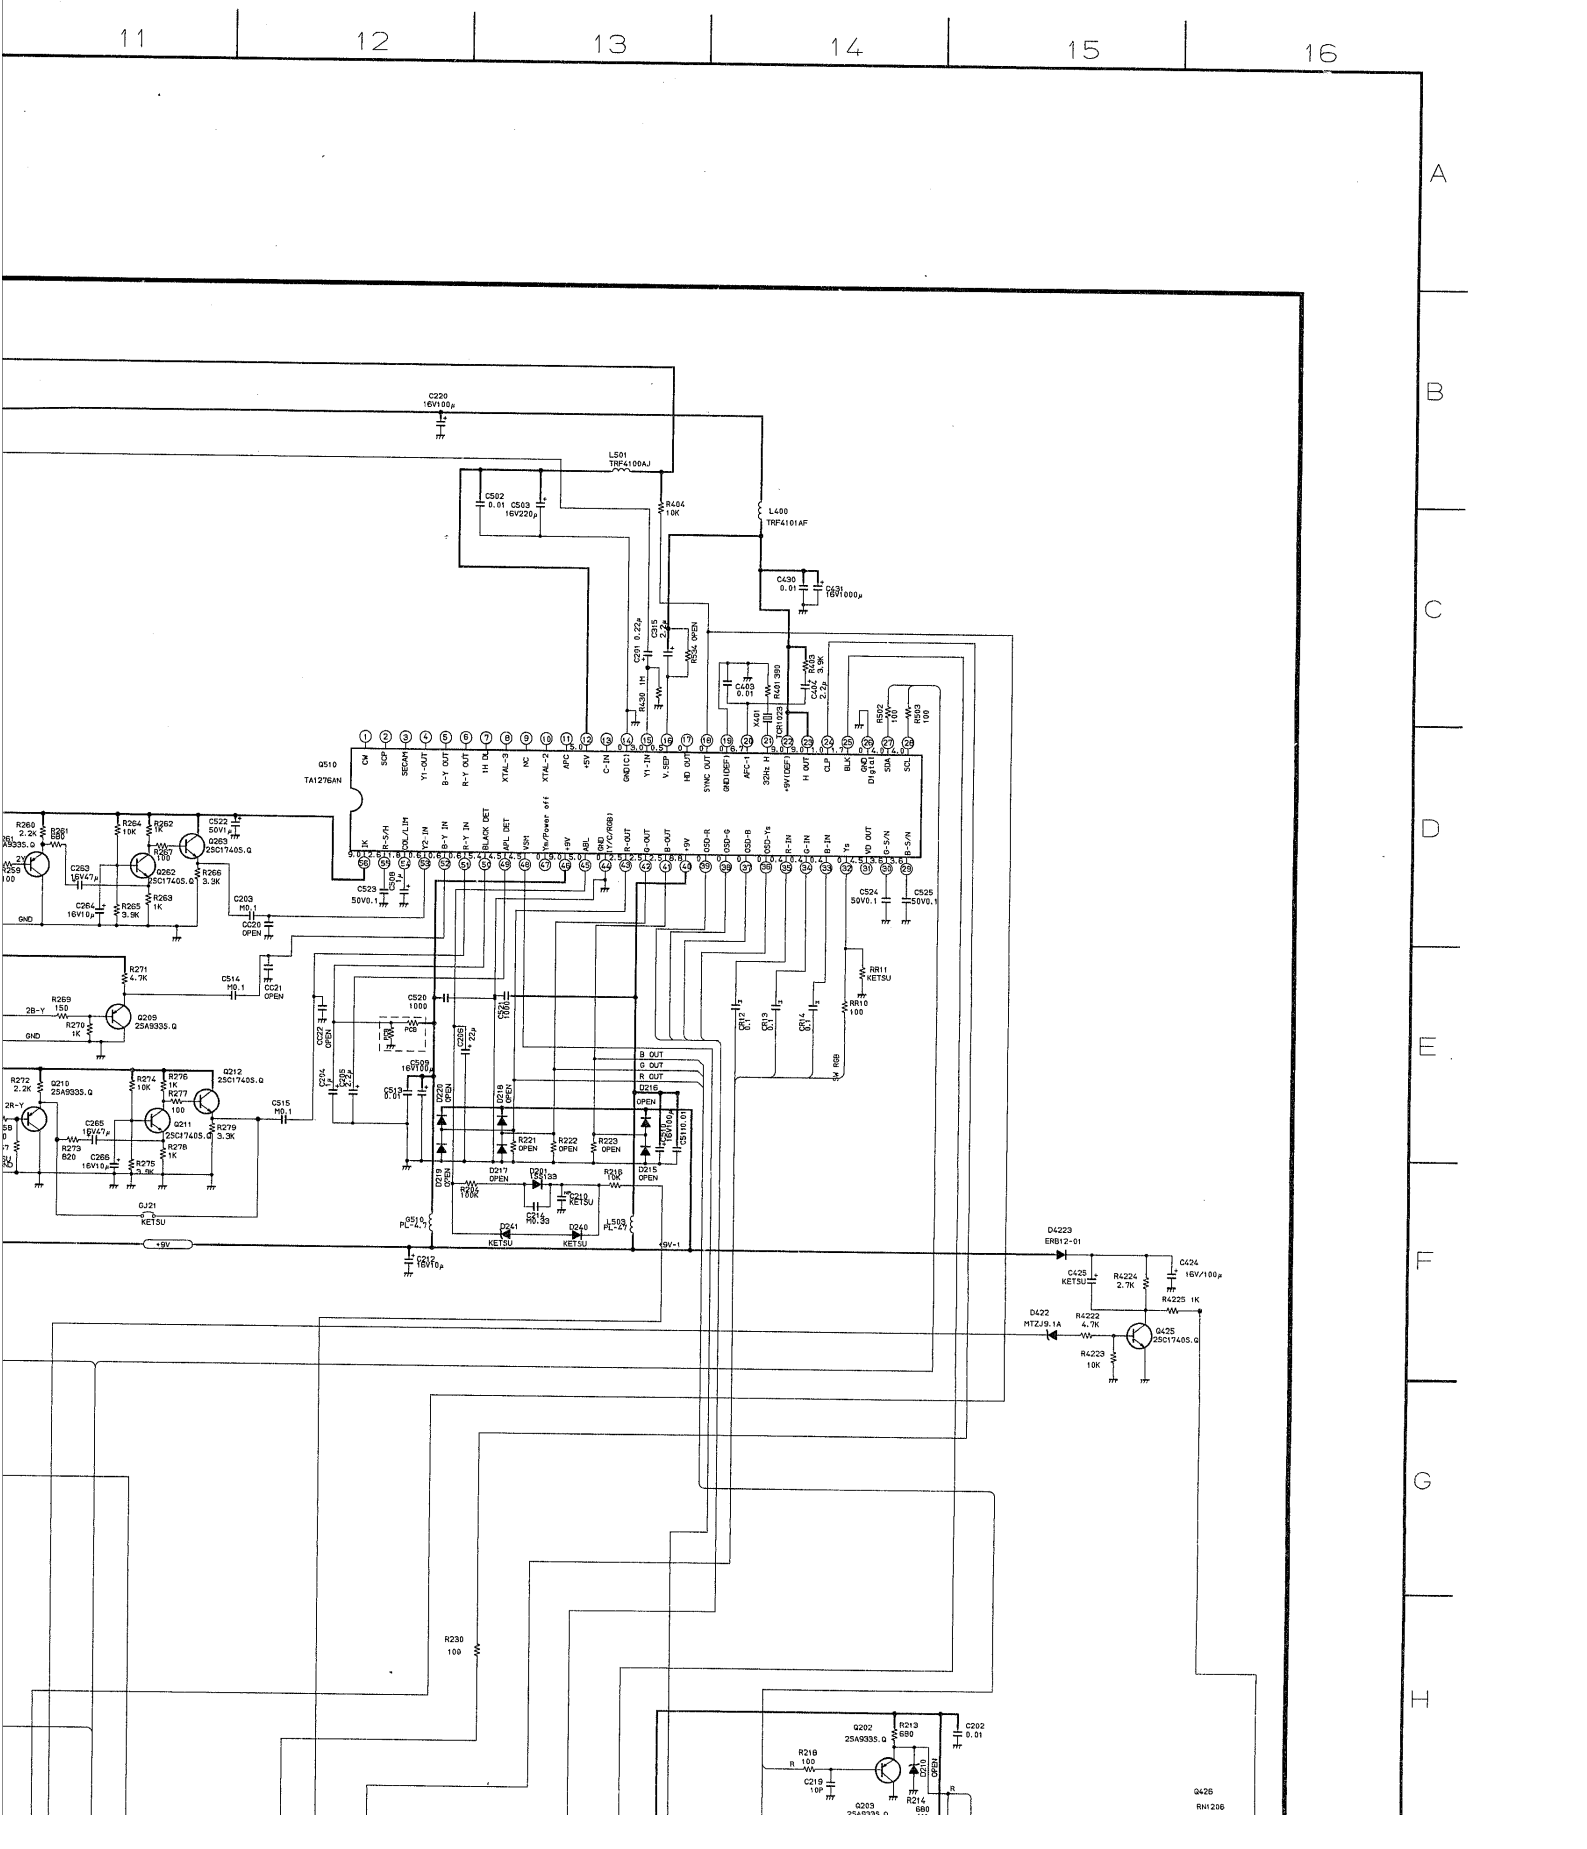

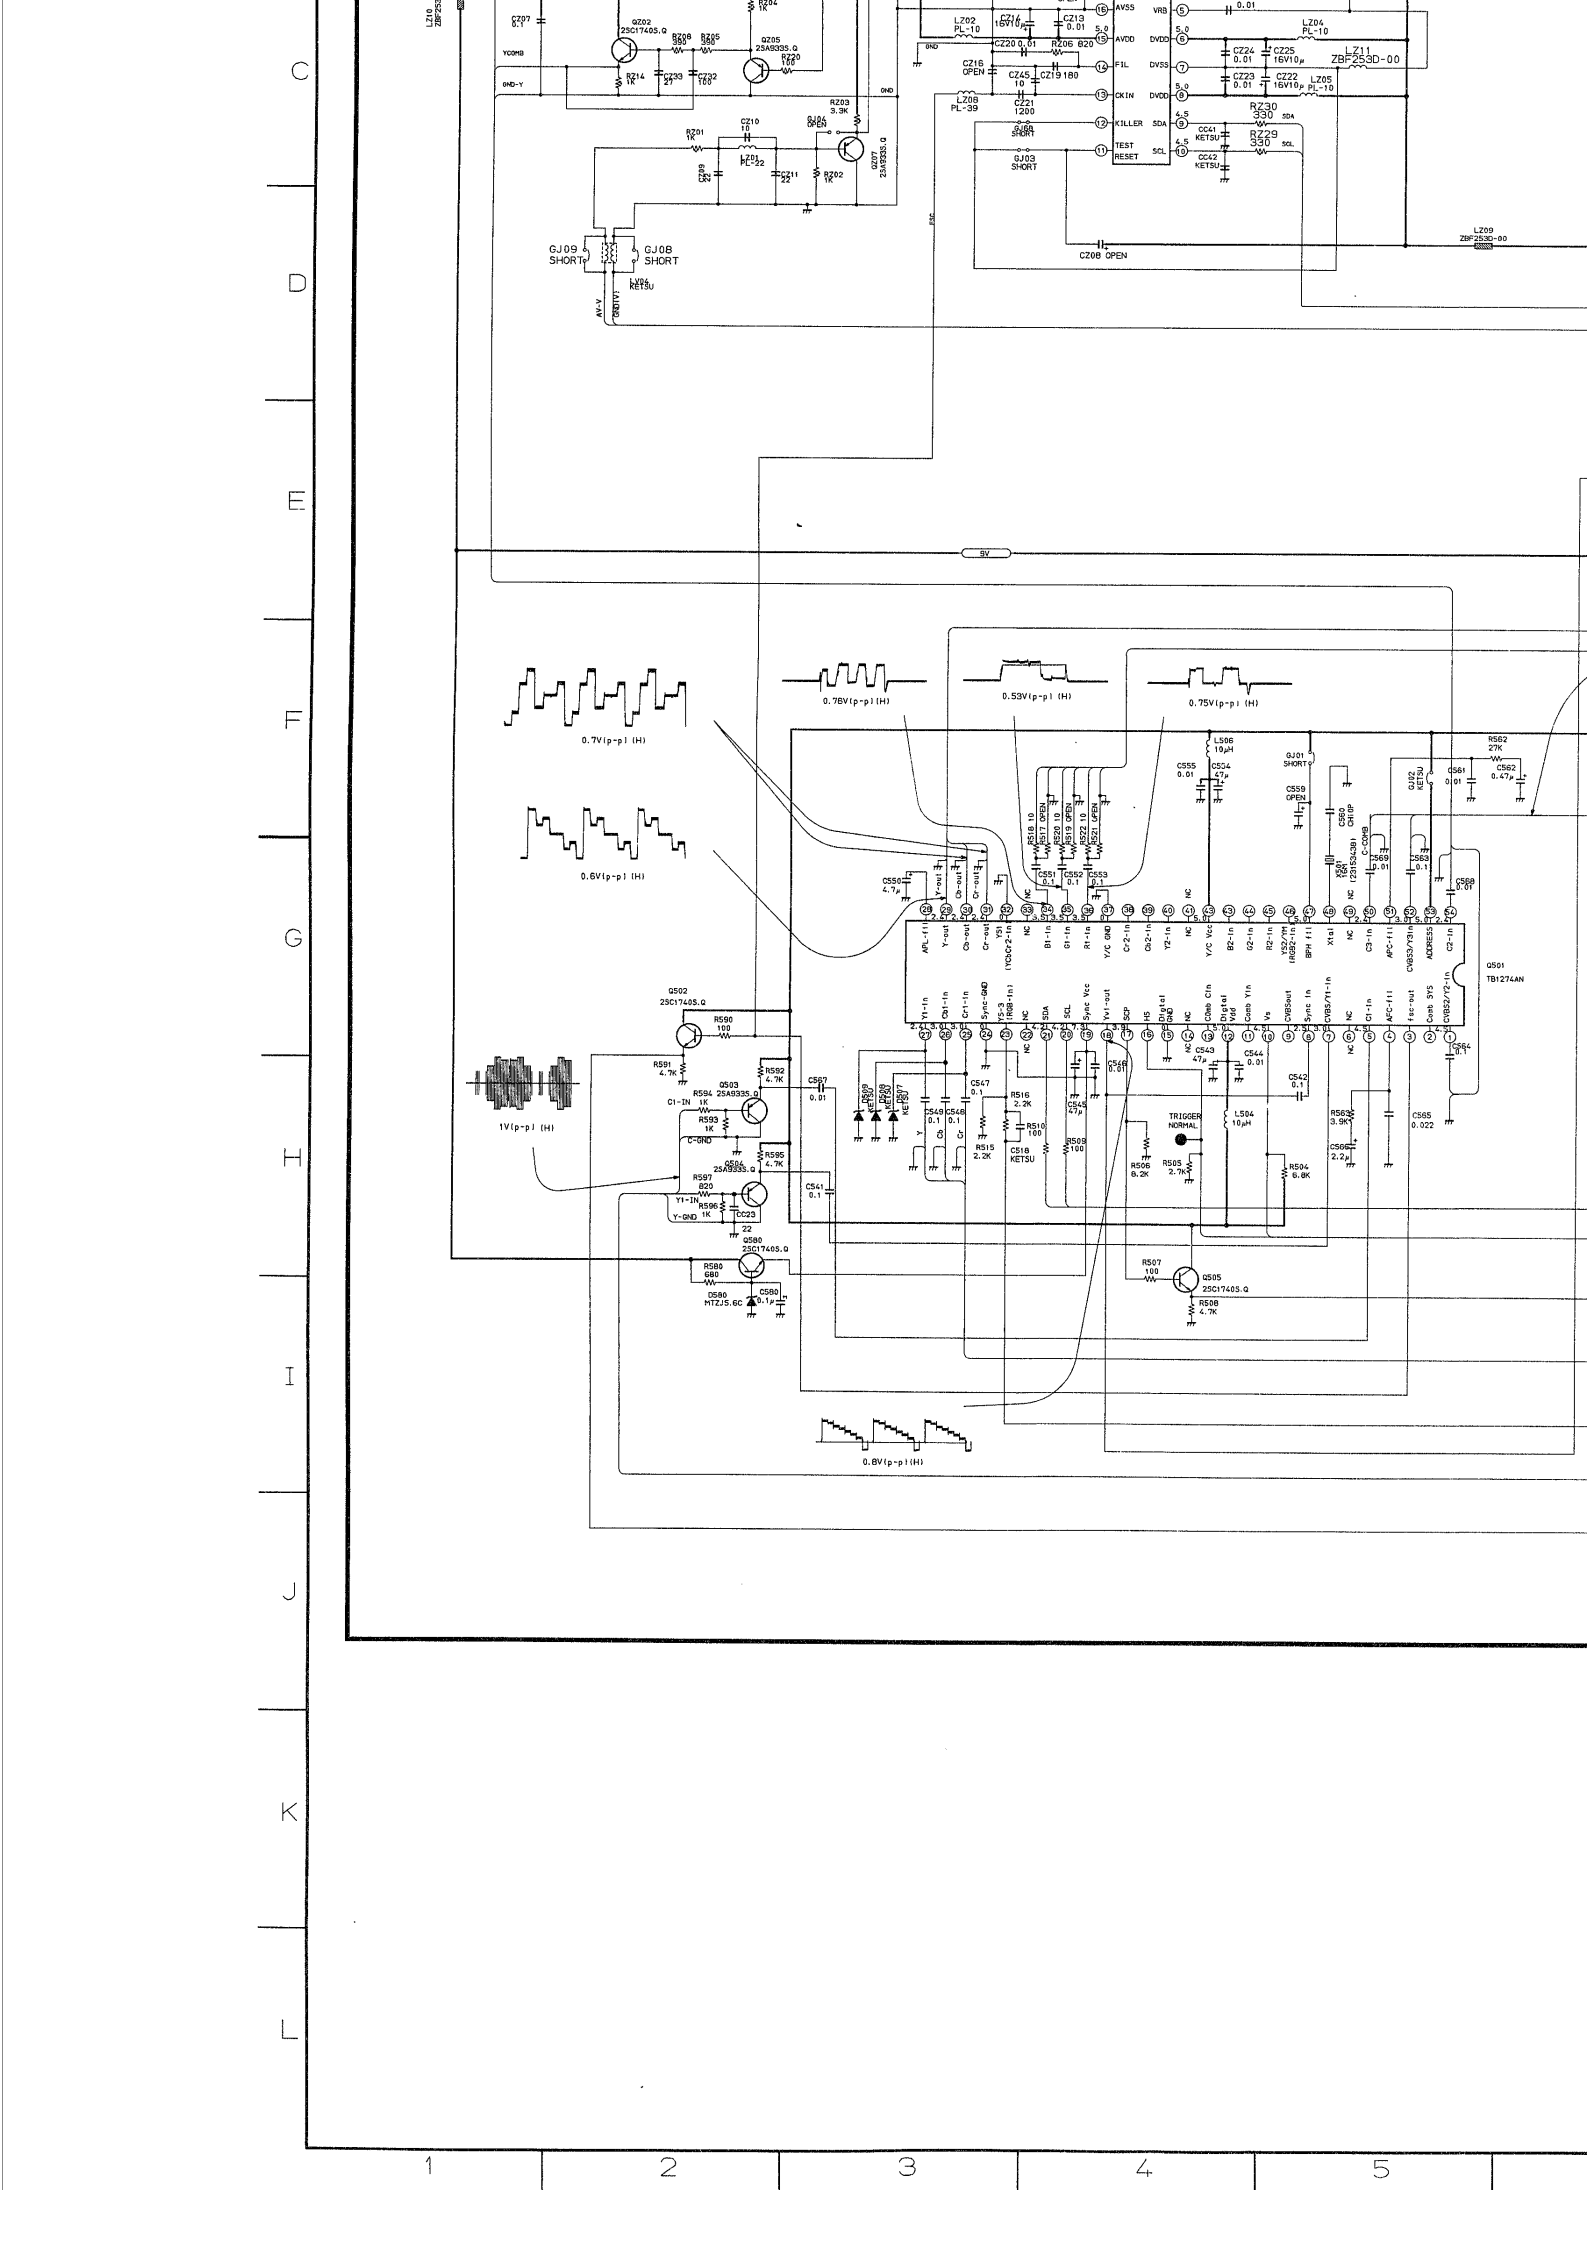
0.7V(p-p) (H)
0.6V(p-p) (H)
1V(p-p) (H)
0.7BV(p-p)(H)
0.53V(p-p) (H)
0.75V(p-p) (H)
0.8V(p-p)(H)
5V
Q501
TB1274AN
Q502
2SC1740S-Q
Q503
2SA933S-Q
Q504
2SC1740S-Q
Q505
2SC1740S-Q
Q580
2SC1740S-Q
TRIGGER
NORMAL
GJ01 SHORT
GJ02 KETSU
GJ03 SHORT
GJ08 SHORT
GJ09 SHORT
D580
MTZJ5.6C
LZ09
ZBF253D-00
CZ08 OPEN
CZ16 OPEN
CZ45 OPEN
GND
AV-V
SDA
SCL
1 2 3 4 5
C D E F G H I J K L

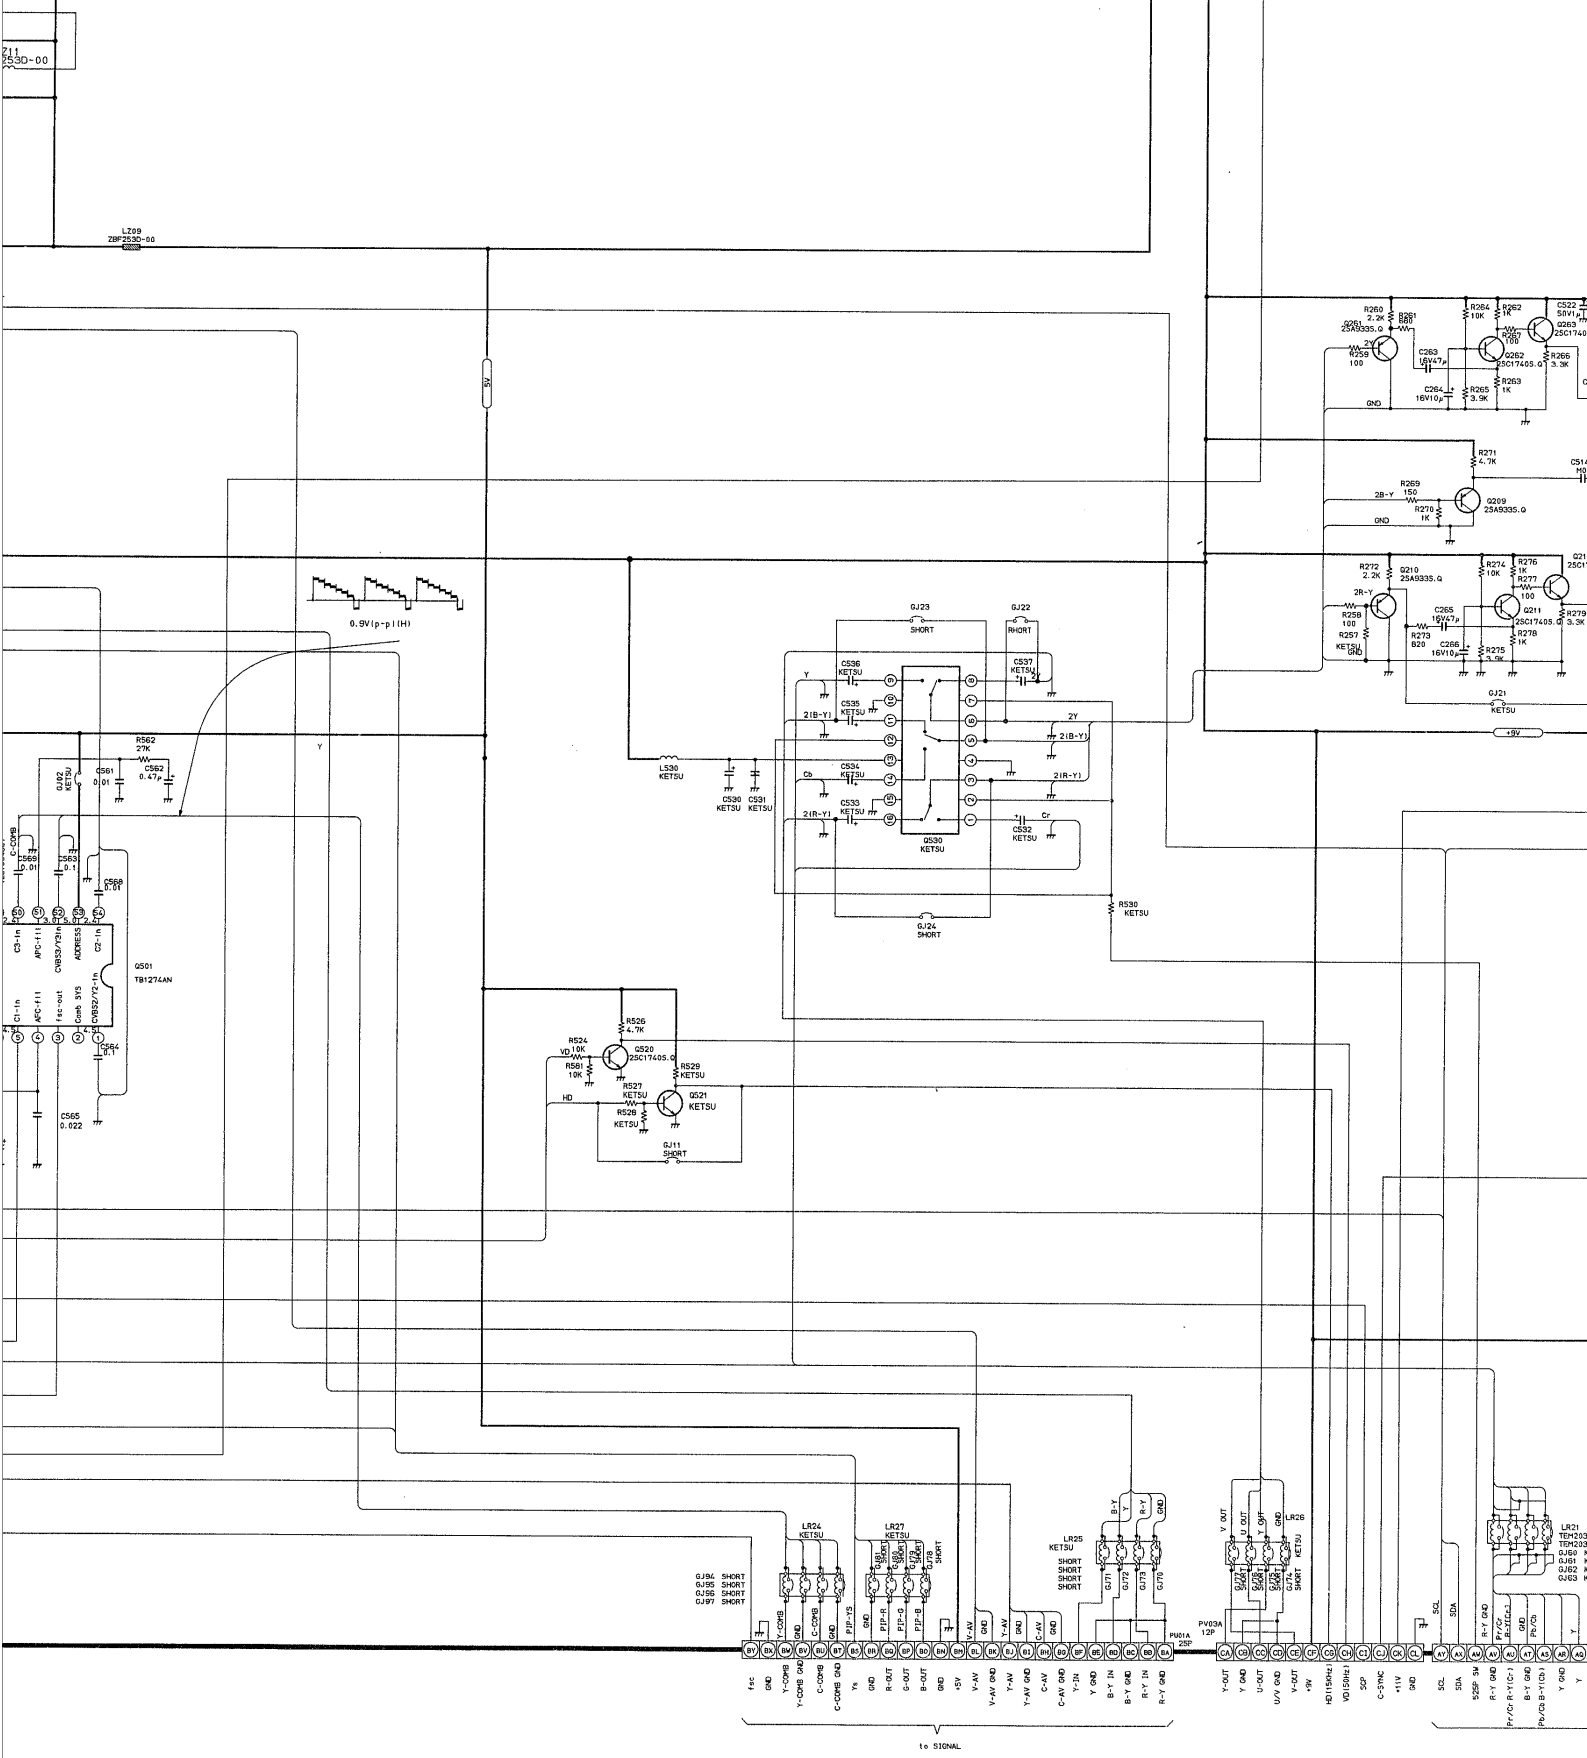

* KETSU means to open the circuit.

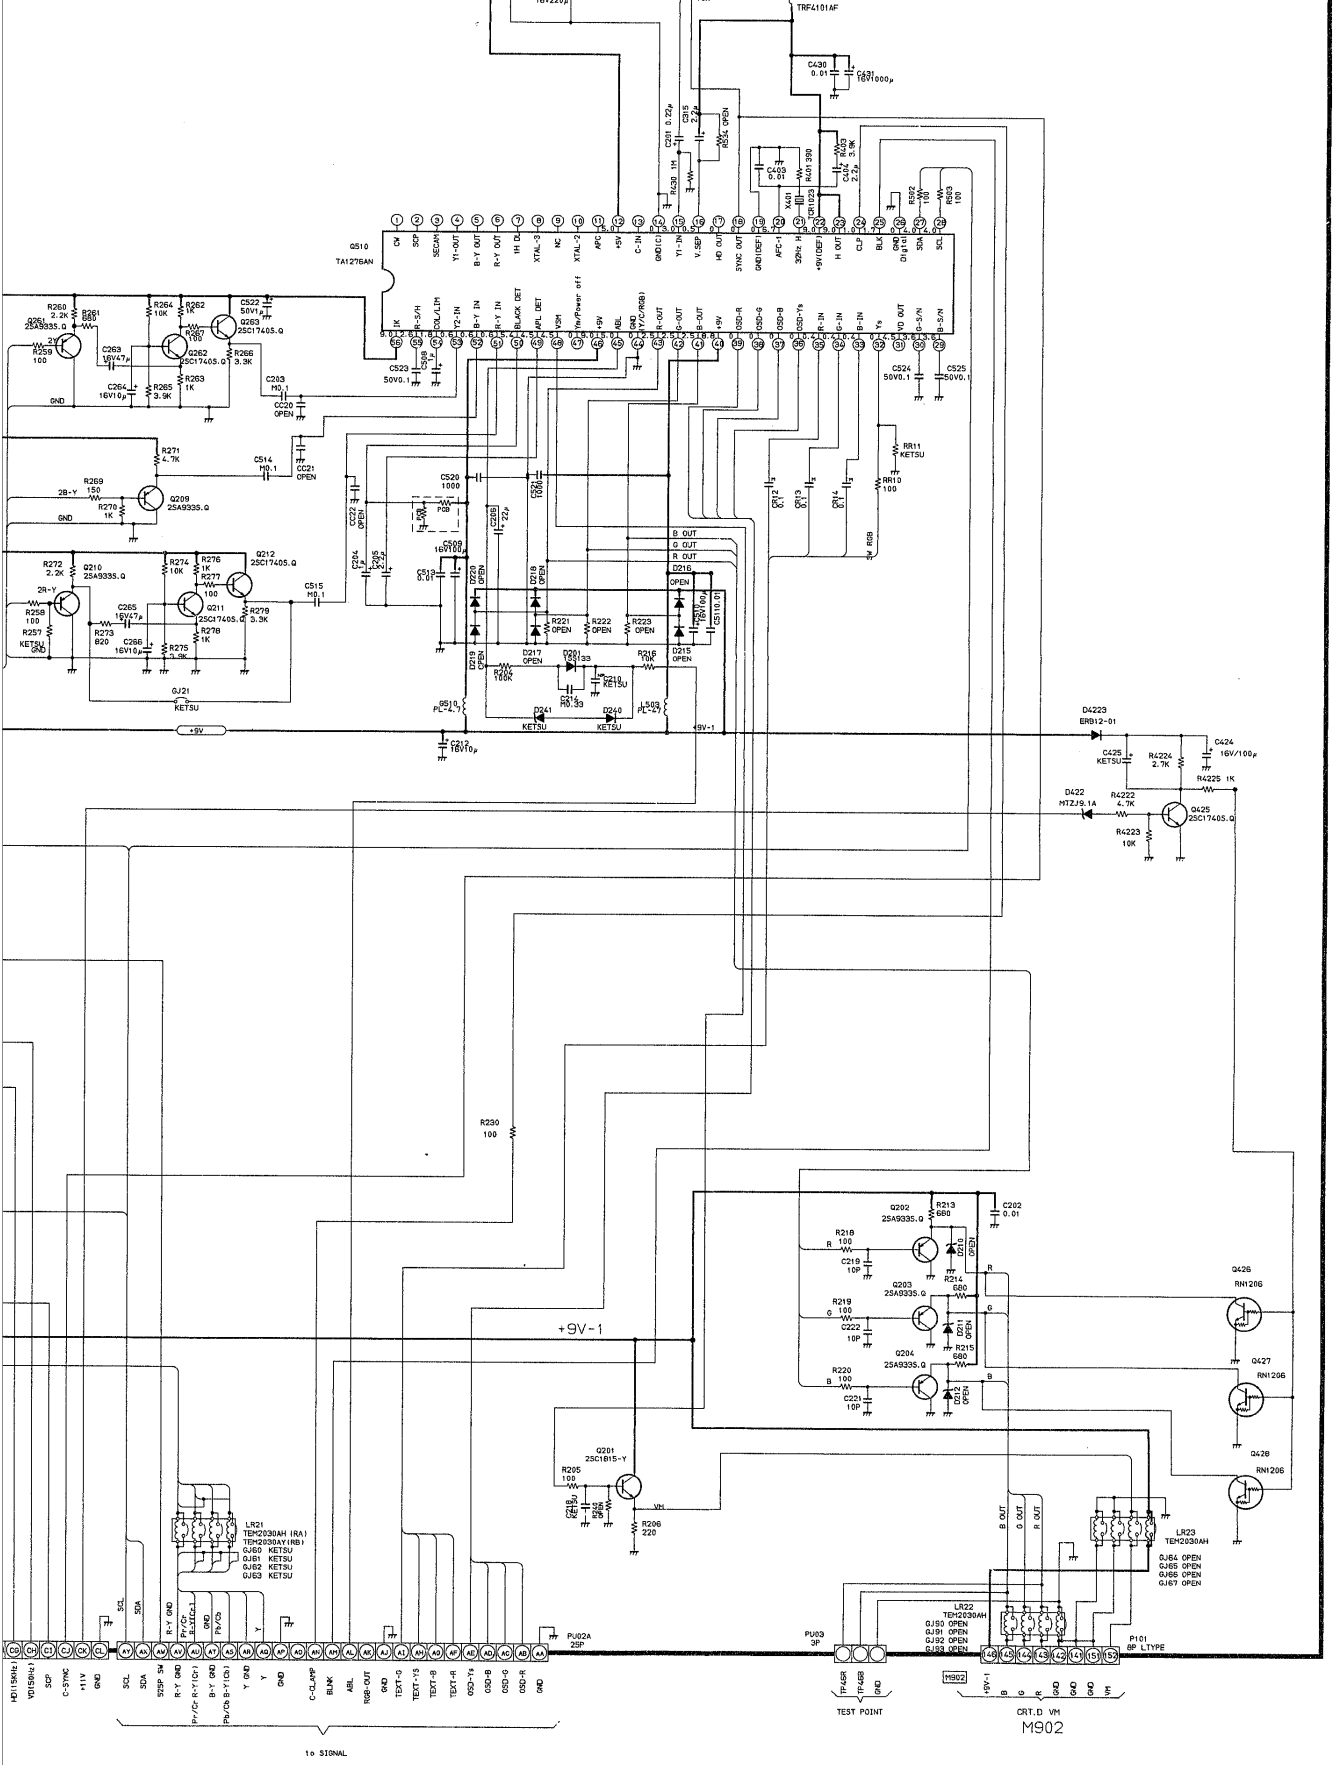

PB9747D	PB9747
43D9UXC	50D9UXE
50D9UXC	50D9UXA
61D9UXC	50D9UXM
	50D9UXH
	61D9UXE
	61D9UXA
	61D9UXM
	61D9UXH

43D9UXC	61D9UXE	50D9UXE
50D9UXC	61D9UXA	50D9UXA
61D9UXC	61D9UXM	50D9UXM
	61D9UXH	50D9UXH

VCD
50D9U SERIES

PK3268

C D E F G H I J K L

11 12 13 14 15 16

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (5/7)
50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal. Voltages reading may vary ±20%.
2. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
3. Waveforms are taken using a standard colour bar signal.
4. Make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position. Set other controls for best picture.

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ● : Solder links.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

40200009

A/V BACK-TERMINAL

	UXC	OTHER
CC100	1000P	KETSU
CC101		
CC102		
CC103		
CC104		
CC105		
CC106		
CC107		
CC108		
CC109		
CC999		
RC100	680	SHORT
RC101		
RC102		
RC103		
RC104	1K	
RC105		
RC106		
RC107		
RC108		
RC109		
RC865		

PB9746	PB9746D	PB9904
50D9UXE	43D9UXC	50D9UXM
50D9UXA	50D9UXC	61D9UXM
50D9UXH	61D9UXC	
61D9UXE		
61D9UXA		
61D9UXH		

TEXT (UXE/UXA/UXM)

	UXM	OTHER
CV53	16V10μ	KETSU
CV54	16V10μ	
CV56	16V47μ	
CV57	16V10μ	
QV52	2SC1740S	
QV53	2SA933S	
QV55	2SA933S	
QV57	2SC1740S	
RV19	33K	
RV20	22K	
RV27	100	
RV28	1K	
RV36	33K	
RV37	22K	
RV50	2.7K	
RV51	100	
RV53	2.7K	
RV54	2.7K	
RV55	22K	
RV56	47K	
RV57	3.9K	
RV59	1K	

* KETSU means to open the circuit.

61D9UXE 50D9UXE
43D9UXC 61D9UXA 50D9UXA
50D9UXC 61D9UXH 50D9UXH
61D9UXC 61D9UXM 50D9UXM

BACK A/V
TEXT
50D9U SERIES

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (5/7)

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to ch
volts, colour bar signal. Voltages reading may va
2. All waveforms are taken using a wide band oscillo
3. Waveforms are taken using a standard colour ba
4. Make sure that CONTRAST and COLOUR con
BRIGHTNESS control is almost in maximum posi
picture.

40200009

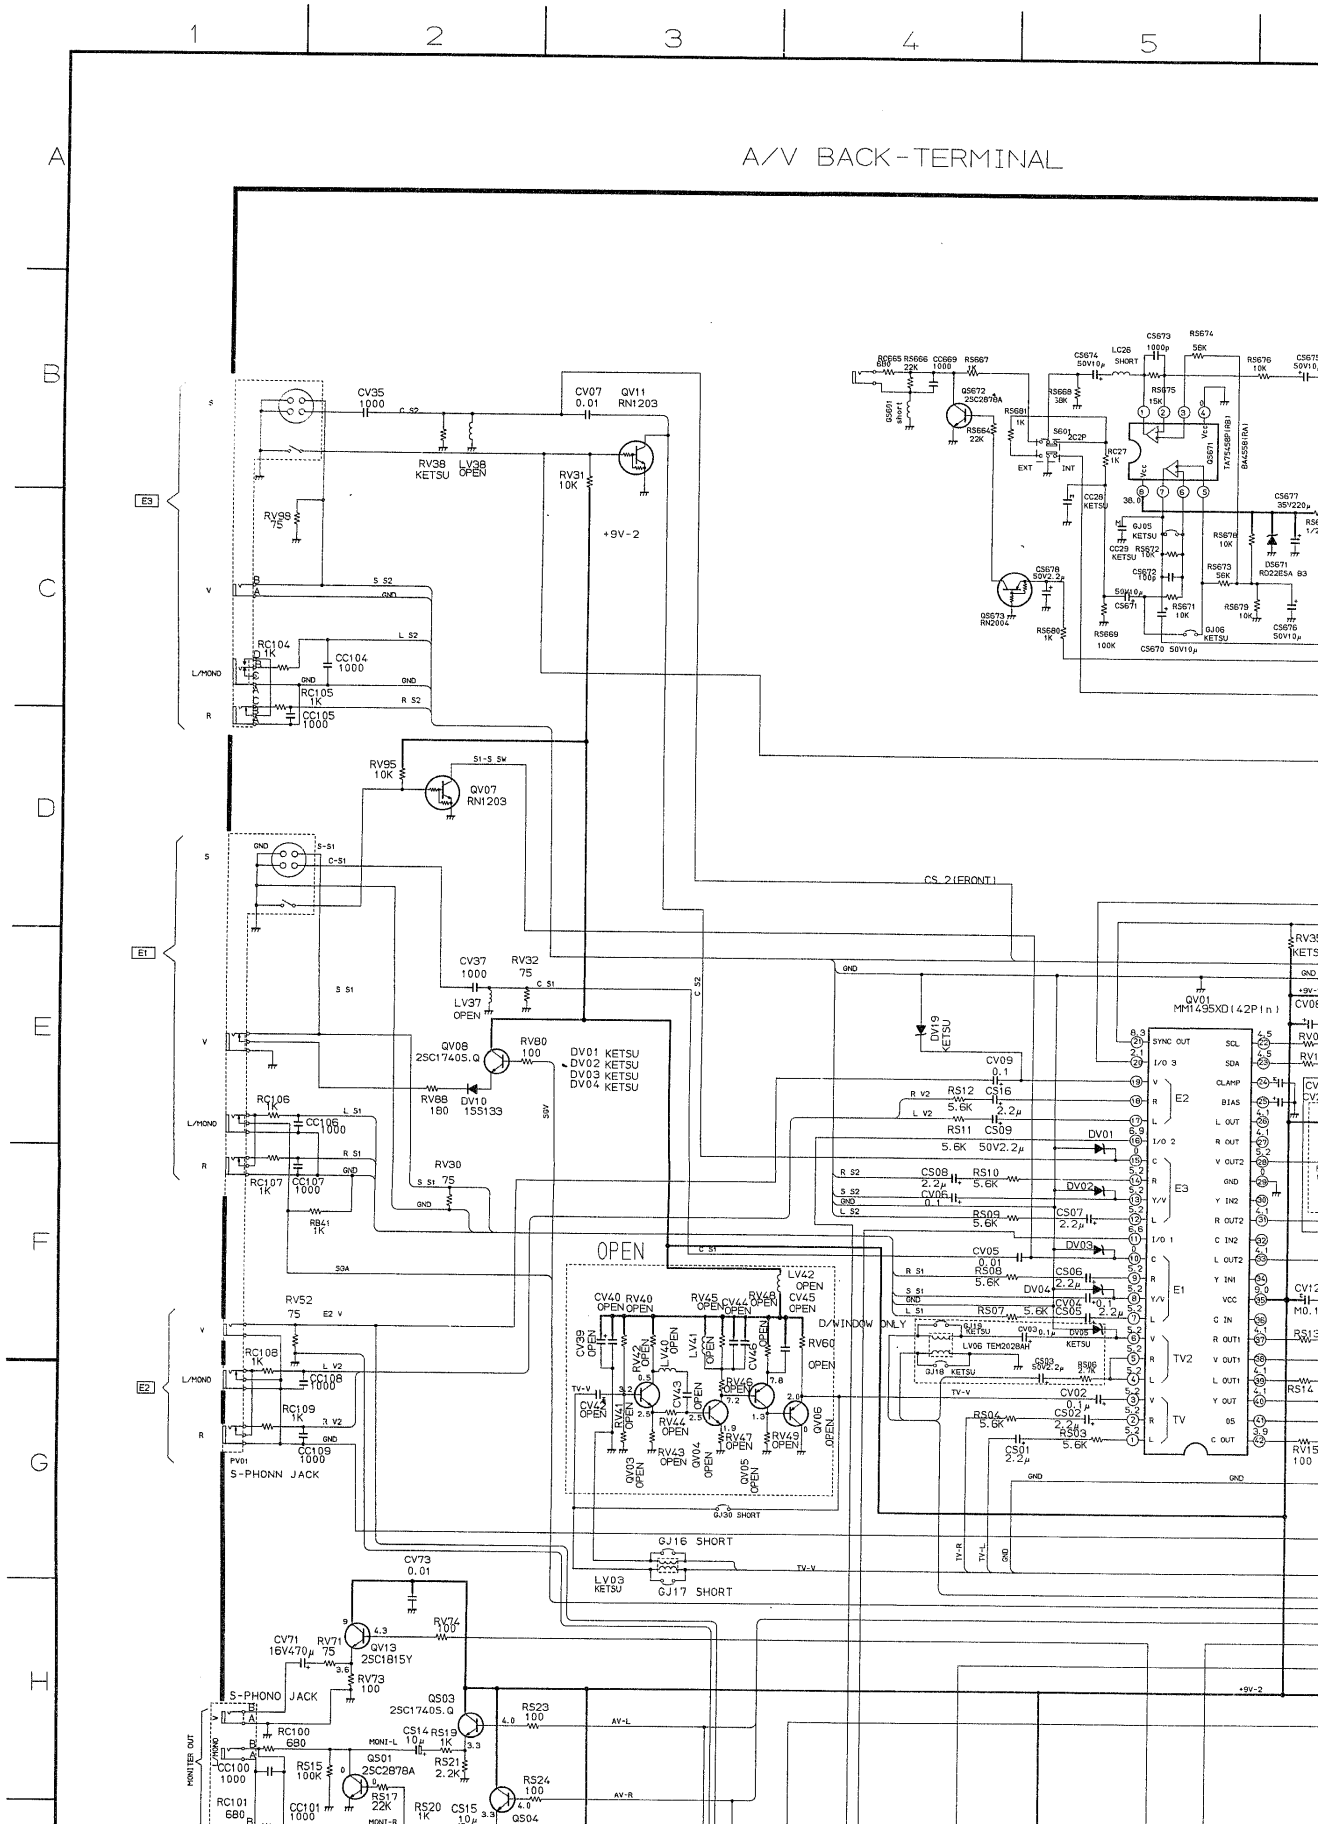

S AND WAVEFORMS

om point shown to chassis ground, line voltage 220
tages reading may vary ±20%.
g a wide band oscilloscope and a low capacity probe.
a standard colour bar signal.
T and COLOUR controls are in mid position and
ost in maximum position. Set other controls for best

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⬬ : Solder links.

EXP

VAL

1. R
2. U
se
3. U
se

5 | 6 | 7 | 8 | 9 | 10 | 11

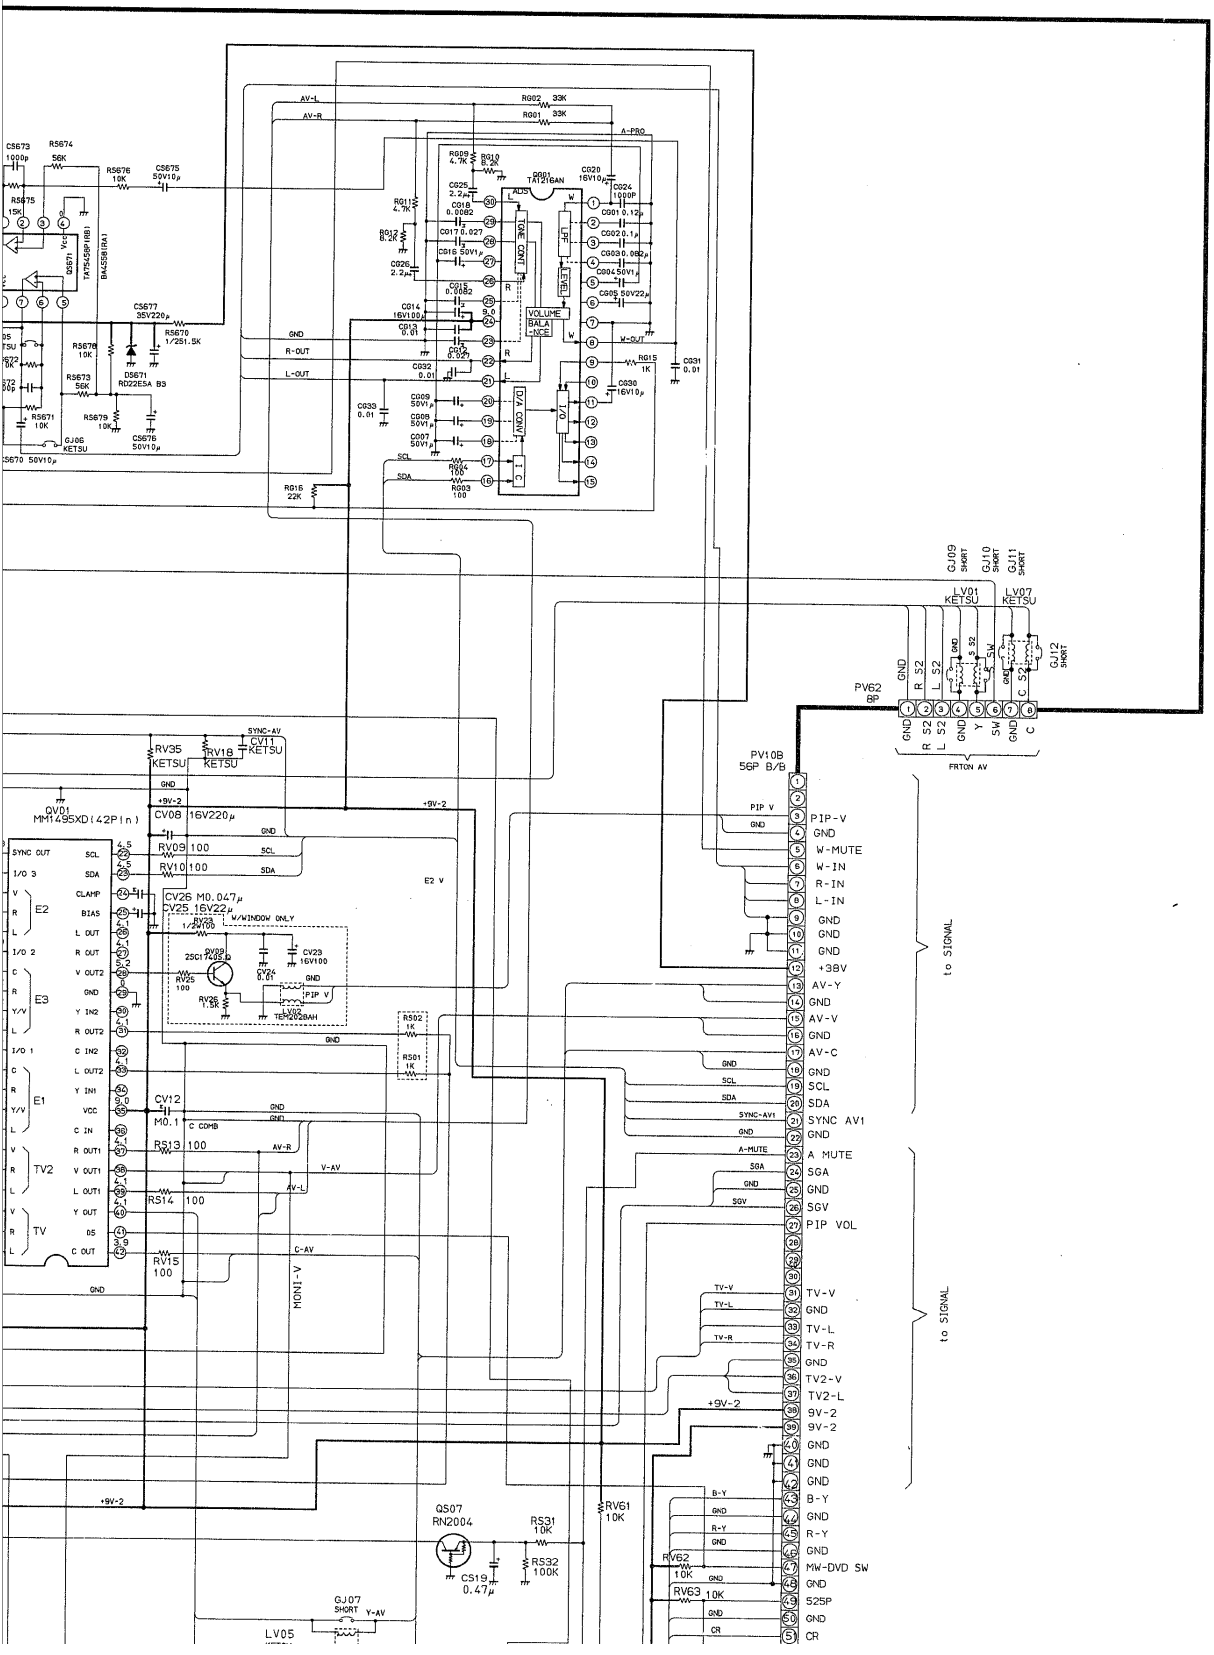

	UX(
CC100	1000
CC101	
CC102	
CC103	
CC104	
CC105	
CC106	
CC107	
CC108	
CC109	
CC669	
RC100	680
RC101	
RC102	
RC103	
RC104	1K
RC105	
RC106	
RC107	
RC108	
RC109	
RC665	

TEXT

matic dia-

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

	UXC	OTHER
CC100	1000P	KETSU
CC101	↓	↓
CC102	↓	↓
CC103	↓	↓
CC104	↓	↓
CC105	↓	↓
CC106	↓	↓
CC107	↓	↓
CC108	↓	↓
CC109	↓	↓
CC669	↓	↓
RC100	680	SHORT
RC101	↓	↓
RC102	↓	↓
RC103	↓	↓
RC104	1K	↓
RC105	↓	↓
RC106	↓	↓
RC107	↓	↓
RC108	↓	↓
RC109	↓	↓
RC665	↓	↓

PB9746	PB9746D	PB9904
50D9UXE	43D9UXC	50D9UXM
50D9UXA	50D9UXC	61D9UXM
50D9UXH	61D9UXC	
61D9UXE		
61D9UXA		
61D9UXH		

TEXT (UXE/UXA/UXM)

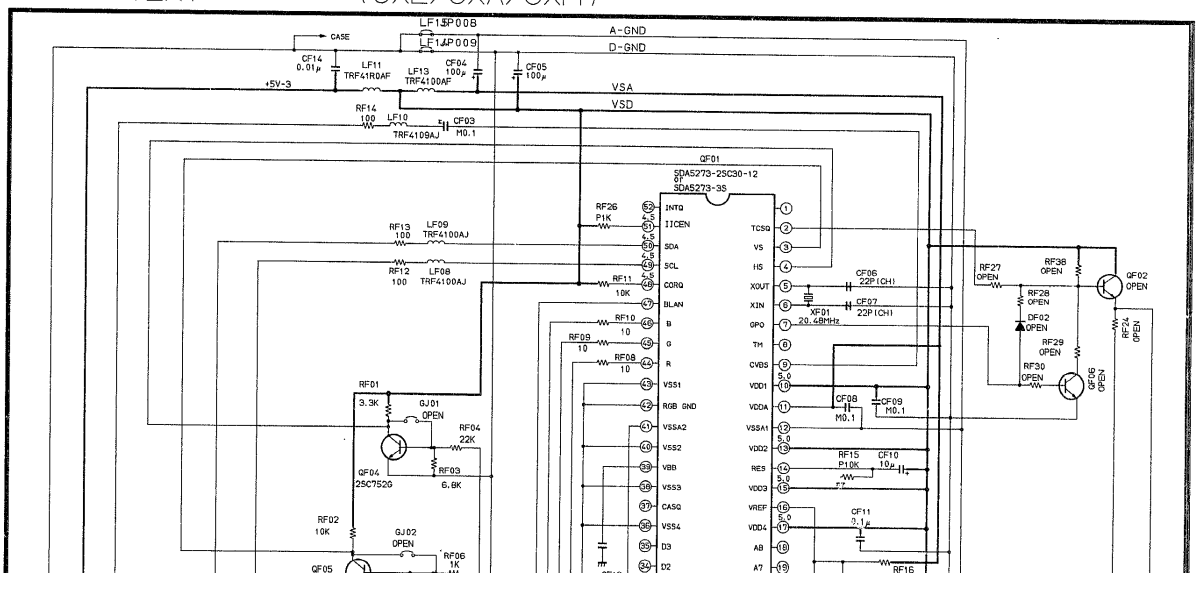

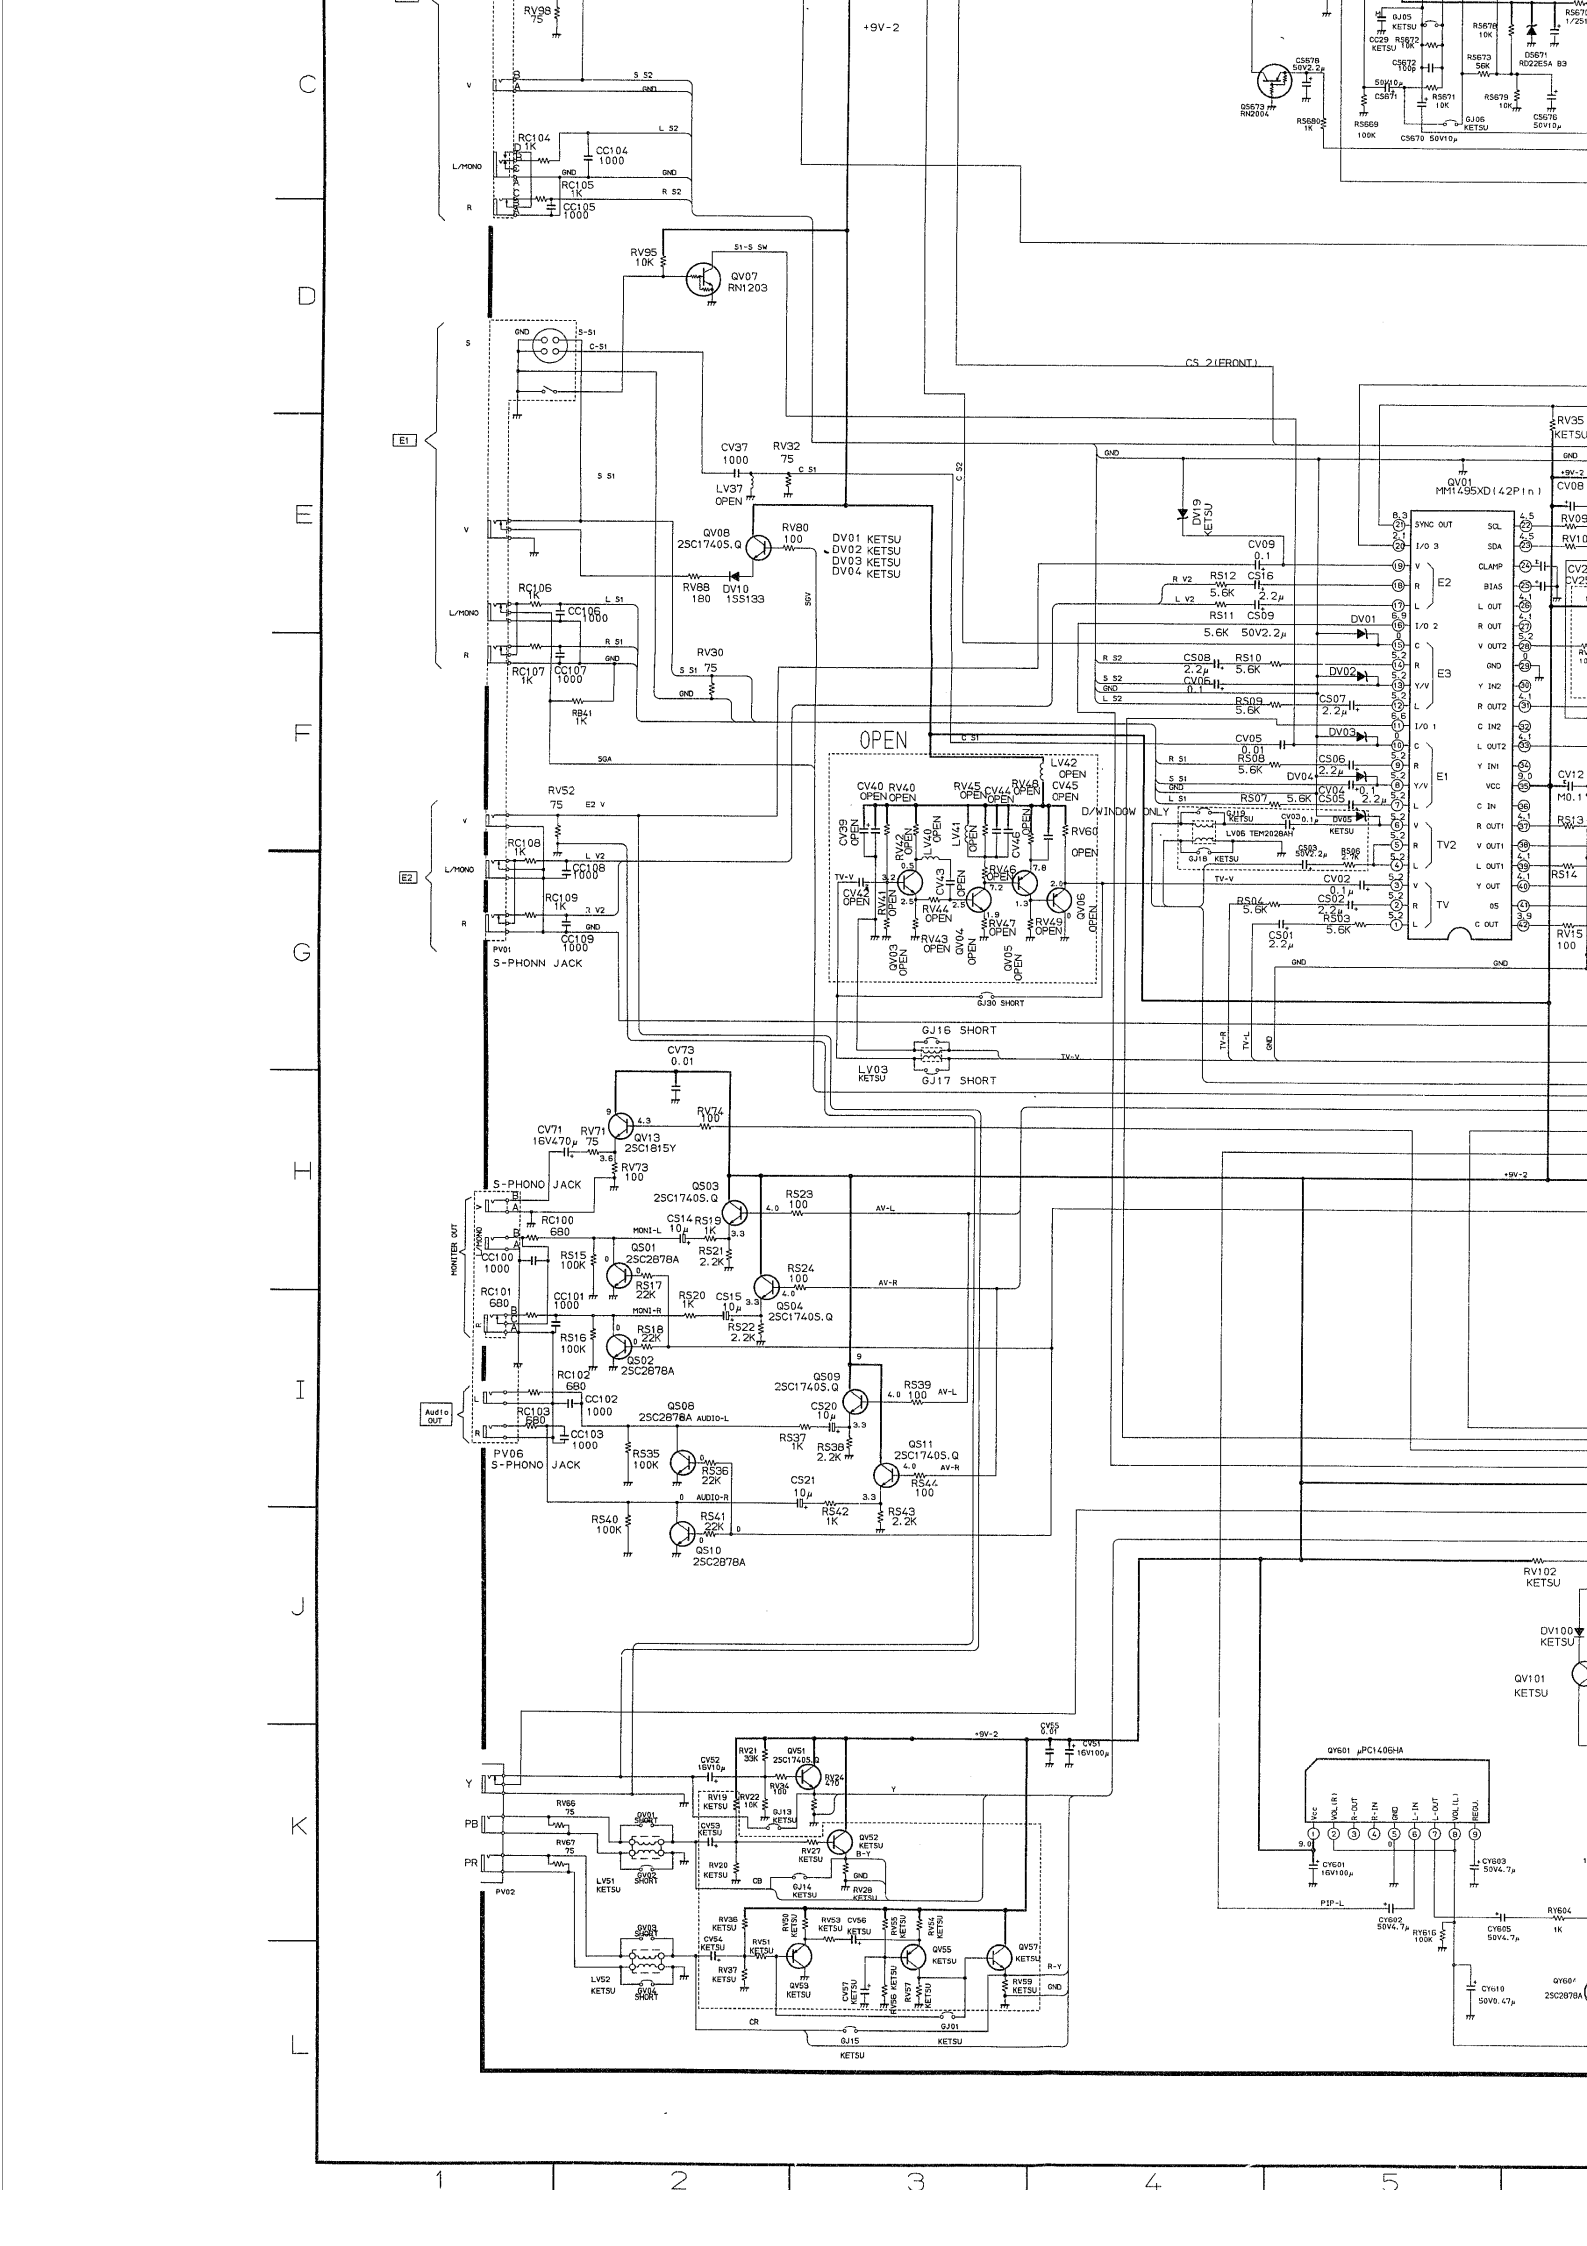
OPEN
D/WINDOW ONLY
S-PHONN JACK
S-PHONO JACK
PV06
S-PHONO JACK
PV02
MONITOR OUT
Audio OUT
CS 2(FRONT)
+9V-2
GJ16 SHORT
GJ17 SHORT
GJ30 SHORT
GJ15 KETSU
GJ01 KETSU
QV01 MM1495XD(42Pin)
QV101 KETSU
QY601 μPC1406HA
DV100 KETSU
RV102 KETSU
LV03 KETSU
LV51 KETSU
LV52 KETSU
QV07 RN1203
QV08 2SC1740S.Q
QV13 2SC1815Y
QS01 2SC2878A
QS02 2SC2878A
QS03 2SC1740S.Q
QS04 2SC1740S.Q
QS06 2SC2878A AUDIO-L
QS09 2SC1740S.Q
QS10 2SC2878A
QS11 2SC1740S.Q
QV51 2SC1740S.Q
QV52 KETSU B-Y
QV53 KETSU
QV54 KETSU
QV55 KETSU
QV56 KETSU
QV57 KETSU
QV59 KETSU
QV60 2SC2878A
DV01 KETSU
DV02 KETSU
DV03 KETSU
DV04 KETSU
DV10 1SS133
DV19 KETSU
LV37 OPEN
LV42 OPEN
LV41 OPEN
LV40 OPEN
RV80 100
RV88 180
RV30 75
RV32 75
RV35 KETSU
RV52 75
RV74 100
RV73 100
RV95 10K
RV96 75
RV67 75
RV98 75
RV09
RV10
RV12 M0.1
RV13
RV14
RV15 100
RV60 OPEN
CV37 1000
CV71 16V470μ
CV73 0.01
CV08
CV09 0.1
CV02 0.1
CV05 0.01
CV06 0.1
CV12
CV39 OPEN
CV40 OPEN
CV41 OPEN
CV42 OPEN
CV43 OPEN
CV44 OPEN
CV45 OPEN
CV46 OPEN
CV47 OPEN
CV48 OPEN
CV49 OPEN
CV50 OPEN
CV51 16V100μ
CV52 16V10μ
CV53 KETSU
CV54 KETSU
CV55 0.01
CV56 KETSU
CV57 KETSU
CV58 KETSU
CV59 KETSU
CY601 16V100μ
CY602 50V4.7μ
CY603 50V4.7μ
CY604 50V4.7μ
CY605 50V4.7μ
CY610 50V0.47μ
RC100 680
RC101 680
RC102 680
RC103 680
RC104 1K
RC105 1K
RC106 1K
RC107 1K
RC108 1K
RC109 1K
CC100 1000
CC101 1000
CC102 1000
CC103 1000
CC104 1000
CC105 1000
CC106 1000
CC107 1000
CC108 1000
CC109 1000
RS15 100K
RS16 100K
RS17 22K
RS18 22K
RS19 1K
RS21 2.2K
RS22 2.2K
RS23 100
RS24 100
RS35 100K
RS36 22K
RS37 1K
RS38 2.2K
RS39 100
RS40 100K
RS41 22K
RS42 1K
RS43 2.2K
RS44 100
CS14 10μ
CS15 10μ
CS20 10μ
CS21 10μ
RS20 1K
RS35 100K
RV19 KETSU
RV20 KETSU
RV21 33K
RV22 10K
RV24 270
RV27 KETSU
RV28 KETSU
RV34 100
RV36 KETSU
RV37 KETSU
RV51 KETSU
RV53 KETSU
RV54 KETSU
RV55 KETSU
RV56 KETSU
RV57 KETSU
RV59 KETSU
RY604 1K
RY616 100K
RS501 1/25W
RS502 10K
RS503 10K
RS504 5.6K
RS505 5.6K
RS506 5.6K
RS507 5.6K
RS508 5.6K
RS509 5.6K
RS510 5.6K
RS511 5.6K
RS512 5.6K
CS01 2.2μ
CS02 2.2μ
CS03 2.2μ
CS04 2.2μ
CS05 2.2μ
CS06 2.2μ
CS07 2.2μ
CS08 2.2μ
CS09 50V2.2μ
CS16 2.2μ
CS501 2.2μ
CS502 2.2μ
CS503 50V2.2μ
CS504 50V2.2μ
CS505 50V2.2μ
CS506 50V2.2μ
CS507 50V2.2μ
CS508 50V2.2μ
CS509 50V2.2μ
CS510 50V2.2μ
CS511 50V2.2μ
CS512 50V2.2μ
CS513 50V2.2μ
CS514 50V2.2μ
CS515 50V2.2μ
CS516 50V2.2μ
CS517 50V2.2μ
CS518 50V2.2μ
CS519 50V2.2μ
CS520 50V2.2μ
CS521 50V2.2μ
CS522 50V2.2μ
CS523 50V2.2μ
CS524 50V2.2μ
CS525 50V2.2μ
CS526 50V2.2μ
CS527 50V2.2μ
CS528 50V2.2μ
CS529 50V2.2μ
CS530 50V2.2μ
CS531 50V2.2μ
CS532 50V2.2μ
CS533 50V2.2μ
CS534 50V2.2μ
CS535 50V2.2μ
CS536 50V2.2μ
CS537 50V2.2μ
CS538 50V2.2μ
CS539 50V2.2μ
CS540 50V2.2μ
CS541 50V2.2μ
CS542 50V2.2μ
CS543 50V2.2μ
CS544 50V2.2μ
CS545 50V2.2μ
CS546 50V2.2μ
CS547 50V2.2μ
CS548 50V2.2μ
CS549 50V2.2μ
CS550 50V2.2μ
CS551 50V2.2μ
CS552 50V2.2μ
CS553 50V2.2μ
CS554 50V2.2μ
CS555 50V2.2μ
CS556 50V2.2μ
CS557 50V2.2μ
CS558 50V2.2μ
CS559 50V2.2μ
CS560 50V2.2μ
CS561 50V2.2μ
CS562 50V2.2μ
CS563 50V2.2μ
CS564 50V2.2μ
CS565 50V2.2μ
CS566 50V2.2μ
CS567 50V2.2μ
CS568 50V2.2μ
CS569 50V2.2μ
CS570 50V10μ
CS571 50V10μ
CS572 50V10μ
CS573 50V10μ
CS574 50V10μ
CS575 50V10μ
CS576 50V10μ
CS577 50V10μ
CS578 50V10μ
CS579 50V10μ
CS580 50V10μ
CS581 50V10μ
CS582 50V10μ
CS583 50V10μ
CS584 50V10μ
CS585 50V10μ
CS586 50V10μ
CS587 50V10μ
CS588 50V10μ
CS589 50V10μ

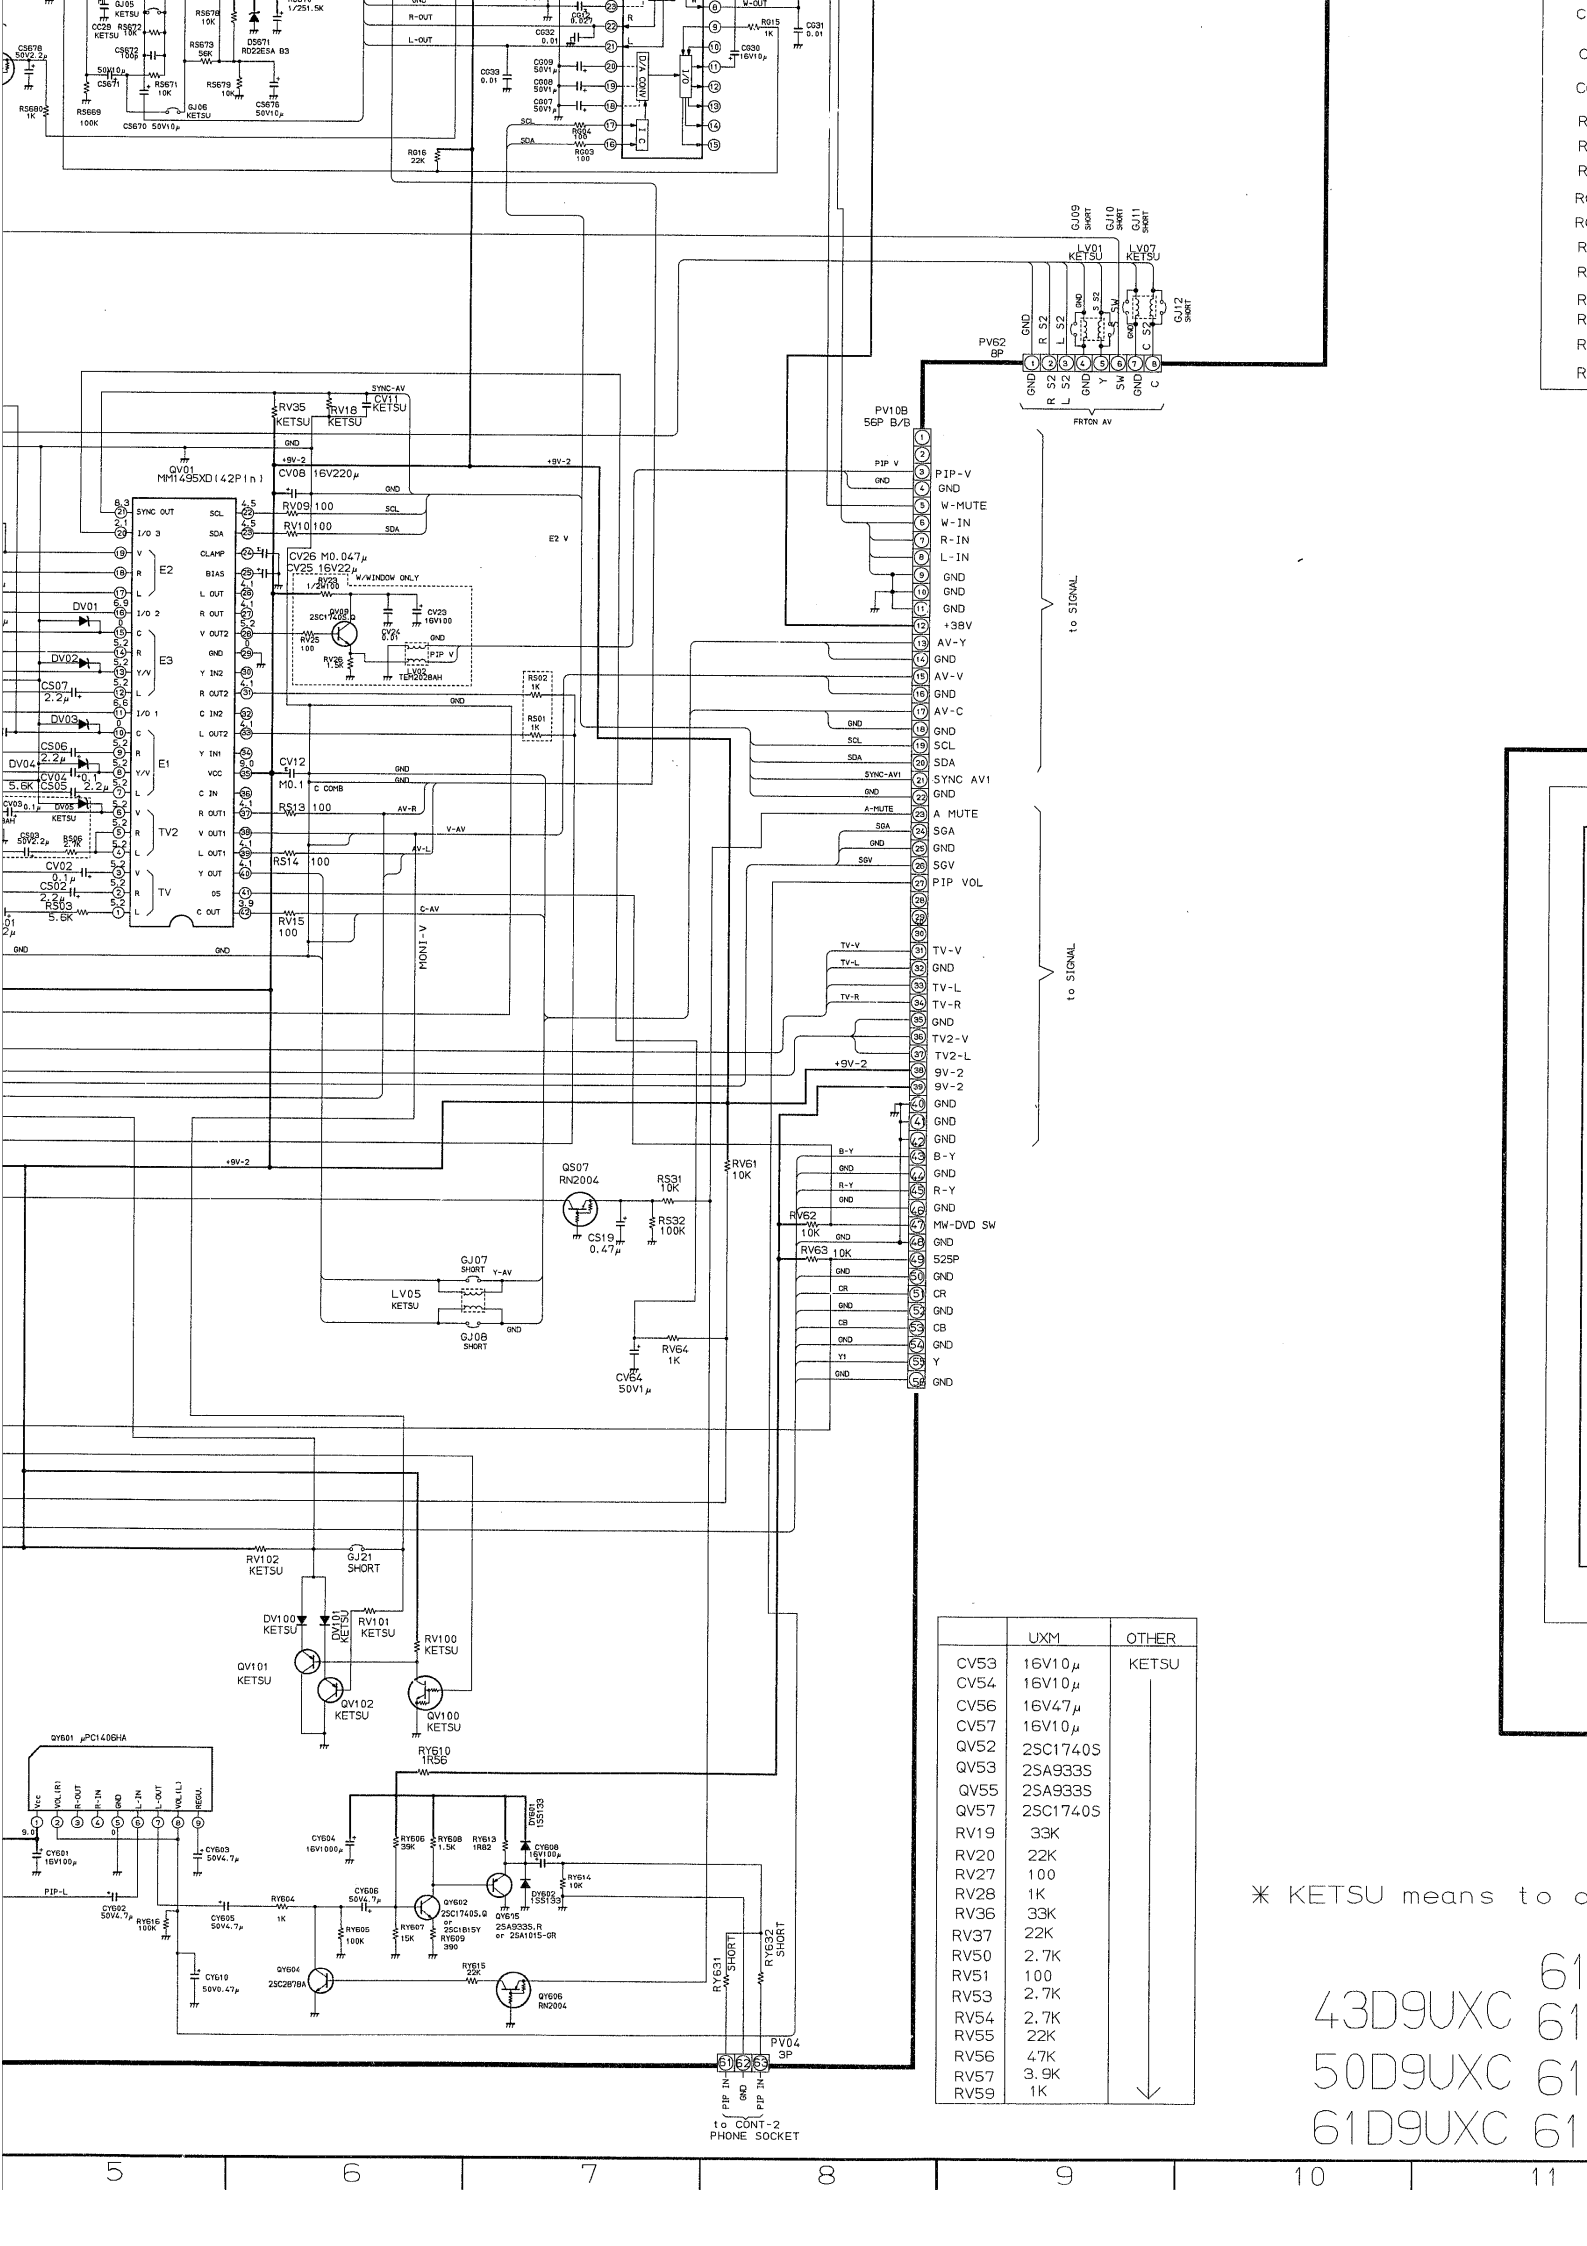

	UXM	OTHER
CV53	16V10μ	KETSU
CV54	16V10μ	
CV56	16V47μ	
CV57	16V10μ	
QV52	2SC1740S	
QV53	2SA933S	
QV55	2SA933S	
QV57	2SC1740S	
RV19	33K	
RV20	22K	
RV27	100	
RV28	1K	
RV36	33K	
RV37	22K	
RV50	2.7K	
RV51	100	
RV53	2.7K	
RV54	2.7K	
RV55	22K	
RV56	47K	
RV57	3.9K	
RV59	1K	

* KETSU means to c

61
43D9UXC 61
50D9UXC 61
61D9UXC 61

5 | 6 | 7 | 8 | 9 | 10 | 11

CC108		
CC109		
CC669	↓	↓
RC100	680	SHORT
RC101		
RC102		
RC103	↓	
RC104	1K	
RC105		
RC106		
RC107		
RC108		
RC109		
RC665	↓	↓

TEXT (UXE/UXA/UXM)

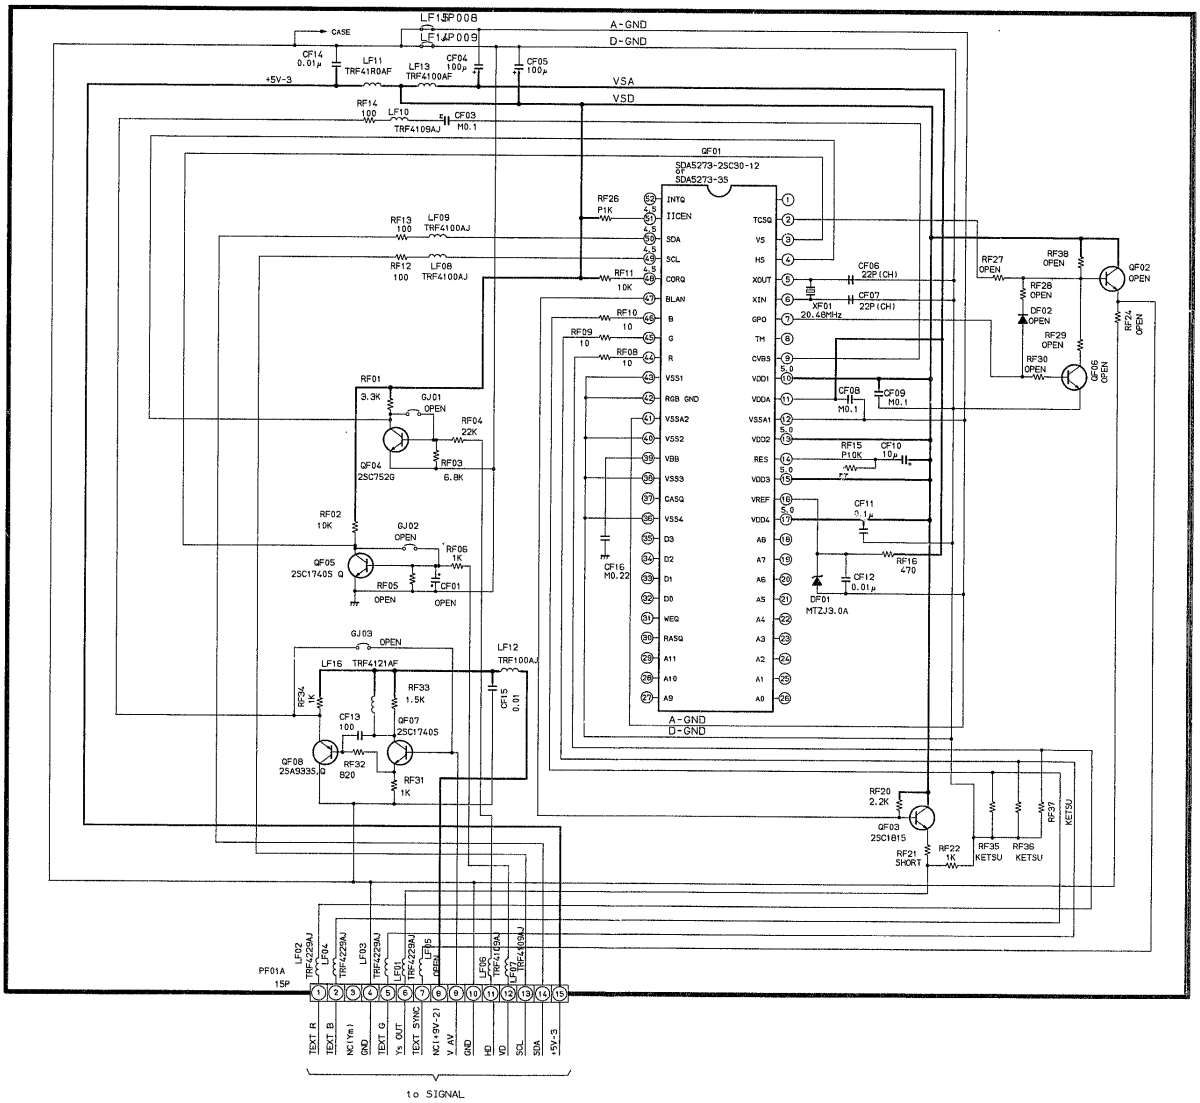

means to open the circuit.

61D9UXE 50D9UXE
D9UXC 61D9UXA 50D9UXA
D9UXC 61D9UXH 50D9UXH
D9UXC 61D9UXM 50D9UXM

BACK A/V
TEXT
50D9U SERIES
PK3269

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (6/7)
50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal. Voltages reading may vary ±20%.
2. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
3. Waveforms are taken using a standard colour bar signal.
4. Make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position. Set other controls for best picture.

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ● : Solder links.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

40200009

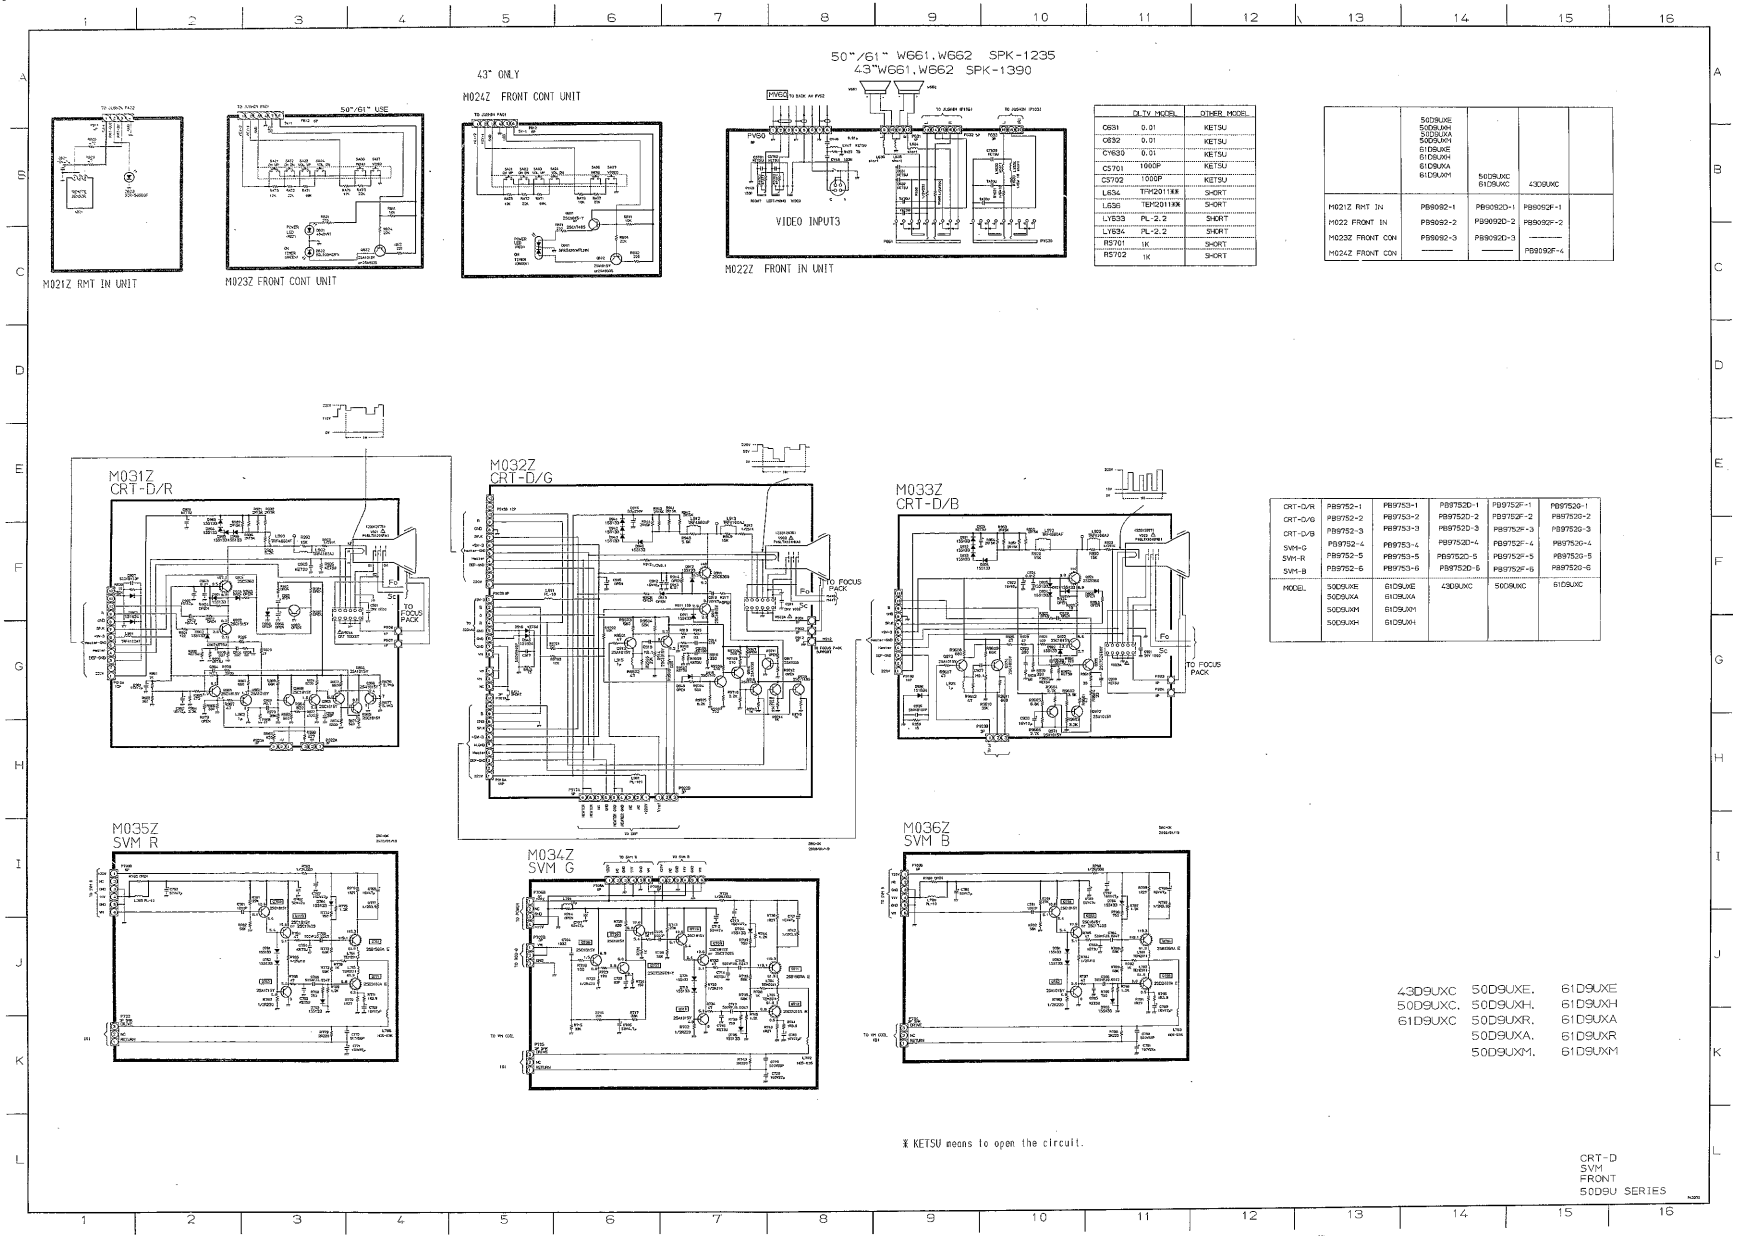

	D/TV MODEL		OTHER MODEL
CB31	0.01		KETSU
CB32	0.01		KETSU
CY630	0.01		KETSU
CS701	1000P		KETSU
CS702	1000P		KETSU
L634	TPM201188		SHORT
L636	TBM201188		SHORT
LY633	PL-2.2		SHORT
LY634	PL-2.2		SHORT
R5701	1K		SHORT
R5702	1K		SHORT

	50D9UXE 50D9UXH 50D9UXA 61D9UXE 61D9UXH 61D9UXA 61D9UXM	50D9UXC 61D9UXC	43D9UXC	
M021Z RMT IN	PB9092-1	PB9092D-1	PB9092F-1	
M022 FRONT IN	PB9092-2	PB9092D-2	PB9092F-2	
M023Z FRONT CON	PB9092-3	PB9092D-3	———	
M024Z FRONT CON	———	———	PB9092F-4	

CRT-D/R	PB97S2-1	PB97S3-1	PB97S2D-1	PB97S2F-1	PB97S2G-1
CRT-D/G	PB97S2-2	PB97S3-2	PB97S2D-2	PB97S2F-2	PB97S2G-2
CRT-D/B	PB97S2-3	PB97S3-3	PB97S2D-3	PB97S2F-3	PB97S2G-3
SVM-G	PB97S2-4	PB97S3-4	PB97S2D-4	PB97S2F-4	PB97S2G-4
SVM-R	PB97S2-5	PB97S3-5	PB97S2D-5	PB97S2F-5	PB97S2G-5
SVM-B	PB97S2-6	PB97S3-6	PB97S2D-6	PB97S2F-6	PB97S2G-6
MODEL	50D9UXE 50D9UXA 50D9UXM 50D9UXH	61D9UXE 61D9UXA 61D9UXM 61D9UXH	43D9UXC	50D9UXC	61D9UXC

43D9UXC 50D9UXE. 61D9UXE
50D9UXC. 50D9UXH. 61D9UXH
61D9UXC 50D9UXR. 61D9UXA
50D9UXA. 61D9UXR
50D9UXM. 61D9UXM

¥ KETSU means to open the circuit.

CRT-D
SVM
FRONT
50D9U SERIES

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (6/7)

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to ch
volts, colour bar signal. Voltages reading may va
2. All waveforms are taken using a wide band oscillos
3. Waveforms are taken using a standard colour bar
4. Make sure that CONTRAST and COLOUR contr
BRIGHTNESS control is almost in maximum positi
picture.

40200009

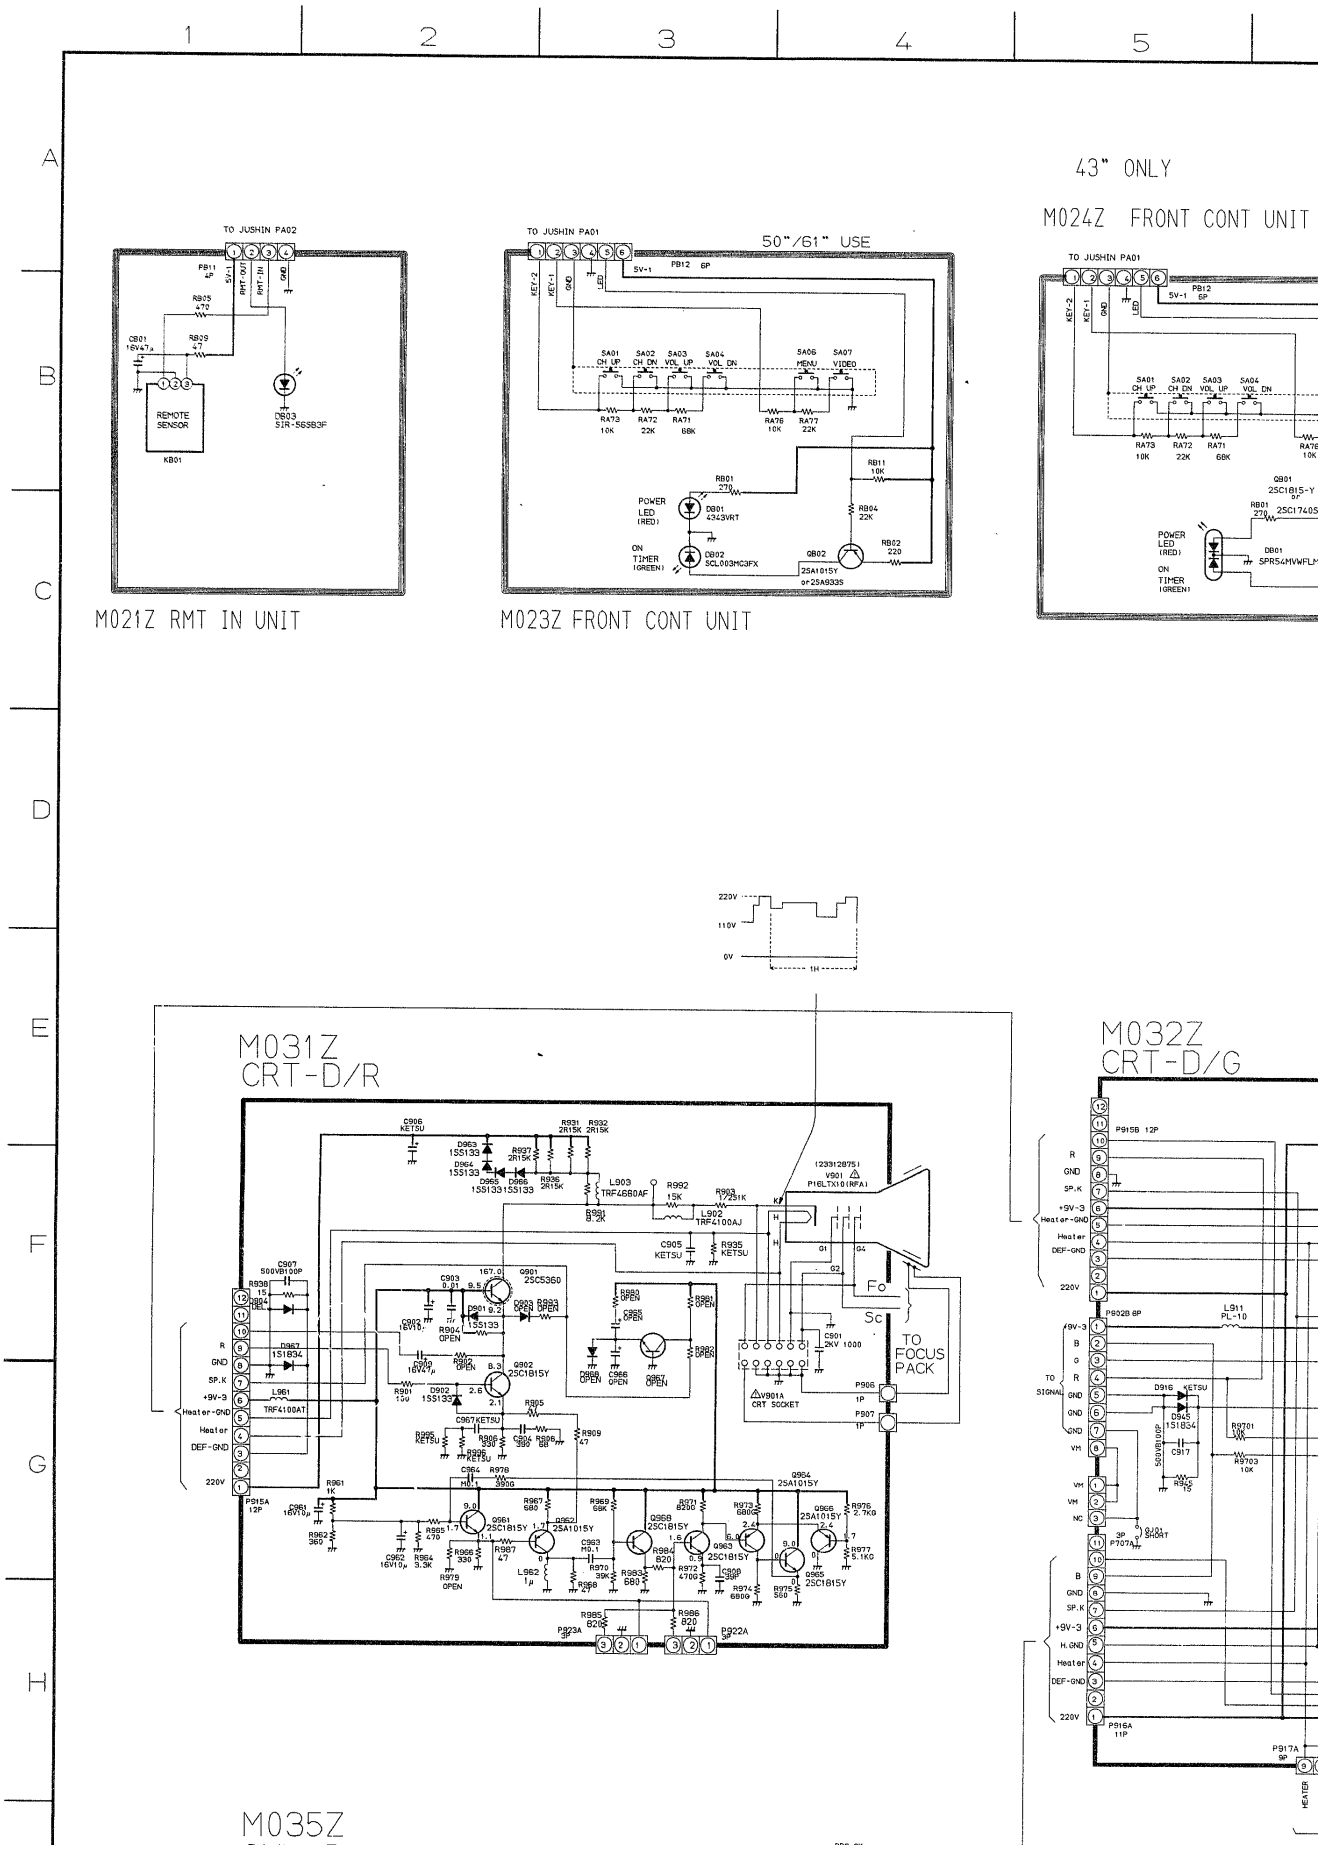

ES AND WAVEFORMS

from point shown to chassis ground, line voltage 220
oltages reading may vary ±20%.
ing a wide band oscilloscope and a low capacity probe.
g a standard colour bar signal.
ST and COLOUR controls are in mid position and
nost in maximum position. Set other controls for best

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⬬ : Solder links.

EX

VA

1.
2.
s
3.
s

5 | 6 | 7 | 8 | 9 | 10 | 11

ONLY

FRONT CONT UNIT

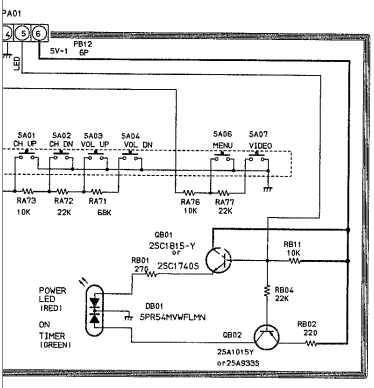

50"/61" W661, W662 SPK-1235
43"W661, W662 SPK-1390

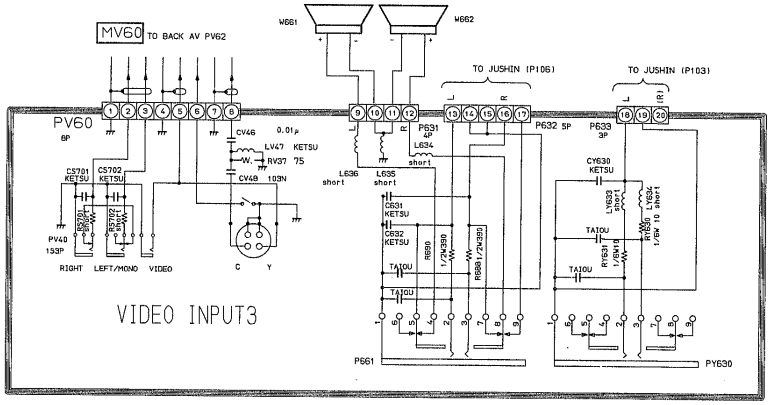

M022Z FRONT IN UNIT

	DLTV MODEL	O
C631	0.01	
C632	0.01	
CY630	0.01	
CS701	1000P	
CS702	1000P	
L634	TFM2011**	
L636	TEM2011**	
LY633	PL-2.2	
LY634	PL-2.2	
RS701	1K	
RS702	1K	

032Z
RT-D/G

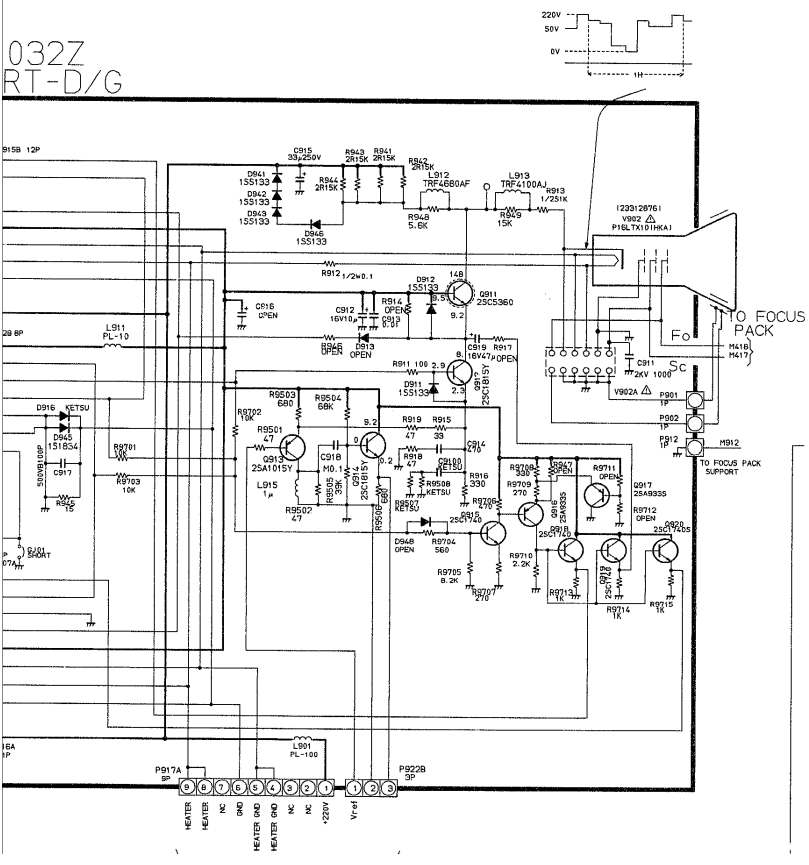

M033Z
CRT-D/B

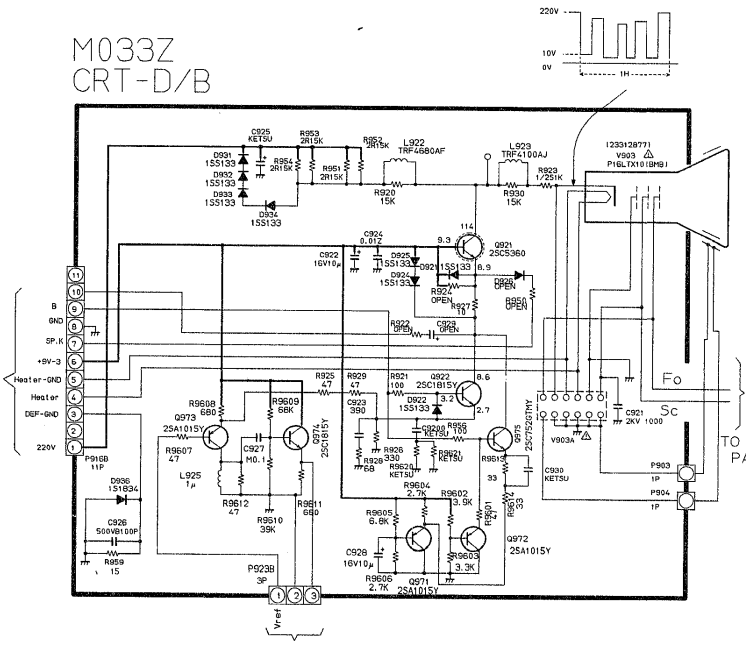

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

atic dia-

	DLTV MODEL	OTHER MODEL
C631	0.01	KETSU
C632	0.01	KETSU
CY630	0.01	KETSU
CS701	1000P	KETSU
CS702	1000P	KETSU
L634	TFM2011**	SHORT
L636	TEM2011**	SHORT
LY633	PL-2.2	SHORT
LY634	PL-2.2	SHORT
RS701	1K	SHORT
RS702	1K	SHORT

	50D9UXE 50D9UXH 50D9UXA 50D9UXM 61D9UXE 61D9UXH 61D9UXA 61D9UXM	50D9UXC 61D9UXC	43D9UXC	
M021Z RMT IN	PB9092-1	PB9092D-1	PB9092F-1	
M022 FRONT IN	PB9092-2	PB9092D-2	PB9092F-2	
M023Z FRONT CON	PB9092-3	PB9092D-3	———	
M024Z FRONT CON	———	———	PB9092F-4	

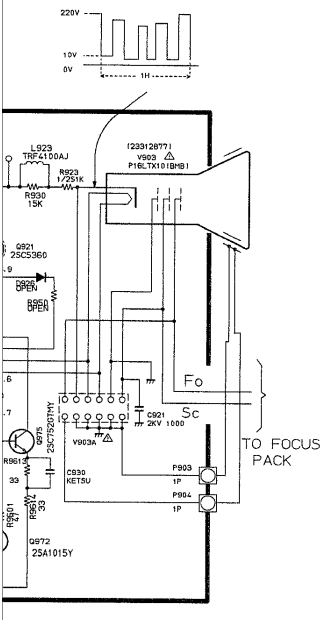

CRT-D/R	PB9752-1	PB9753-1	PB9752D-1	PB9752F-1	PB9752G-1
CRT-D/G	PB9752-2	PB9753-2	PB9752D-2	PB9752F-2	PB9752G-2
CRT-D/B	PB9752-3	PB9753-3	PB9752D-3	PB9752F-3	PB9752G-3
SVM-G	PB9752-4	PB9753-4	PB9752D-4	PB9752F-4	PB9752G-4
SVM-R	PB9752-5	PB9753-5	PB9752D-5	PB9752F-5	PB9752G-5
SVM-B	PB9752-6	PB9753-6	PB9752D-6	PB9752F-6	PB9752G-6
MODEL	50D9UXE 50D9UXA 50D9UXM 50D9UXH	61D9UXE 61D9UXA 61D9UXM 61D9UXH	43D9UXC	50D9UXC	61D9UXC

M021Z RMT IN UNIT

M023Z FRONT CONT UNIT





M031Z CRT-D/R

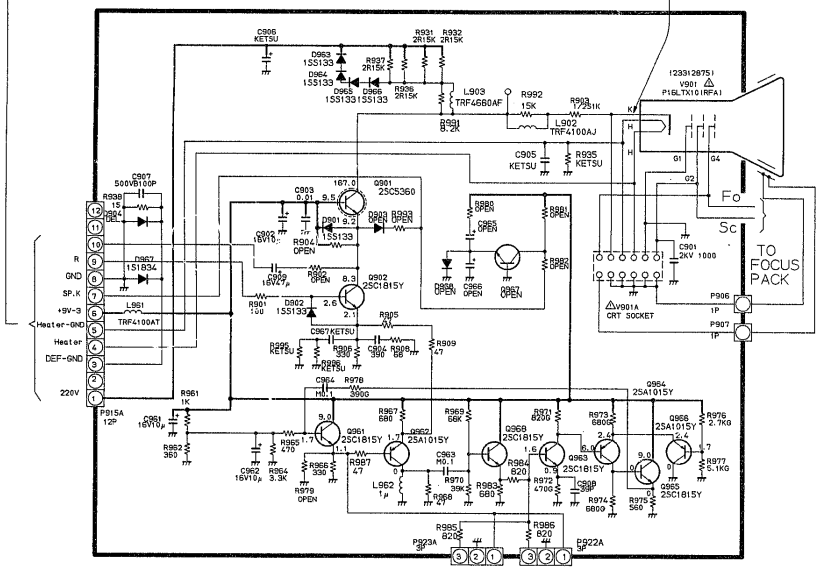

M032Z CRT-D/G

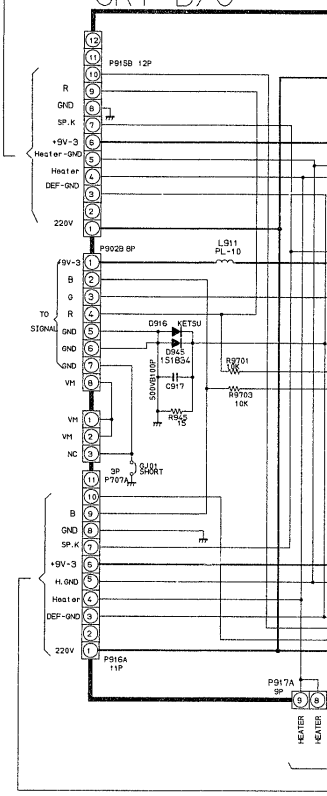

M035Z SVM R

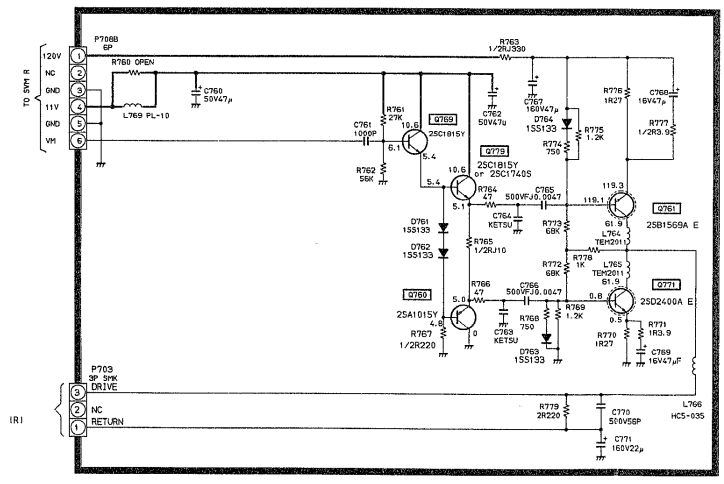

M034Z SVM G

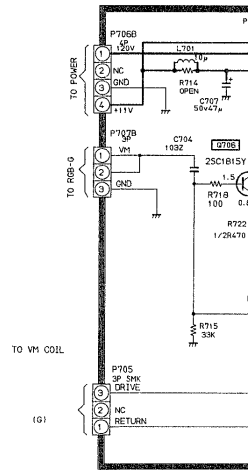

LY634	PL-2.2	SHO
RS701	1K	SHO
RS702	1K	SHO

M022Z FRONT IN UNIT





M032Z CRT-D/G

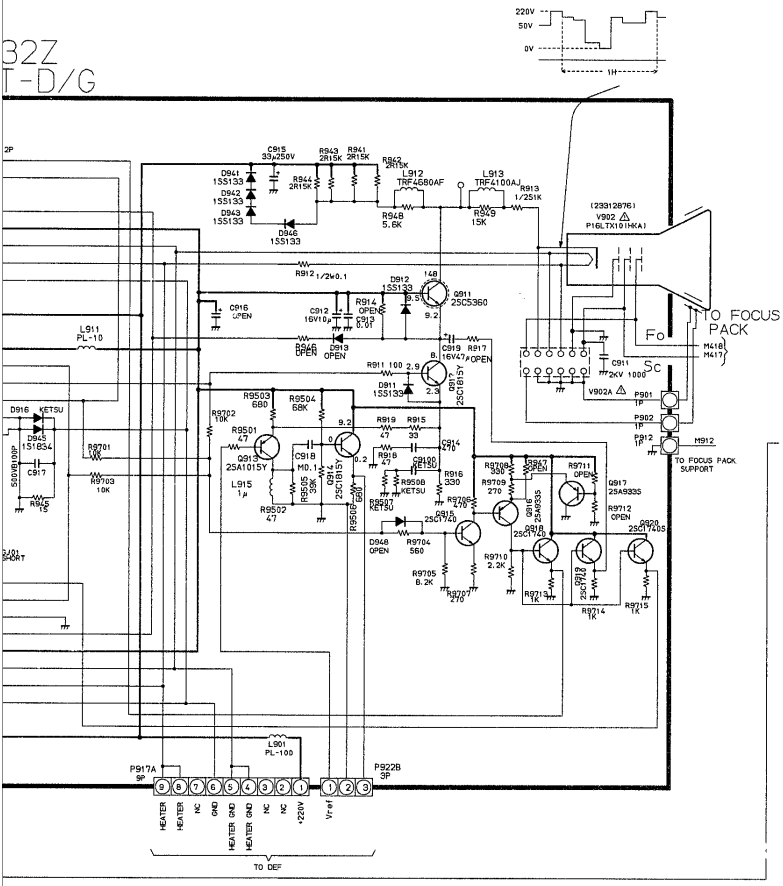

M033Z CRT-D/B

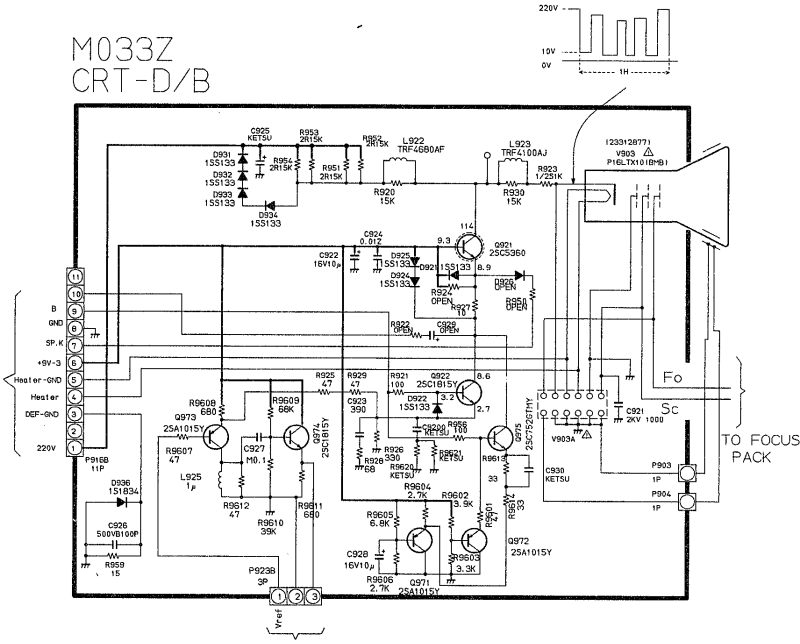

M034Z SVM G

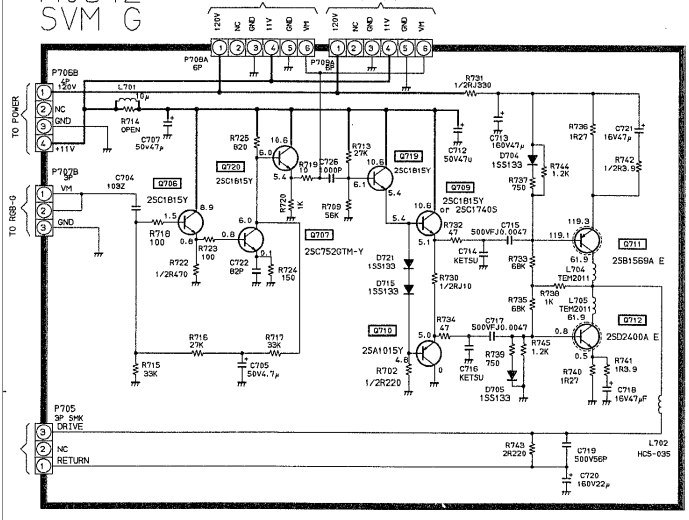

M036Z SVM B

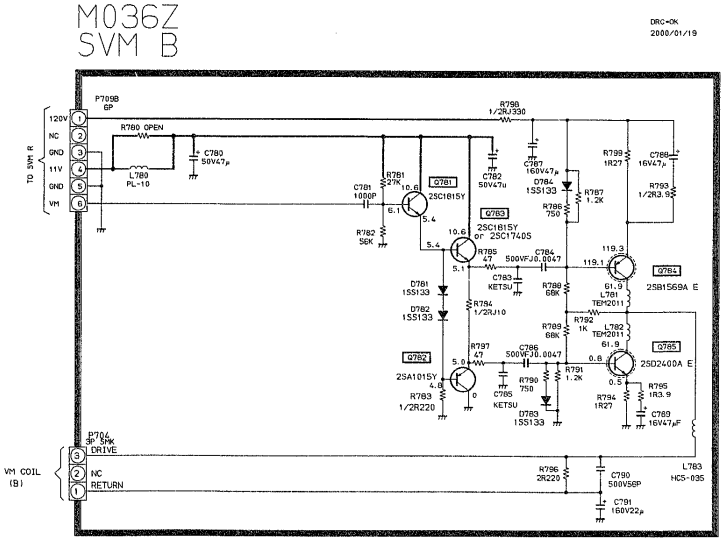

* KETSU means to open the circuit.

LT634	PL-2.2	SHORT
RS701	1K	SHORT
RS702	1K	SHORT

M023Z FRONT CON	PB9092-3	PB9092D-3	———	
M024Z FRONT CON	———	———	PB9092F-4	

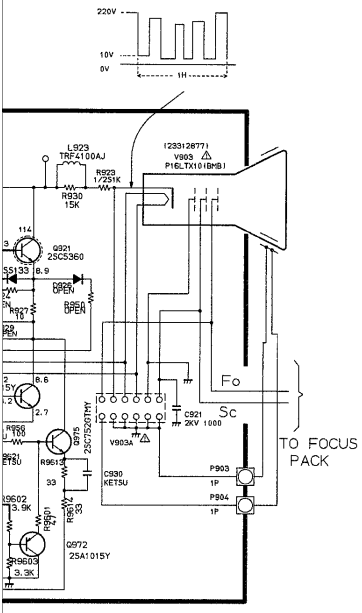

CRT-D/R	PB9752-1	PB9753-1	PB9752D-1	PB9752F-1	PB9752G-1
CRT-D/G	PB9752-2	PB9753-2	PB9752D-2	PB9752F-2	PB9752G-2
CRT-D/B	PB9752-3	PB9753-3	PB9752D-3	PB9752F-3	PB9752G-3
SVM-G	PB9752-4	PB9753-4	PB9752D-4	PB9752F-4	PB9752G-4
SVM-R	PB9752-5	PB9753-5	PB9752D-5	PB9752F-5	PB9752G-5
SVM-B	PB9752-6	PB9753-6	PB9752D-6	PB9752F-6	PB9752G-6
MODEL	50D9UXE 50D9UXA 50D9UXM 50D9UXH	61D9UXE 61D9UXA 61D9UXM 61D9UXH	43D9UXC	50D9UXC	61D9UXC

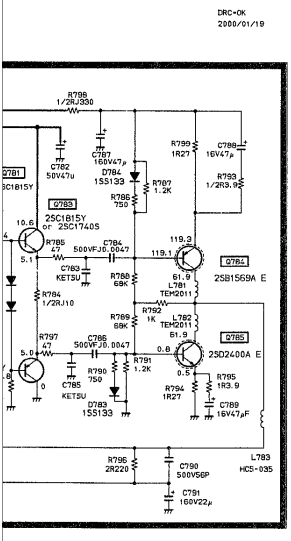

43D9UXC 50D9UXE, 61D9UXE
50D9UXC, 50D9UXH, 61D9UXH
61D9UXC 50D9UXR, 61D9UXA
50D9UXA, 61D9UXR
50D9UXM, 61D9UXM

uit.

CRT-D
SVM
FRONT
50D9U SERIES

PK3270

C D E F G H I J K L

11 12 13 14 15 16

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (7/7)
50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to chassis ground, line voltage 220 volts, colour bar signal. Voltages reading may vary ±20%.
2. All waveforms are taken using a wide band oscilloscope and a low capacity probe.
3. Waveforms are taken using a standard colour bar signal.
4. Make sure that CONTRAST and COLOUR controls are in mid position and BRIGHTNESS control is almost in maximum position. Set other controls for best picture.

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ● : Solder links.

EXPRESSION

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

40200009

U907 PB9486
DIGITAL CONVER

U909 PB9488
CONV-OUT

TO POWER

JYG

ROB-SW

DEF

CONVER/D-CONVER
50D9U SERIES

SCHEMATIC DIAGRAM MODEL : 50D9UXE / 50D9UXH (7/7)

50D9UXA

CAUTION: The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE on page 3. Do not degrade the safety of the receiver through improper servicing.

OBSERVATION OF VOLTAGES AND WAVEFORMS

1. Voltages read with VTVM from point shown to c
volts, colour bar signal. Voltages reading may v
2. All waveforms are taken using a wide band oscillo
3. Waveforms are taken using a standard colour ba
4. Make sure that CONTRAST and COLOUR con
BRIGHTNESS control is almost in maximum pos
picture.

40200009

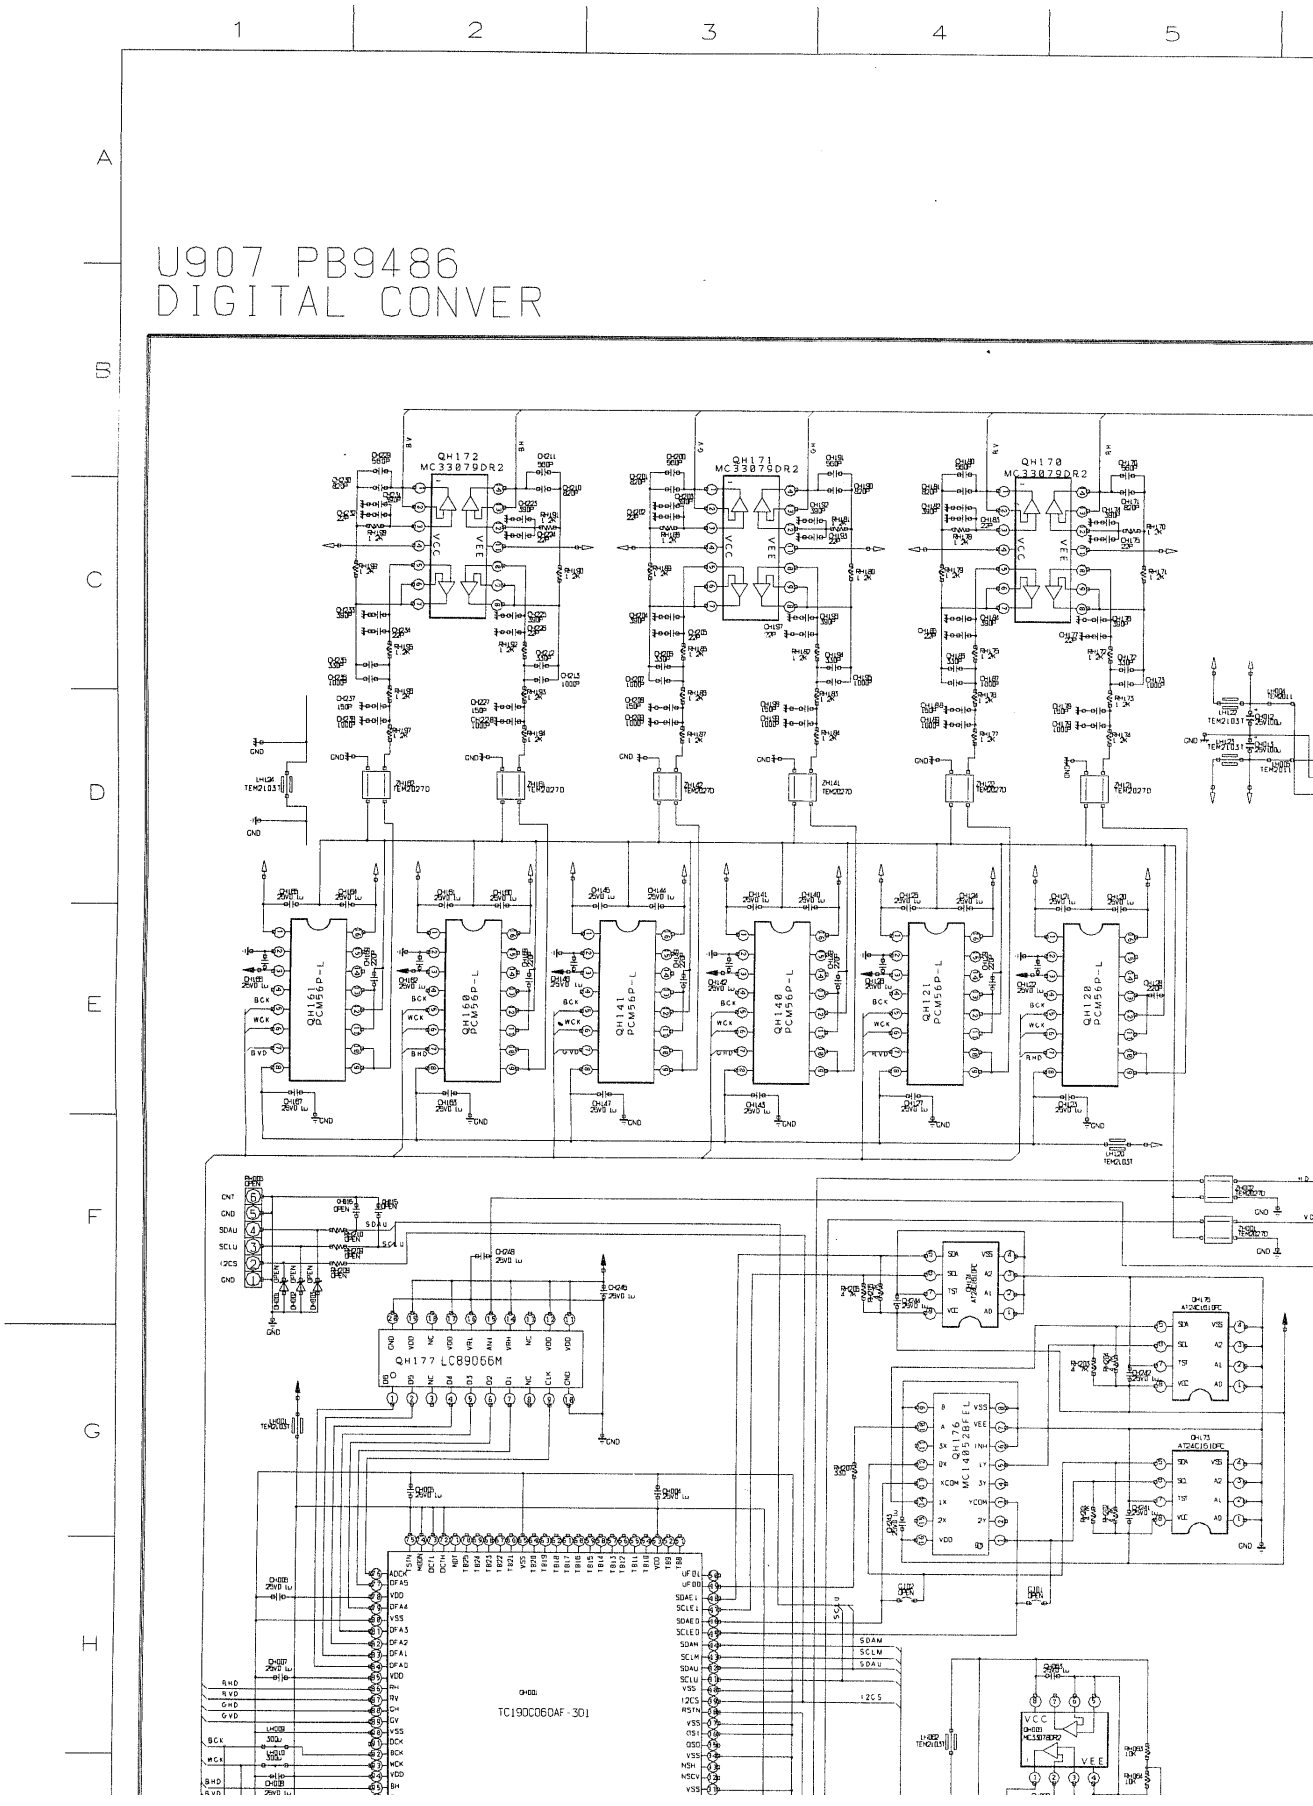

AND WAVEFORMS

n point shown to chassis ground, line voltage 220
ges reading may vary ±20%.
a wide band oscilloscope and a low capacity probe.
standard colour bar signal.
and COLOUR controls are in mid position and
t in maximum position. Set other controls for best

NOTES:

1. D.C. resistance value of a principal transformer is shown in this schematic diagram. These are measured for separated from the circuit.
2. The circuits are subject to change without notice.
3. ⬬ : Solder links.

EXPF

VALU

1. Res
2. Unl
sed
3. Unl
sed

5 | 6 | 7 | 8 | 9 | 10 | 11

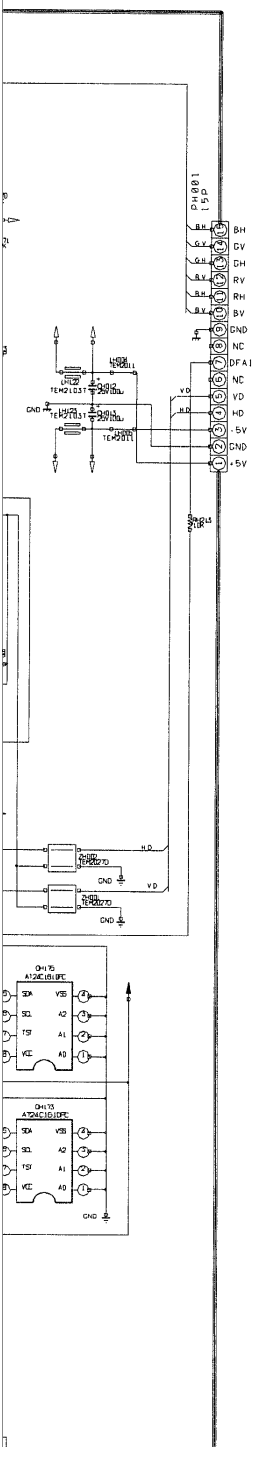

U909 PB9488
CONV-OUT

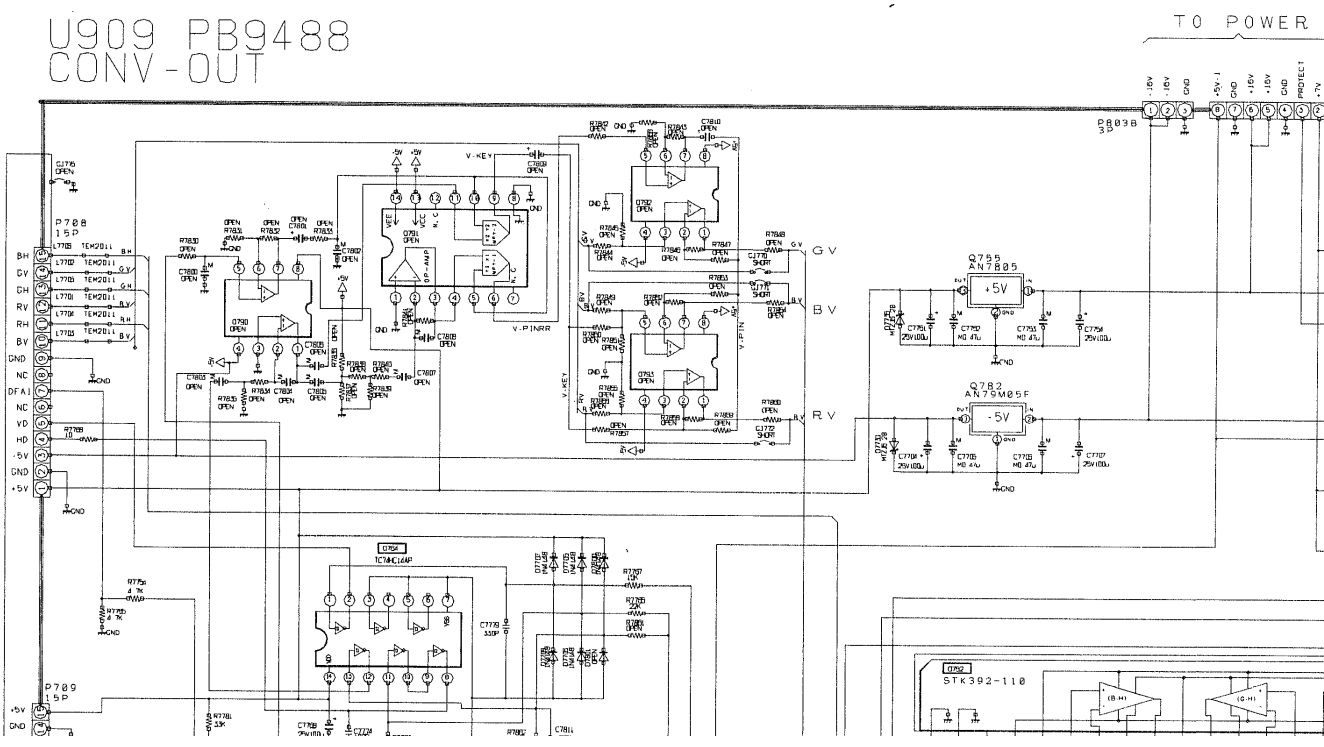

EXPRESSION

natic dia-

VALUE OF RESISTOR, CAPACITOR and INDUCTOR

1. Resistance is shown in ohm, k=1,000, M=1,000,000
2. Unless other wise noted in schematic, all capacitor values less than 1 are expressed in μF and the values more than 1 in pF.
3. Unless otherwise noted in schematic, all inductor values more than 1 are expressed in μH, and the values less than 1 in H.

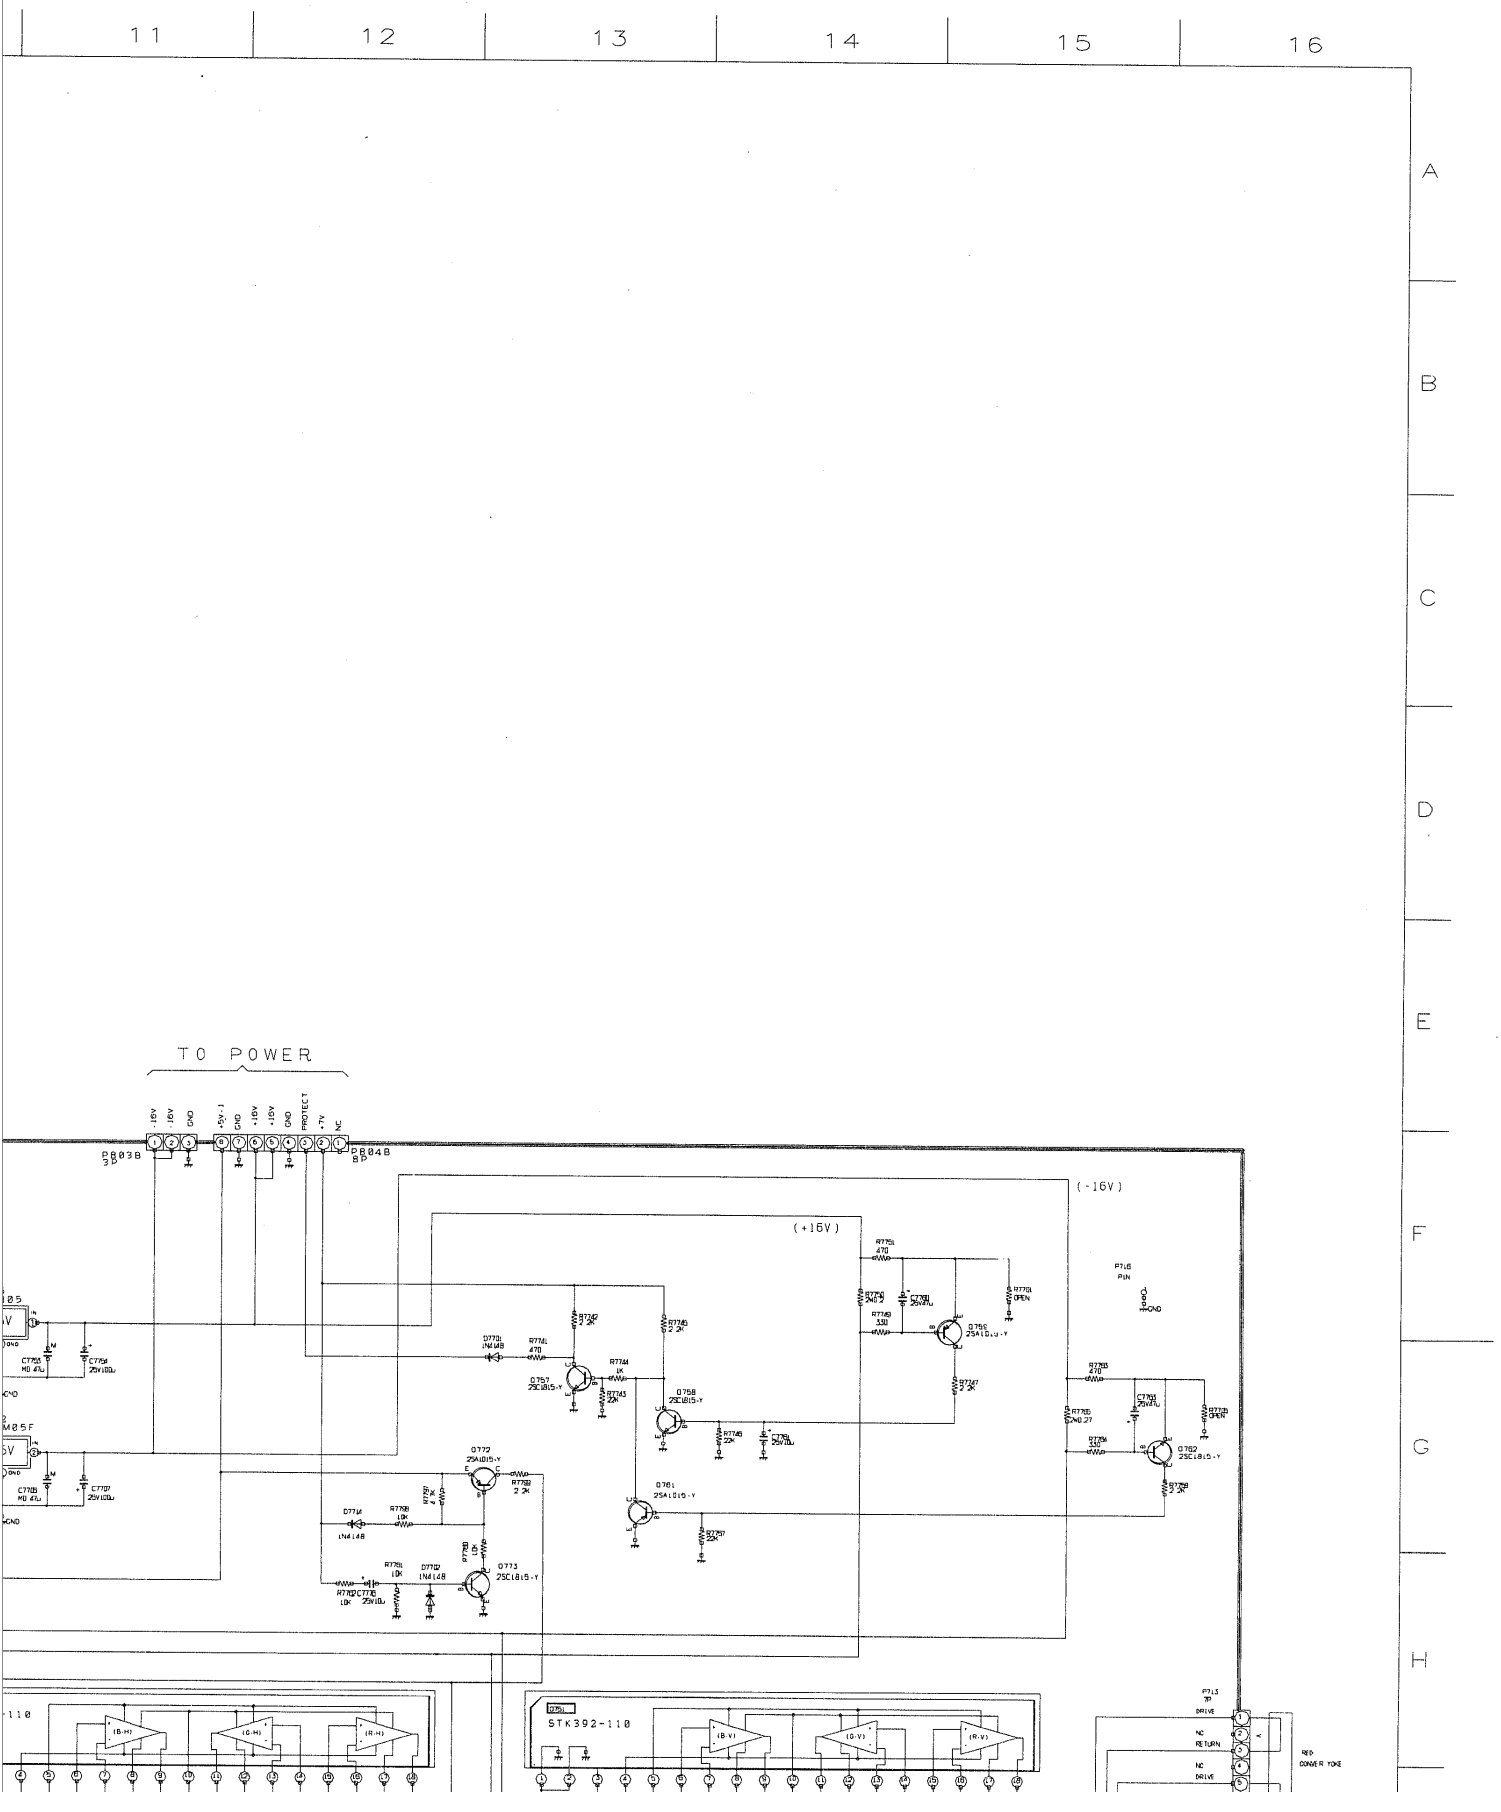

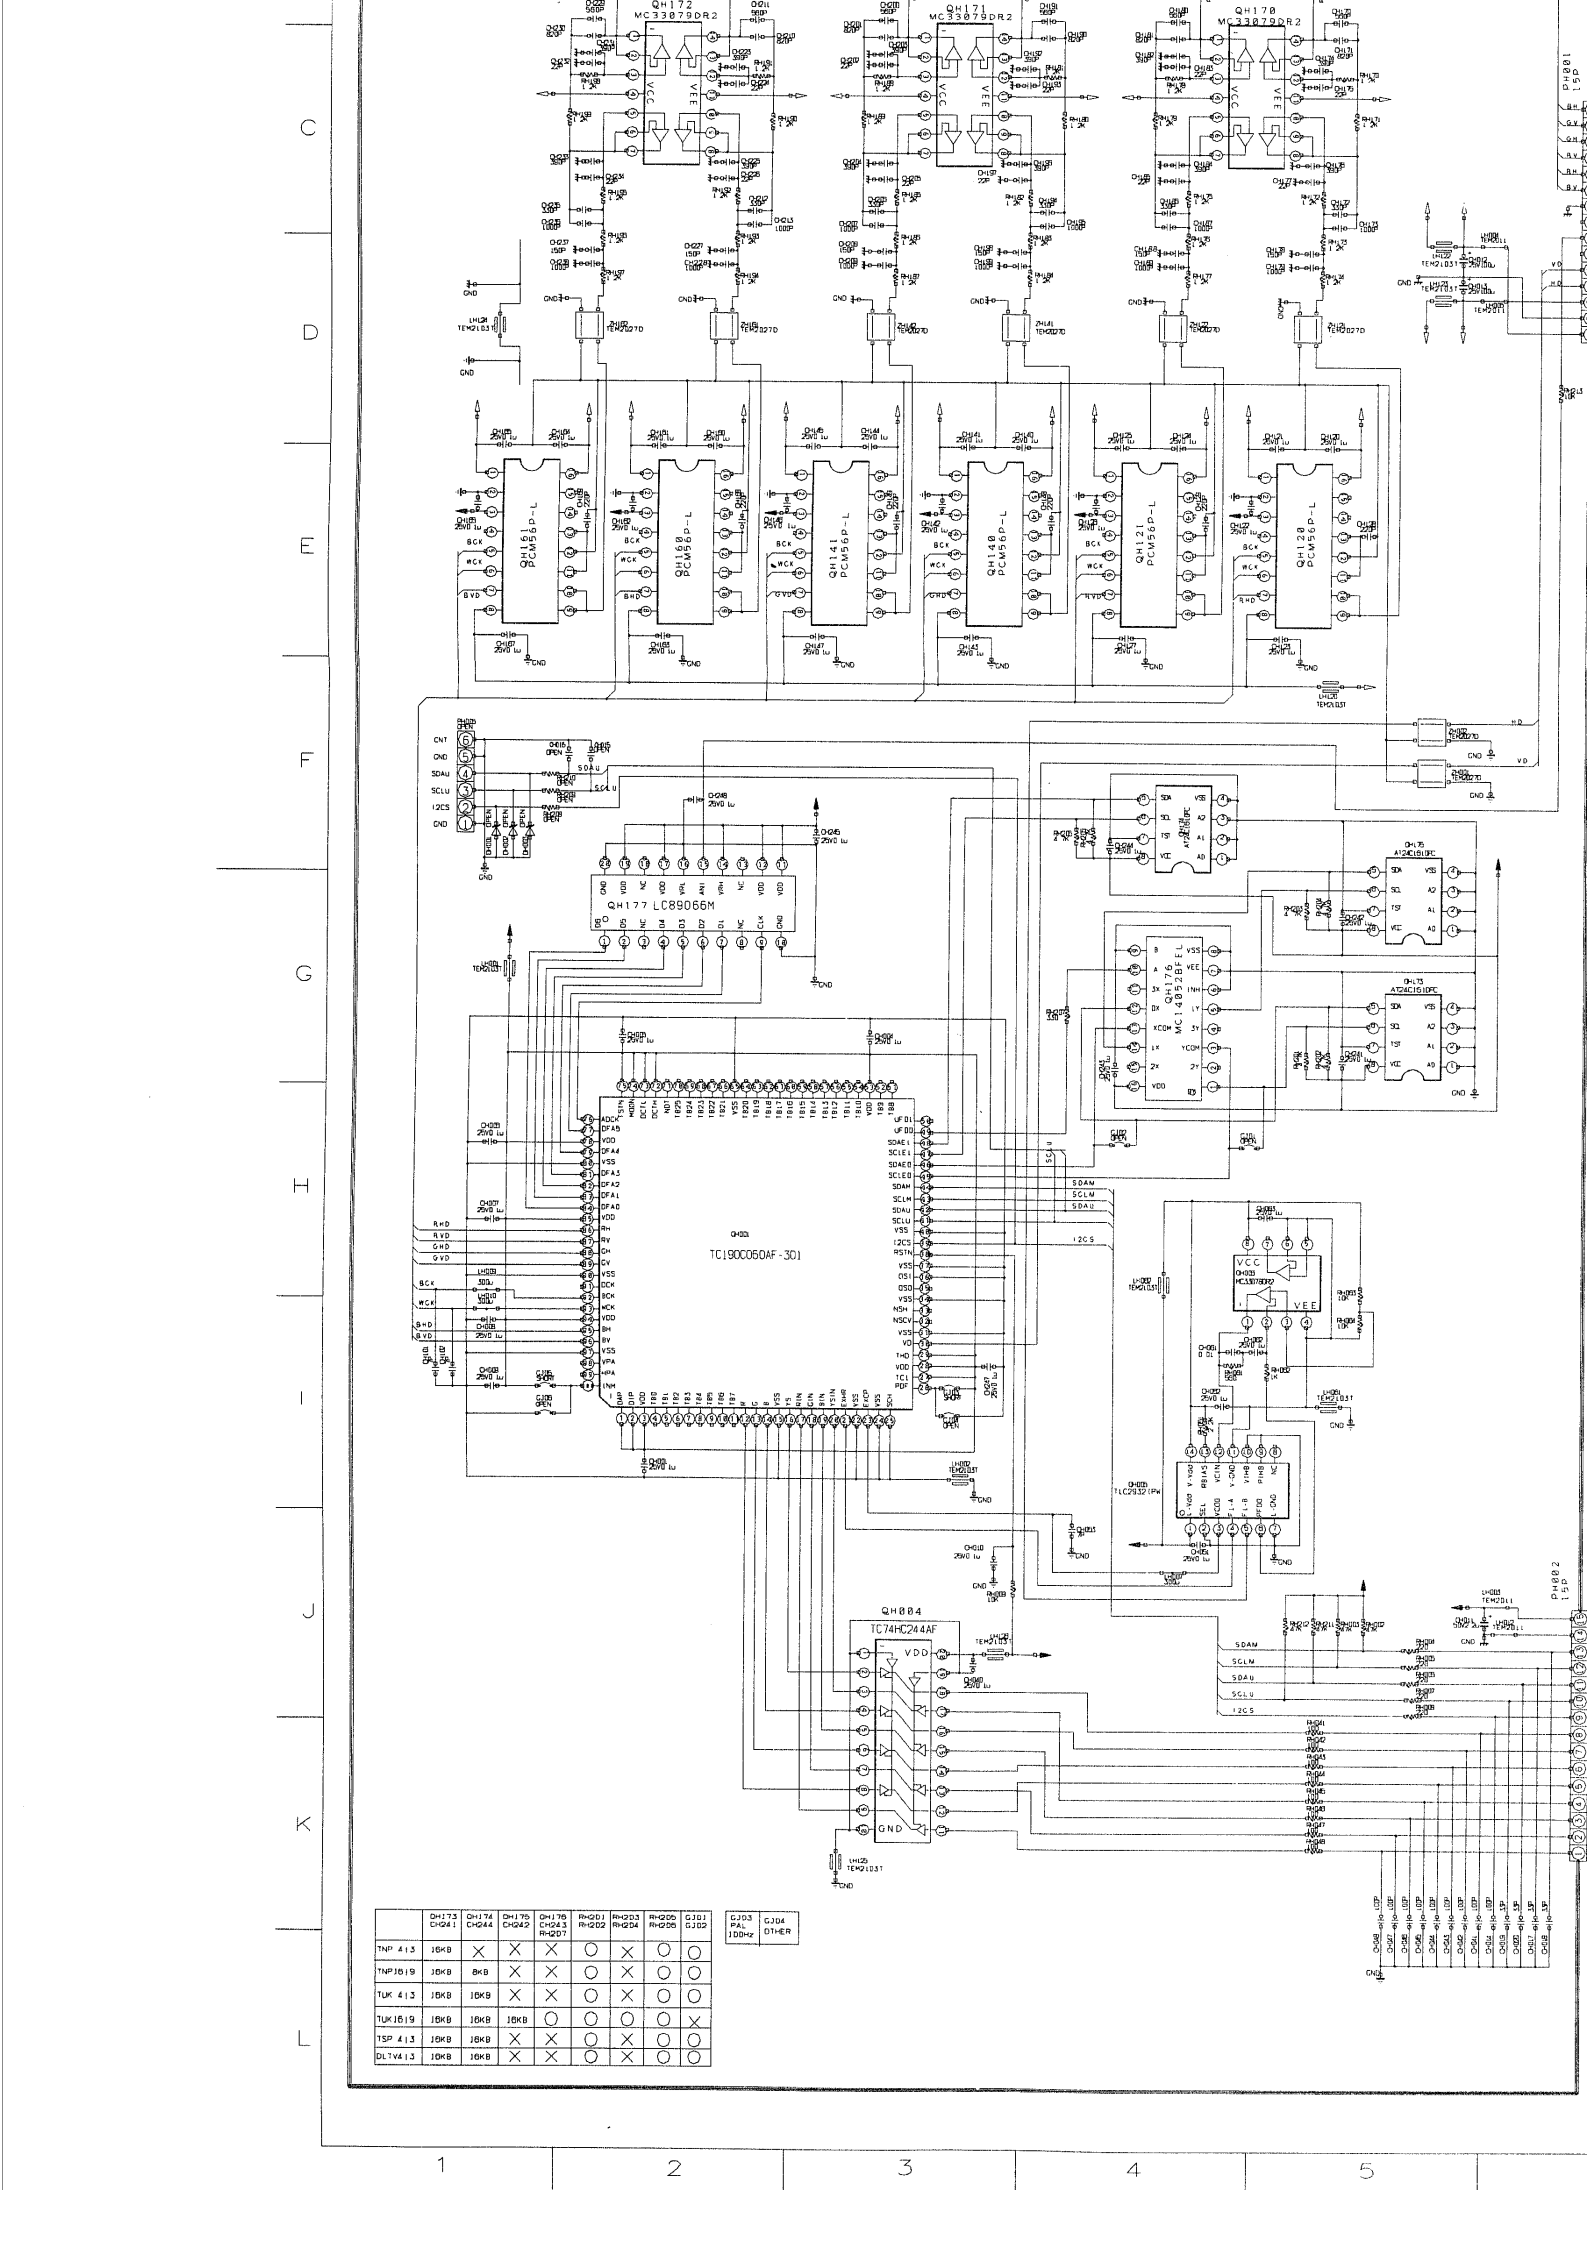

	QH173 CH241	QH174 CH244	QH175 CH242	QH176 CH243 RH207	RH201 RH202	RH203 RH204	RH205 RH206	GJ01 GJ02
TNP413	16KB	X	X	X	O	X	O	O
TNP1619	16KB	8KB	X	X	O	X	O	O
TUK413	16KB	16KB	X	X	O	X	O	O
TUK1619	16KB	16KB	16KB	O	O	O	O	X
TSP413	16KB	16KB	X	X	O	X	O	O
DLTV413	16KB	16KB	X	X	O	X	O	O

GJ03 PAL 100Hz	GJ04 OTHER

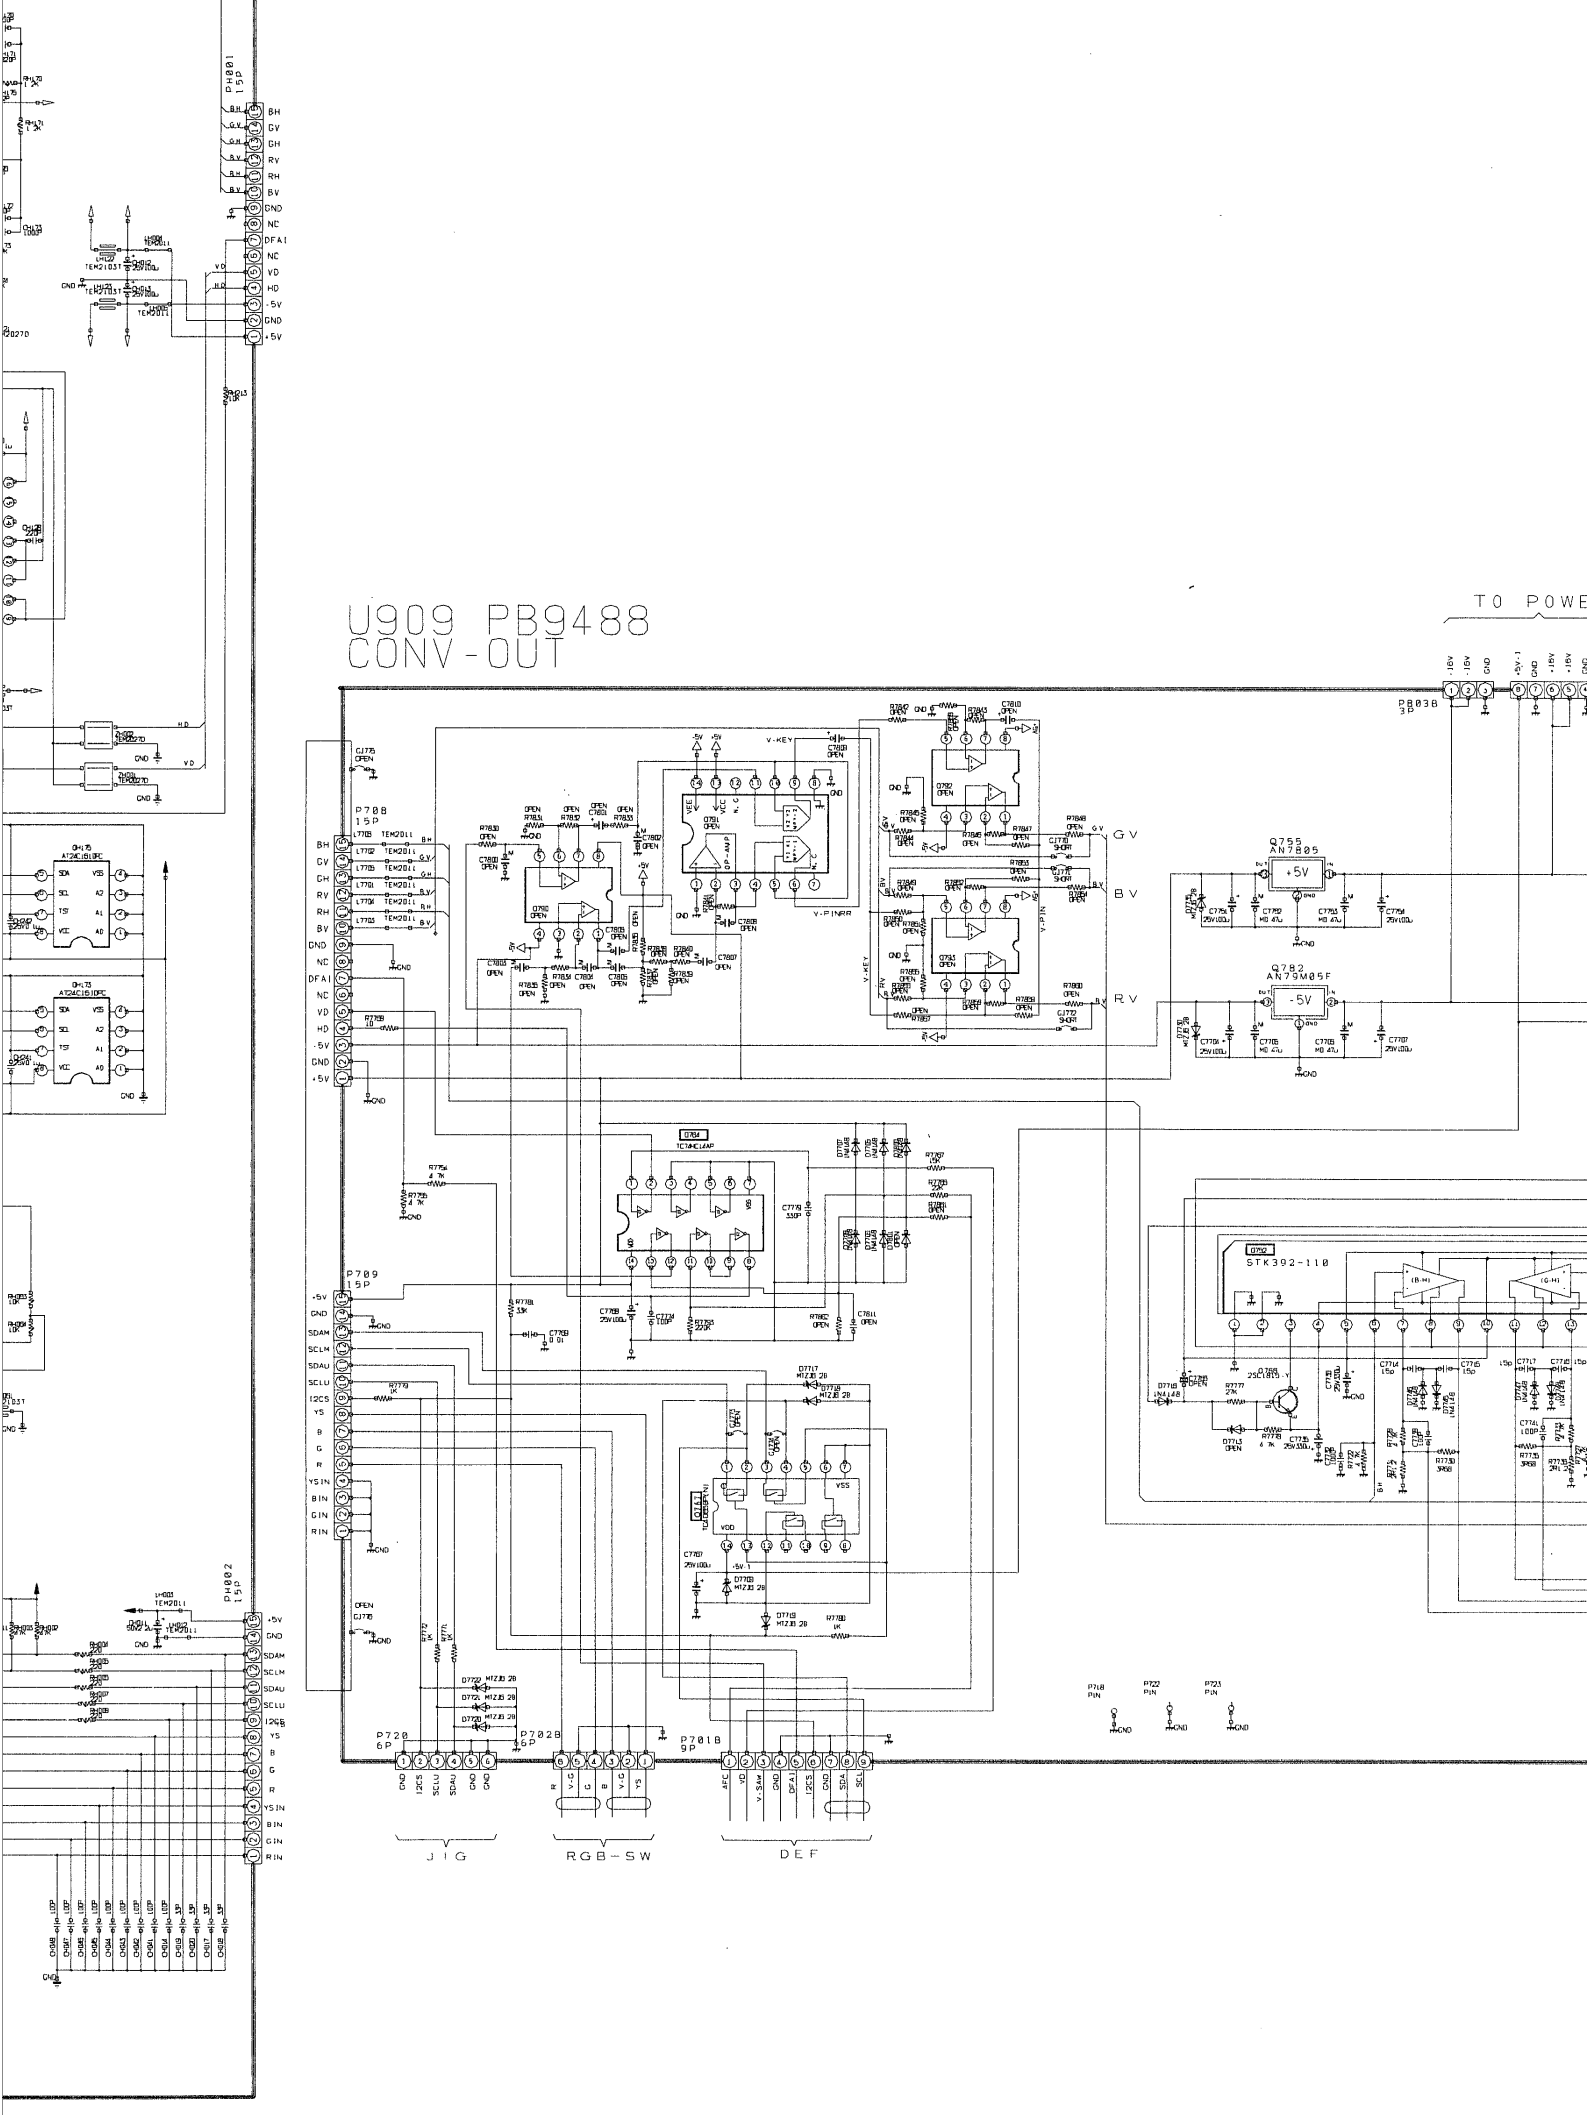
U909 PB9488
CONV-OUT
TO POWE
P708
15P
P709
15P
P720
6P
P702B
6P
P701B
9P
PB03B
P1001
15P
P1002
15P
Q755
AN7805
Q782
AN79M05F
Q784
TC74HC14AP
Q785
STK392-110
Q787
TC74HC14AP
Q788
2SC1815-Y
Q789
2SC1815-Y
Q790
2SA1048-Y
Q791
2SA1048-Y
Q792
2SA1048-Y
Q793
2SA1048-Y
Q794
2SA1048-Y
Q795
2SA1048-Y
Q796
2SA1048-Y
Q797
2SA1048-Y
Q798
2SA1048-Y
Q799
2SA1048-Y
Q7A0
2SA1048-Y
Q7A1
2SA1048-Y
Q7A2
2SA1048-Y
Q7A3
2SA1048-Y
Q7A4
2SA1048-Y
Q7A5
2SA1048-Y
Q7A6
2SA1048-Y
Q7A7
2SA1048-Y
Q7A8
2SA1048-Y
Q7A9
2SA1048-Y
Q7AA
2SA1048-Y
Q7AB
2SA1048-Y
Q7AC
2SA1048-Y
Q7AD
2SA1048-Y
Q7AE
2SA1048-Y
Q7AF
2SA1048-Y
Q7AG
2SA1048-Y
Q7AH
2SA1048-Y
Q7AI
2SA1048-Y
Q7AJ
2SA1048-Y
Q7AK
2SA1048-Y
Q7AL
2SA1048-Y
Q7AM
2SA1048-Y
Q7AN
2SA1048-Y
Q7AO
2SA1048-Y
Q7AP
2SA1048-Y
Q7AQ
2SA1048-Y
Q7AR
2SA1048-Y
Q7AS
2SA1048-Y
Q7AT
2SA1048-Y
Q7AU
2SA1048-Y
Q7AV
2SA1048-Y
Q7AW
2SA1048-Y
Q7AX
2SA1048-Y
Q7AY
2SA1048-Y
Q7AZ
2SA1048-Y
Q7B0
2SA1048-Y
Q7B1
2SA1048-Y
Q7B2
2SA1048-Y
Q7B3
2SA1048-Y
Q7B4
2SA1048-Y
Q7B5
2SA1048-Y
Q7B6
2SA1048-Y
Q7B7
2SA1048-Y
Q7B8
2SA1048-Y
Q7B9
2SA1048-Y
Q7BA
2SA1048-Y
Q7BB
2SA1048-Y
Q7BC
2SA1048-Y
Q7BD
2SA1048-Y
Q7BE
2SA1048-Y
Q7BF
2SA1048-Y
Q7BG
2SA1048-Y
Q7BH
2SA1048-Y
Q7BI
2SA1048-Y
Q7BJ
2SA1048-Y
Q7BK
2SA1048-Y
Q7BL
2SA1048-Y
Q7BM
2SA1048-Y
Q7BN
2SA1048-Y
Q7BO
2SA1048-Y
Q7BP
2SA1048-Y
Q7BQ
2SA1048-Y
Q7BR
2SA1048-Y
Q7BS
2SA1048-Y
Q7BT
2SA1048-Y
Q7BU
2SA1048-Y
Q7BV
2SA1048-Y
Q7BW
2SA1048-Y
Q7BX
2SA1048-Y
Q7BY
2SA1048-Y
Q7BZ
2SA1048-Y
Q7C0
2SA1048-Y
Q7C1
2SA1048-Y
Q7C2
2SA1048-Y
Q7C3
2SA1048-Y
Q7C4
2SA1048-Y
Q7C5
2SA1048-Y
Q7C6
2SA1048-Y
Q7C7
2SA1048-Y
Q7C8
2SA1048-Y
Q7C9
2SA1048-Y
Q7CA
2SA1048-Y
Q7CB
2SA1048-Y
Q7CC
2SA1048-Y
Q7CD
2SA1048-Y
Q7CE
2SA1048-Y
Q7CF
2SA1048-Y
Q7CG
2SA1048-Y
Q7CH
2SA1048-Y
Q7CI
2SA1048-Y
Q7CJ
2SA1048-Y
Q7CK
2SA1048-Y
Q7CL
2SA1048-Y
Q7CM
2SA1048-Y
Q7CN
2SA1048-Y
Q7CO
2SA1048-Y
Q7CP
2SA1048-Y
Q7CQ
2SA1048-Y
Q7CR
2SA1048-Y
Q7CS
2SA1048-Y
Q7CT
2SA1048-Y
Q7CU
2SA1048-Y
Q7CV
2SA1048-Y
Q7CW
2SA1048-Y
Q7CX
2SA1048-Y
Q7CY
2SA1048-Y
Q7CZ
2SA1048-Y
Q7D0
2SA1048-Y
Q7D1
2SA1048-Y
Q7D2
2SA1048-Y
Q7D3
2SA1048-Y
Q7D4
2SA1048-Y
Q7D5
2SA1048-Y
Q7D6
2SA1048-Y
Q7D7
2SA1048-Y
Q7D8
2SA1048-Y
Q7D9
2SA1048-Y
Q7DA
2SA1048-Y
Q7DB
2SA1048-Y
Q7DC
2SA1048-Y
Q7DD
2SA1048-Y
Q7DE
2SA1048-Y
Q7DF
2SA1048-Y
Q7DG
2SA1048-Y
Q7DH
2SA1048-Y
Q7DI
2SA1048-Y
Q7DJ
2SA1048-Y
Q7DK
2SA1048-Y
Q7DL
2SA1048-Y
Q7DM
2SA1048-Y
Q7DN
2SA1048-Y
Q7DO
2SA1048-Y
Q7DP
2SA1048-Y
Q7DQ
2SA1048-Y
Q7DR
2SA1048-Y
Q7DS
2SA1048-Y
Q7DT
2SA1048-Y
Q7DU
2SA1048-Y
Q7DV
2SA1048-Y
Q7DW
2SA1048-Y
Q7DX
2SA1048-Y
Q7DY
2SA1048-Y
Q7DZ
2SA1048-Y
Q7E0
2SA1048-Y
Q7E1
2SA1048-Y
Q7E2
2SA1048-Y
Q7E3
2SA1048-Y
Q7E4
2SA1048-Y
Q7E5
2SA1048-Y
Q7E6
2SA1048-Y
Q7E7
2SA1048-Y
Q7E8
2SA1048-Y
Q7E9
2SA1048-Y
Q7EA
2SA1048-Y
Q7EB
2SA1048-Y
Q7EC
2SA1048-Y
Q7ED
2SA1048-Y
Q7EE
2SA1048-Y
Q7EF
2SA1048-Y
Q7EG
2SA1048-Y
Q7EH
2SA1048-Y
Q7EI
2SA1048-Y
Q7EJ
2SA1048-Y
Q7EK
2SA1048-Y
Q7EL
2SA1048-Y
Q7EM
2SA1048-Y
Q7EN
2SA1048-Y
Q7EO
2SA1048-Y
Q7EP
2SA1048-Y
Q7EQ
2SA1048-Y
Q7ER
2SA1048-Y
Q7ES
2SA1048-Y
Q7ET
2SA1048-Y
Q7EU
2SA1048-Y
Q7EV
2SA1048-Y
Q7EW
2SA1048-Y
Q7EX
2SA1048-Y
Q7EY
2SA1048-Y
Q7EZ
2SA1048-Y
Q7F0
2SA1048-Y
Q7F1
2SA1048-Y
Q7F2
2SA1048-Y
Q7F3
2SA1048-Y
Q7F4
2SA1048-Y
Q7F5
2SA1048-Y
Q7F6
2SA1048-Y
Q7F7
2SA1048-Y
Q7F8
2SA1048-Y
Q7F9
2SA1048-Y
Q7FA
2SA1048-Y
Q7FB
2SA1048-Y
Q7FC
2SA1048-Y
Q7FD
2SA1048-Y
Q7FE
2SA1048-Y
Q7FF
2SA1048-Y
Q7FG
2SA1048-Y
Q7FH
2SA1048-Y
Q7FI
2SA1048-Y
Q7FJ
2SA1048-Y
Q7FK
2SA1048-Y
Q7FL
2SA1048-Y
Q7FM
2SA1048-Y
Q7FN
2SA1048-Y
Q7FO
2SA1048-Y
Q7FP
2SA1048-Y
Q7FQ
2SA1048-Y
Q7FR
2SA1048-Y
Q7FS
2SA1048-Y
Q7FT
2SA1048-Y
Q7FU
2SA1048-Y
Q7FV
2SA1048-Y
Q7FW
2SA1048-Y
Q7FX
2SA1048-Y
Q7FY
2SA1048-Y
Q7FZ
2SA1048-Y
Q7G0
2SA1048-Y
Q7G1
2SA1048-Y
Q7G2
2SA1048-Y
Q7G3
2SA1048-Y
Q7G4
2SA1048-Y
Q7G5
2SA1048-Y
Q7G6
2SA1048-Y
Q7G7
2SA1048-Y
Q7G8
2SA1048-Y
Q7G9
2SA1048-Y
Q7GA
2SA1048-Y
Q7GB
2SA1048-Y
Q7GC
2SA1048-Y
Q7GD
2SA1048-Y
Q7GE
2SA1048-Y
Q7GF
2SA1048-Y
Q7GG
2SA1048-Y
Q7GH
2SA1048-Y
Q7GI
2SA1048-Y
Q7GJ
2SA1048-Y
Q7GK
2SA1048-Y
Q7GL
2SA1048-Y
Q7GM
2SA1048-Y
Q7GN
2SA1048-Y
Q7GO
2SA1048-Y
Q7GP
2SA1048-Y
Q7GQ
2SA1048-Y
Q7GR
2SA1048-Y
Q7GS
2SA1048-Y
Q7GT
2SA1048-Y
Q7GU
2SA1048-Y
Q7GV
2SA1048-Y
Q7GW
2SA1048-Y
Q7GX
2SA1048-Y
Q7GY
2SA1048-Y
Q7GZ
2SA1048-Y
Q7H0
2SA1048-Y
Q7H1
2SA1048-Y
Q7H2
2SA1048-Y
Q7H3
2SA1048-Y
Q7H4
2SA1048-Y
Q7H5
2SA1048-Y
Q7H6
2SA1048-Y
Q7H7
2SA1048-Y
Q7H8
2SA1048-Y
Q7H9
2SA1048-Y
Q7HA
2SA1048-Y
Q7HB
2SA1048-Y
Q7HC
2SA1048-Y
Q7HD
2SA1048-Y
Q7HE
2SA1048-Y
Q7HF
2SA1048-Y
Q7HG
2SA1048-Y
Q7HH
2SA1048-Y
Q7HI
2SA1048-Y
Q7HJ
2SA1048-Y
Q7HK
2SA1048-Y
Q7HL
2SA1048-Y
Q7HM
2SA1048-Y
Q7HN
2SA1048-Y
Q7HO
2SA1048-Y
Q7HP
2SA1048-Y
Q7HQ
2SA1048-Y
Q7HR
2SA1048-Y
Q7HS
2SA1048-Y
Q7HT
2SA1048-Y
Q7HU
2SA1048-Y
Q7HV
2SA1048-Y
Q7HW
2SA1048-Y
Q7HX
2SA1048-Y
Q7HY
2SA1048-Y
Q7HZ
2SA1048-Y
Q7I0
2SA1048-Y
Q7I1
2SA1048-Y
Q7I2
2SA1048-Y
Q7I3
2SA1048-Y
Q7I4
2SA1048-Y
Q7I5
2SA1048-Y
Q7I6
2SA1048-Y
Q7I7
2SA1048-Y
Q7I8
2SA1048-Y
Q7I9
2SA1048-Y
Q7IA
2SA1048-Y
Q7IB
2SA1048-Y
Q7IC
2SA1048-Y
Q7ID
2SA1048-Y
Q7IE
2SA1048-Y
Q7IF
2SA1048-Y
Q7IG
2SA1048-Y
Q7IH
2SA1048-Y
Q7II
2SA1048-Y
Q7IJ
2SA1048-Y
Q7IK
2SA1048-Y
Q7IL
2SA1048-Y
Q7IM
2SA1048-Y
Q7IN
2SA1048-Y
Q7IO
2SA1048-Y
Q7IP
2SA1048-Y
Q7IQ
2SA1048-Y
Q7IR
2SA1048-Y
Q7IS
2SA1048-Y
Q7IT
2SA1048-Y
Q7IU
2SA1048-Y
Q7IV
2SA1048-Y
Q7IW
2SA1048-Y
Q7IX
2SA1048-Y
Q7IY
2SA1048-Y
Q7IZ
2SA1048-Y
Q7J0
2SA1048-Y
Q7J1
2SA1048-Y
Q7J2
2SA1048-Y
Q7J3
2SA1048-Y
Q7J4
2SA1048-Y
Q7J5
2SA1048-Y
Q7J6
2SA1048-Y
Q7J7
2SA1048-Y
Q7J8
2SA1048-Y
Q7J9
2SA1048-Y
Q7JA
2SA1048-Y
Q7JB
2SA1048-Y
Q7JC
2SA1048-Y
Q7JD
2SA1048-Y
Q7JE
2SA1048-Y
Q7JF
2SA1048-Y
Q7JG
2SA1048-Y
Q7JH
2SA1048-Y
Q7JI
2SA1048-Y
Q7JJ
2SA1048-Y
Q7JK
2SA1048-Y
Q7JL
2SA1048-Y
Q7JM
2SA1048-Y
Q7JN
2SA1048-Y
Q7JO
2SA1048-Y
Q7JP
2SA1048-Y
Q7JQ
2SA1048-Y
Q7JR
2SA1048-Y
Q7JS
2SA1048-Y
Q7JT
2SA1048-Y
Q7JU
2SA1048-Y
Q7JV
2SA1048-Y
Q7JW
2SA1048-Y
Q7JX
2SA1048-Y
Q7JY
2SA1048-Y
Q7JZ
2SA1048-Y
Q7K0
2SA1048-Y
Q7K1
2SA1048-Y
Q7K2
2SA1048-Y
Q7K3
2SA1048-Y
Q7K4
2SA1048-Y
Q7K5
2SA1048-Y
Q7K6
2SA1048-Y
Q7K7
2SA1048-Y
Q7K8
2SA1048-Y
Q7K9
2SA1048-Y
Q7KA
2SA1048-Y
Q7KB
2SA1048-Y
Q7KC
2SA1048-Y
Q7KD
2SA1048-Y
Q7KE
2SA1048-Y
Q7KF
2SA1048-Y
Q7KG
2SA1048-Y
Q7KH
2SA1048-Y
Q7KI
2SA1048-Y
Q7KJ
2SA1048-Y
Q7KK
2SA1048-Y
Q7KL
2SA1048-Y
Q7KM
2SA1048-Y
Q7KN
2SA1048-Y
Q7KO
2SA1048-Y
Q7KP
2SA1048-Y
Q7KQ
2SA1048-Y
Q7KR
2SA1048-Y
Q7KS
2SA1048-Y
Q7KT
2SA1048-Y
Q7KU
2SA1048-Y
Q7KV
2SA1048-Y
Q7KW
2SA1048-Y
Q7KX
2SA1048-Y
Q7KY
2SA1048-Y
Q7KZ
2SA1048-Y
Q7L0
2SA1048-Y
Q7L1
2SA1048-Y
Q7L2
2SA1048-Y
Q7L3
2SA1048-Y
Q7L4
2SA1048-Y
Q7L5
2SA1048-Y
Q7L6
2SA1048-Y
Q7L7
2SA1048-Y
Q7L8
2SA1048-Y
Q7L9
2SA1048-Y
Q7LA
2SA1048-Y
Q7LB
2SA1048-Y
Q7LC
2SA1048-Y
Q7LD
2SA1048-Y
Q7LE
2SA1048-Y
Q7LF
2SA1048-Y
Q7LG
2SA1048-Y
Q7LH
2SA1048-Y
Q7LI
2SA1048-Y
Q7LJ
2SA1048-Y
Q7LK
2SA1048-Y
Q7LL
2SA1048-Y
Q7LM
2SA1048-Y
Q7LN
2SA1048-Y
Q7LO
2SA1048-Y
Q7LP
2SA1048-Y
Q7LQ
2SA1048-Y
Q7LR
2SA1048-Y
Q7LS
2SA1048-Y
Q7LT
2SA1048-Y
Q7LU
2SA1048-Y
Q7LV
2SA1048-Y
Q7LW
2SA1048-Y
Q7LX
2SA1048-Y
Q7LY
2SA1048-Y
Q7LZ
2SA1048-Y
Q7M0
2SA1048-Y
Q7M1
2SA1048-Y
Q7M2
2SA1048-Y
Q7M3
2SA1048-Y
Q7M4
2SA1048-Y
Q7M5
2SA1048-Y
Q7M6
2SA1048-Y
Q7M7
2SA1048-Y
Q7M8
2SA1048-Y
Q7M9
2SA1048-Y
Q7MA
2SA1048-Y
Q7MB
2SA1048-Y
Q7MC
2SA1048-Y
Q7MD
2SA1048-Y
Q7ME
2SA1048-Y
Q7MF
2SA1048-Y
Q7MG
2SA1048-Y
Q7MH
2SA1048-Y
Q7MI
2SA1048-Y
Q7MJ
2SA1048-Y
Q7MK
2SA1048-Y
Q7ML
2SA1048-Y
Q7MM
2SA1048-Y
Q7MN
2SA1048-Y
Q7MO
2SA1048-Y
Q7MP
2SA1048-Y
Q7MQ
2SA1048-Y
Q7MR
2SA1048-Y
Q7MS
2SA1048-Y
Q7MT
2SA1048-Y
Q7MU
2SA1048-Y
Q7MV
2SA1048-Y
Q7MW
2SA1048-Y
Q7MX
2SA1048-Y
Q7MY
2SA1048-Y
Q7MZ
2SA1048-Y
Q7N0
2SA1048-Y
Q7N1
2SA1048-Y
Q7N2
2SA1048-Y
Q7N3
2SA1048-Y
Q7N4
2SA1048-Y
Q7N5
2SA1048-Y
Q7N6
2SA1048-Y
Q7N7
2SA1048-Y
Q7N8
2SA1048-Y
Q7N9
2SA1048-Y
Q7NA
2SA1048-Y
Q7NB
2SA1048-Y
Q7NC
2SA1048-Y
Q7ND
2SA1048-Y
Q7NE
2SA1048-Y
Q7NF
2SA1048-Y
Q7NG
2SA1048-Y
Q7NH
2SA1048-Y
Q7NI
2SA1048-Y
Q7NJ
2SA1048-Y
Q7NK
2SA1048-Y
Q7NL
2SA1048-Y
Q7NM
2SA1048-Y
Q7NN
2SA1048-Y
Q7NO
2SA1048-Y
Q7NP
2SA1048-Y
Q7NQ
2SA1048-Y
Q7NR
2SA1048-Y
Q7NS
2SA1048-Y
Q7NT
2SA1048-Y
Q7NU
2SA1048-Y
Q7NV
2SA1048-Y
Q7NW
2SA1048-Y
Q7NX
2SA1048-Y
Q7NY
2SA1048-Y
Q7NZ
2SA1048-Y
Q7O0
2SA1048-Y
Q7O1
2SA1048-Y
Q7O2
2SA1048-Y
Q7O3
2SA1048-Y
Q7O4
2SA1048-Y
Q7O5
2SA1048-Y
Q7O6
2SA1048-Y
Q7O7
2SA1048-Y
Q7O8
2SA1048-Y
Q7O9
2SA1048-Y
Q7OA
2SA1048-Y
Q7OB
2SA1048-Y
Q7OC
2SA1048-Y
Q7OD
2SA1048-Y
Q7OE
2SA1048-Y
Q7OF
2SA1048-Y
Q7OG
2SA1048-Y
Q7OH
2SA1048-Y
Q7OI
2SA1048-Y
Q7OJ
2SA1048-Y
Q7OK
2SA1048-Y
Q7OL
2SA1048-Y
Q7OM
2SA1048-Y
Q7ON
2SA1048-Y
Q7OO
2SA1048-Y
Q7OP
2SA1048-Y
Q7OQ
2SA1048-Y
Q7OR
2SA1048-Y
Q7OS
2SA1048-Y
Q7OT
2SA1048-Y
Q7OU
2SA1048-Y
Q7OV
2SA1048-Y
Q7OW
2SA1048-Y
Q7OX
2SA1048-Y
Q7OY
2SA1048-Y
Q7OZ
2SA1048-Y
Q7P0
2SA1048-Y
Q7P1
2SA1048-Y
Q7P2
2SA1048-Y
Q7P3
2SA1048-Y
Q7P4
2SA1048-Y
Q7P5
2SA1048-Y
Q7P6
2SA1048-Y
Q7P7
2SA1048-Y
Q7P8
2SA1048-Y
Q7P9
2SA1048-Y
Q7PA
2SA1048-Y
Q7PB
2SA1048-Y
Q7PC
2SA1048-Y
Q7PD
2SA1048-Y
Q7PE
2SA1048-Y
Q7PF
2SA1048-Y
Q7PG
2SA1048-Y
Q7PH
2SA1048-Y
Q7PI
2SA1048-Y
Q7PJ
2SA1048-Y
Q7PK
2SA1048-Y
Q7PL
2SA1048-Y
Q7PM
2SA1048-Y
Q7PN
2SA1048-Y
Q7PO
2SA1048-Y
Q7PP
2SA1048-Y
Q7PQ
2SA1048-Y
Q7PR
2SA1048-Y
Q7PS
2SA1048-Y
Q7PT
2SA1048-Y
Q7PU
2SA1048-Y
Q7PV
2SA1048-Y
Q7PW
2SA1048-Y
Q7PX
2SA1048-Y
Q7PY
2SA1048-Y
Q7PZ
2SA1048-Y
Q7Q0
2SA1048-Y
Q7Q1
2SA1048-Y
Q7Q2
2SA1048-Y
Q7Q3
2SA1048-Y
Q7Q4
2SA1048-Y
Q7Q5
2SA1048-Y
Q7Q6
2SA1048-Y
Q7Q7
2SA1048-Y
Q7Q8
2SA1048-Y
Q7Q9
2SA1048-Y
Q7QA
2SA1048-Y
Q7QB
2SA1048-Y
Q7QC
2SA1048-Y
Q7QD
2SA1048-Y
Q7QE
2SA1048-Y
Q7QF
2SA1048-Y
Q7QG
2SA1048-Y
Q7QH
2SA1048-Y
Q7QI
2SA1048-Y
Q7QJ
2SA1048-Y
Q7QK
2SA1048-Y
Q7QL
2SA1048-Y
Q7QM
2SA1048-Y
Q7QN
2SA1048-Y
Q7QO
2SA1048-Y
Q7QP
2SA1048-Y
Q7QQ
2SA1048-Y
Q7QR
2SA1048-Y
Q7QS
2SA1048-Y
Q7QT
2SA1048-Y
Q7QU
2SA1048-Y
Q7QV
2SA1048-Y
Q7QW
2SA1048-Y
Q7QX
2SA1048-Y
Q7QY
2SA1048-Y
Q7QZ
2SA1048-Y
Q7R0
2SA1048-Y
Q7R1
2SA1048-Y
Q7R2
2SA1048-Y
Q7R3
2SA1048-Y
Q7R4
2SA1048-Y
Q7R5
2SA1048-Y
Q7R6
2SA1048-Y
Q7R7
2SA1048-Y
Q7R8
2SA1048-Y
Q7R9
2SA1048-Y
Q7RA
2SA1048-Y
Q7RB
2SA1048-Y
Q7RC
2SA1048-Y
Q7RD
2SA1048-Y
Q7RE
2SA1048-Y
Q7RF
2SA1048-Y
Q7RG
2SA1048-Y
Q7RH
2SA1048-Y
Q7RI
2SA1048-Y
Q7RJ
2SA1048-Y
Q7RK
2SA1048-Y
Q7RL
2SA1048-Y
Q7RM
2SA1048-Y
Q7RN
2SA1048-Y
Q7RO
2SA1048-Y
Q7RP
2SA1048-Y
Q7RQ
2SA1048-Y
Q7RR
2SA1048-Y
Q7RS
2SA1048-Y
Q7RT
2SA1048-Y
Q7RU
2SA1048-Y
Q7RV
2SA1048-Y
Q7RW
2SA1048-Y
Q7RX
2SA1048-Y
Q7RY
2SA1048-Y
Q7RZ
2SA1048-Y
Q7S0
2SA1048-Y
Q7S1
2SA1048-Y
Q7S2
2SA1048-Y
Q7S3
2SA1048-Y
Q7S4
2SA1048-Y
Q7S5
2SA1048-Y
Q7S6
2SA1048-Y
Q7S7
2SA1048-Y
Q7S8
2SA1048-Y
Q7S9
2SA1048-Y
Q7SA
2SA1048-Y
Q7SB
2SA1048-Y
Q7SC
2SA1048-Y
Q7SD
2SA1048-Y
Q7SE
2SA1048-Y
Q7SF
2SA1048-Y
Q7SG
2SA1048-Y
Q7SH
2SA1048-Y
Q7SI
2SA1048-Y
Q7SJ
2SA1048-Y
Q7SK
2SA1048-Y
Q7SL
2SA1048-Y
Q7SM
2SA1048-Y
Q7SN
2SA1048-Y
Q7SO
2SA1048-Y
Q7SP
2SA1048-Y
Q7SQ
2SA1048-Y
Q7SR
2SA1048-Y
Q7SS
2SA1048-Y
Q7ST
2SA1048-Y
Q7SU
2SA1048-Y
Q7SV
2SA1048-Y
Q7SW
2SA1048-Y
Q7SX
2SA1048-Y
Q7SY
2SA1048-Y
Q7SZ
2SA1048-Y
Q7T0
2SA1048-Y
Q7T1
2SA1048-Y
Q7T2
2SA1048-Y
Q7T3
2SA1048-Y
Q7T4
2SA1048-Y
Q7T5
2SA1048-Y
Q7T6
2SA1048-Y
Q7T7
2SA1048-Y
Q7T8
2SA1048-Y
Q7T9
2SA1048-Y
Q7TA
2SA1048-Y
Q7TB
2SA1048-Y
Q7TC
2SA1048-Y
Q7TD
2SA1048-Y
Q7TE
2SA1048-Y
Q7TF
2SA1048-Y
Q7TG
2SA1048-Y
Q7TH
2SA1048-Y
Q7TI
2SA1048-Y
Q7TJ
2SA1048-Y
Q7TK
2SA1048-Y
Q7TL
2SA1048-Y
Q7TM
2SA1048-Y
Q7TN
2SA1048-Y
Q7TO
2SA1048-Y
Q7TP
2SA1048-Y
Q7TQ
2SA1048-Y
Q7TR
2SA1048-Y
Q7TS
2SA1048-Y
Q7TT
2SA1048-Y
Q7TU
2SA1048-Y
Q7TV
2SA1048-Y
Q7TW
2SA1048-Y
Q7TX
2SA1048-Y
Q7TY
2SA1048-Y
Q7TZ
2SA1048-Y
Q7U0
2SA1048-Y
Q7U1
2SA1048-Y
Q7U2
2SA1048-Y
Q7U3
2SA1048-Y
Q7U4
2SA1048-Y
Q7U5
2SA1048-Y
Q7U6
2SA1048-Y
Q7U7
2SA1048-Y
Q7U8
2SA1048-Y
Q7U9
2SA1048-Y
Q7UA
2SA1048-Y
Q7UB
2SA1048-Y
Q7UC
2SA1048-Y
Q7UD
2SA1048-Y
Q7UE
2SA1048-Y
Q7UF
2SA1048-Y
Q7UG
2SA1048-Y
Q7UH
2SA1048-Y
Q7UI
2SA1048-Y
Q7UJ
2SA1048-Y
Q7UK
2SA1048-Y
Q7UL
2SA1048-Y
Q7UM
2SA1048-Y
Q7UN
2SA1048-Y
Q7UO
2SA1048-Y
Q7UP
2SA1048-Y
Q7UQ
2SA1048-Y
Q7UR
2SA1048-Y
Q7US
2SA1048-Y
Q7UT
2SA1048-Y
Q7UU
2SA1048-Y
Q7UV
2SA1048-Y
Q7UW
2SA1048-Y
Q7UX
2SA1048-Y
Q7UY
2SA1048-Y
Q7UZ
2SA1048-Y
Q7V0
2SA1048-Y
Q7V1
2SA1048-Y
Q7V2
2SA1048-Y
Q7V3
2SA1048-Y
Q7V4
2SA1048-Y
Q7V5
2SA1048-Y
Q7V6
2SA1048-Y
Q7V7
2SA1048-Y
Q7V8
2SA1048-Y
Q7V9
2SA1048-Y
Q7VA
2SA1048-Y
Q7VB
2SA1048-Y
Q7VC
2SA1048-Y
Q7VD
2SA1048-Y
Q7VE
2SA1048-Y
Q7VF
2SA1048-Y
Q7VG
2SA1048-Y
Q7VH
2SA1048-Y
Q7VI
2SA1048-Y
Q7VJ
2SA1048-Y
Q7VK
2SA1048-Y
Q7VL
2SA1048-Y
Q7VM
2SA1048-Y
Q7VN
2SA1048-Y
Q7VO
2SA1048-Y
Q7VP
2SA1048-Y
Q7VQ
2SA1048-Y
Q7VR
2SA1048-Y
Q7VS
2SA1048-Y
Q7VT
2SA1048-Y
Q7VU
2SA1048-Y
Q7VV
2SA1048-Y
Q7VW
2SA1048-Y
Q7VX
2SA1048-Y
Q7VY
2SA1048-Y
Q7VZ
2SA1048-Y
Q7W0
2SA1048-Y
Q7W1
2SA1048-Y
Q7W2
2SA1048-Y
Q7W3
2SA1048-Y
Q7W4
2SA1048-Y
Q7W5
2SA1048-Y
Q7W6
2SA1048-Y
Q7W7
2SA1048-Y
Q7W8
2SA1048-Y
Q7W9
2SA1048-Y
Q7WA
2SA1048-Y
Q7WB
2SA1048-Y
Q7WC
2SA1048-Y
Q7WD
2SA1048-Y
Q7WE
2SA1048-Y
Q7WF
2SA1048-Y
Q7WG
2SA1048-Y
Q7WH
2SA1048-Y
Q7WI
2SA1048-Y
Q7WJ
2SA1048-Y
Q7WK
2SA1048-Y
Q7WL
2SA1048-Y
Q7WM
2SA1048-Y
Q7WN
2SA1048-Y
Q7WO
2SA1048-Y
Q7WP
2SA1048-Y
Q7WQ
2SA1048-Y
Q7WR
2SA1048-Y
Q7WS
2SA1048-Y
Q7WT
2SA1048-Y
Q7WU
2SA1048-Y
Q7WV
2SA1048-Y
Q7WW
2SA1048-Y
Q7WX
2SA1048-Y
Q7WY
2SA1048-Y
Q7WZ
2SA1048-Y
Q7X0
2SA1048-Y
Q7X1
2SA1048-Y
Q7X2
2SA1048-Y
Q7X3
2SA1048-Y
Q7X4
2SA1048-Y
Q7X5
2SA1048-Y
Q7X6
2SA1048-Y
Q7X7
2SA1048-Y
Q7X8
2SA1048-Y
Q7X9
2SA1048-Y
Q7XA
2SA1048-Y
Q7XB
2SA1048-Y
Q7XC
2SA1048-Y
Q7XD
2SA1048-Y
Q7XE
2SA1048-Y
Q7XF
2SA1048-Y
Q7XG
2SA1048-Y
Q7XH
2SA1048-Y
Q7XI
2SA1048-Y
Q7XJ
2SA1048-Y
Q7XK
2SA1048-Y
Q7XL
2SA1048-Y
Q7XM
2SA1048-Y
Q7XN
2SA1048-Y
Q7XO
2SA1048-Y
Q7XP
2SA1048-Y
Q7XQ
2SA1048-Y
Q7XR
2SA1048-Y
Q7XS
2SA1048-Y
Q7XT
2SA1048-Y
Q7XU
2SA1048-Y
Q7XV
2SA1048-Y
Q7XW
2SA1048-Y
Q7XX
2SA1048-Y
Q7XY
2SA1048-Y
Q7XZ
2SA1048-Y
Q7Y0
2SA1048-Y
Q7Y1
2SA1048-Y
Q7Y2
2SA1048-Y
Q7Y3
2SA1048-Y
Q7Y4
2SA1048-Y
Q7Y5
2SA1048-Y
Q7Y6
2SA1048-Y
Q7Y7
2SA1048-Y
Q7Y8
2SA1048-Y
Q7Y9
2SA1048-Y
Q7YA
2SA1048-Y
Q7YB
2SA1048-Y
Q7YC
2SA1048-Y
Q7YD
2SA1048-Y
Q7YE
2SA1048-Y
Q7YF
2SA1048-Y
Q7YG
2SA1048-Y
Q7YH
2SA1048-Y
Q7YI
2SA1048-Y
Q7YJ
2SA1048-Y
Q7YK
2SA1048-Y
Q7YL
2SA1048-Y
Q7YM
2SA1048-Y
Q7YN
2SA1048-Y
Q7YO
2SA1048-Y
Q7YP
2SA1048-Y
Q7YQ
2SA1048-Y
Q7YR
2SA1048-Y
Q7YS
2SA1048-Y
Q7YT
2SA1048-Y
Q7YU
2SA1048-Y
Q7YV
2SA1048-Y
Q7YW
2SA1048-Y
Q7YX
2SA1048-Y
Q7YY
2SA1048-Y
Q7YZ
2SA1048-Y
Q7Z0
2SA1048-Y
Q7Z1
2SA1048-Y
Q7Z2
2SA1048-Y
Q7Z3
2SA1048-Y
Q7Z4
2SA1048-Y
Q7Z5
2SA1048-Y
Q7Z6
2SA1048-Y
Q7Z7
2SA1048-Y
Q7Z8
2SA1048-Y
Q7Z9
2SA1048-Y
Q7ZA
2SA1048-Y
Q7ZB
2SA1048-Y
Q7ZC
2SA1048-Y
Q7ZD
2SA1048-Y
Q7ZE
2SA1048-Y
Q7ZF
2SA1048-Y
Q7ZG
2SA1048-Y
Q7ZH
2SA1048-Y
Q7ZI
2SA1048-Y
Q7ZJ
2SA1048-Y
Q7ZK
2SA1048-Y
Q7ZL
2SA1048-Y
Q7ZM
2SA1048-Y
Q7ZN
2SA1048-Y
Q7ZO
2SA1048-Y
Q7ZP
2SA1048-Y
Q7ZQ
2SA1048-Y
Q7ZR
2SA1048-Y
Q7ZS
2SA1048-Y
Q7ZT
2SA1048-Y
Q7ZU
2SA1048-Y
Q7ZV
2SA1048-Y
Q7ZW
2SA1048-Y
Q7ZX
2SA1048-Y
Q7ZY
2SA1048-Y
Q7ZZ
2SA1048-Y
Q800
2SA1048-Y
Q801
2SA1048-Y
Q802
2SA1048-Y
Q803
2SA1048-Y
Q804
2SA1048-Y
Q805
2SA1048-Y
Q806
2SA1048-Y
Q807
2SA1048-Y
Q808
2SA1048-Y
Q809
2SA1048-Y
Q80A
2SA1048-Y
Q80B
2SA1048-Y
Q80C
2SA1048-Y
Q80D
2SA1048-Y
Q80E
2SA1048-Y
Q80F
2SA1048-Y
Q80G
2SA1048-Y
Q80H
2SA1048-Y
Q80I
2SA1048-Y
Q80J
2SA1048-Y
Q80K
2SA1048-Y
Q80L
2SA1048-Y
Q80M
2SA1048-Y
Q80N
2SA1048-Y
Q80O
2SA1048-Y
Q80P
2SA1048-Y
Q80Q
2SA1048-Y
Q80R
2SA1048-Y
Q80S
2SA1048-Y
Q80T
2SA1048-Y
Q80U
2SA1048-Y
Q80V
2SA1048-Y
Q80W
2SA1048-Y
Q80X
2SA1048-Y
Q80Y
2SA1048-Y
Q80Z
2SA1048-Y
Q810
2SA1048-Y
Q811
2SA1048-Y
Q812
2SA1048-Y
Q813
2SA1048-Y
Q814
2SA1048-Y
Q815
2SA1048-Y
Q816
2SA1048-Y
Q817
2SA1048-Y
Q818
2SA1048-Y
Q819
2SA1048-Y
Q81A
2SA1048-Y
Q81B
2SA1048-Y
Q81C
2SA1048-Y
Q81D
2SA1048-Y
Q81E
2SA1048-Y
Q81F
2SA1048-Y
Q81G
2SA1048-Y
Q81H
2SA1048-Y
Q81I
2SA1048-Y
Q81J
2SA1048-Y
Q81K
2SA1048-Y
Q81L
2SA1048-Y
Q81M
2SA1048-Y
Q81N
2SA1048-Y
Q81O
2SA1048-Y
Q81P
2SA1048-Y
Q81Q
2SA1048-Y
Q81R
2SA1048-Y
Q81S
2SA1048-Y
Q81T
2SA1048-Y
Q81U
2SA1048-Y
Q81V
2SA1048-Y
Q81W
2SA1048-Y
Q81X
2SA1048-Y
Q81Y
2SA1048-Y
Q81Z
2SA1048-Y
Q820
2SA1048-Y
Q821
2SA1048-Y
Q822
2SA1048-Y
Q823
2SA1048-Y
Q824
2SA1048-Y
Q825
2SA1048-Y
Q826
2SA1048-Y
Q827
2SA1048-Y
Q828
2SA1048-Y
Q829
2SA1048-Y
Q82A
2SA1048-Y
Q82B
2SA1048-Y
Q82C
2SA1048-Y
Q82D
2SA1048-Y
Q82E
2SA1048-Y
Q82F
2SA1048-Y
Q82G
2SA1048-Y
Q82H
2SA1048-Y
Q82I
2SA1048-Y
Q82J
2SA1048-Y
Q82K
2SA1048-Y
Q82L
2SA1048-Y
Q82M
2SA1048-Y
Q82N
2SA1048-Y
Q82O
2SA1048-Y
Q82P
2SA1048-Y
Q82Q
2SA1048-Y
Q82R
2SA1048-Y
Q82S
2SA1048-Y
Q82T
2SA1048-Y
Q82U
2SA1048-Y
Q82V
2SA1048-Y
Q82W
2SA1048-Y
Q82X
2SA1048-Y
Q82Y
2SA1048-Y
Q82Z
2SA1048-

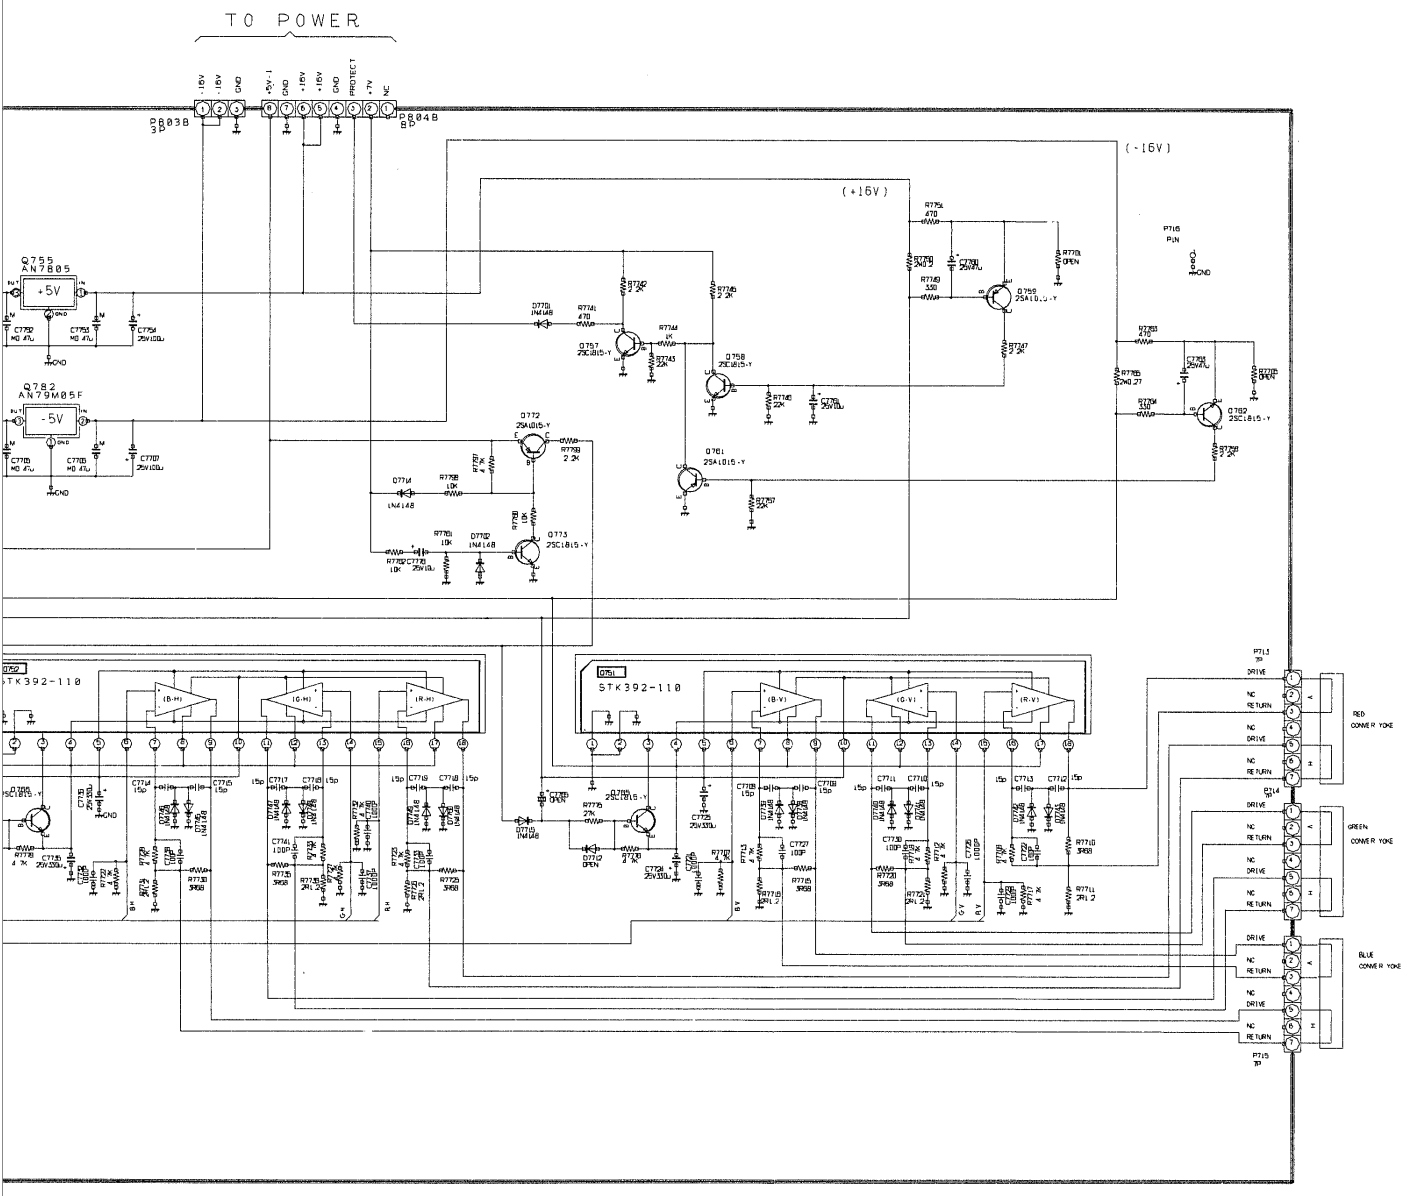

CONVER/D-CONVER
50D9U SERIES